

 
Display Assy 4.3

English Owner's manual

Front side / Vorderseite / Avant /
Parte delantera / 表面

	English	English	English
日本語	Deutsch	Deutsch	Deutsch
日本語	Francais	Francais	Francais
日本語	Espanol	Espanol	Espanol

Back side / Rückseite / Arrière /
Parte trasera / 裏面

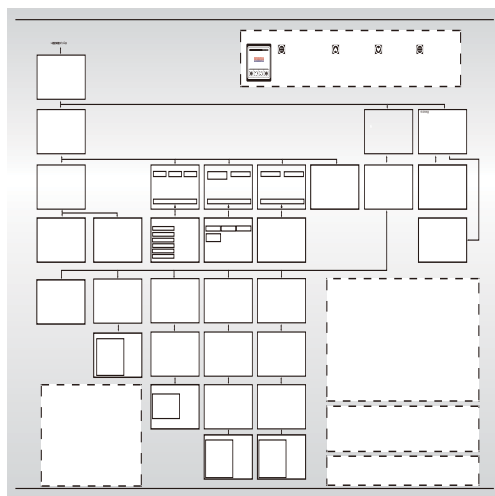

87995-ZV6-7110 © Honda Motor Co., Ltd. 2018
Printed in Indonesia

English 1

Thank you for purchasing Display Assy 4.3, Multi-Function Display for Honda outboard motors. Before using the product, read this Owner's manual thoroughly. For information on how to use an outboard motor, consult the Owner's manual.

This product is specifically produced for Honda outboard motors. Do not use it for outboard motors produced by other manufacturers, or for other purposes.

The contents of this Owner's manual may not match the actual product due to changes made to meet product specifications. To have the product installed, contact the dealer you purchased it from. Also contact your dealer when disposing of the product.

◆ Accessories

Check the accessories before you start using the product.

- Sun cover for display
- Screws and washers (4 each)
- Installation manual

◆ Settings to be configured when the power is turned on for the first time

Specify the number of engines for which information is to be displayed. **[SELECT ENGINE AMOUNT]**

- When the power is turned on, the HONDA MARINE logo appears first, then the display automatically switches to the SELECT ENGINE AMOUNT screen.
- Specify the number of engines for which information is to be displayed.
Use the  button to do so. When multiple outboard motors are mounted, the screen is capable of displaying information about up to four engines.
- After finishing the settings, the display switches to the engine information screen.

When the power is turned on for the second or subsequent time, the HONDA MARINE logo appears first, then the display automatically switches to the engine information screen.

◆ Engine information screen


The engine information screen consists of three screens, which can be switched using the  button. The layout is different depending on the number of engines that have been specified. You can change the contents and layout. (See the reverse side.)

* The contents described here are of the initial settings.

Screen 1

◆ When there is one engine

 Displays information about a single engine.

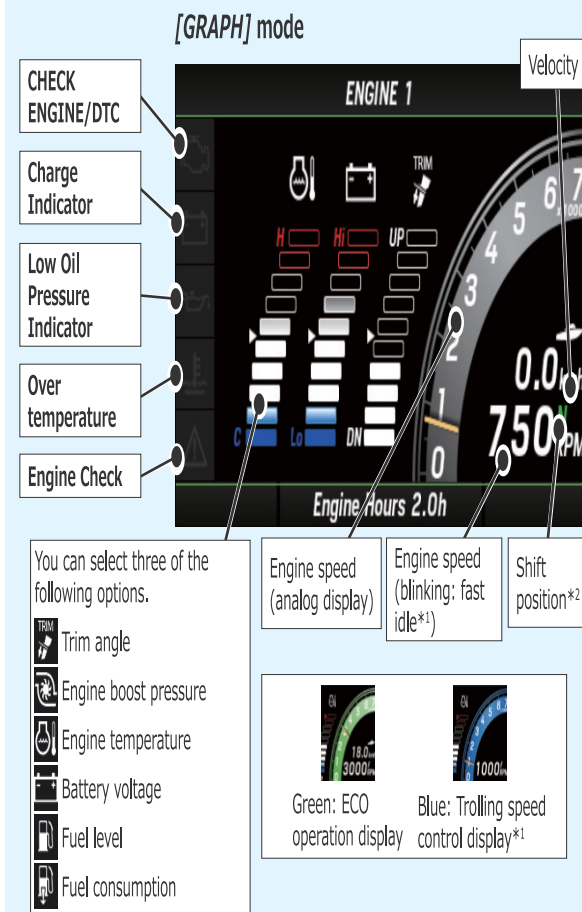


*1: Only DBW models BF175, BF200, BF225, BF250

*2: DBW models BF175, BF200, BF225, BF250 display N/F/R, other models display only N

English 2

◆ When there are two or more engines

 
Displays information about engines simultaneously by dividing the screen into four.

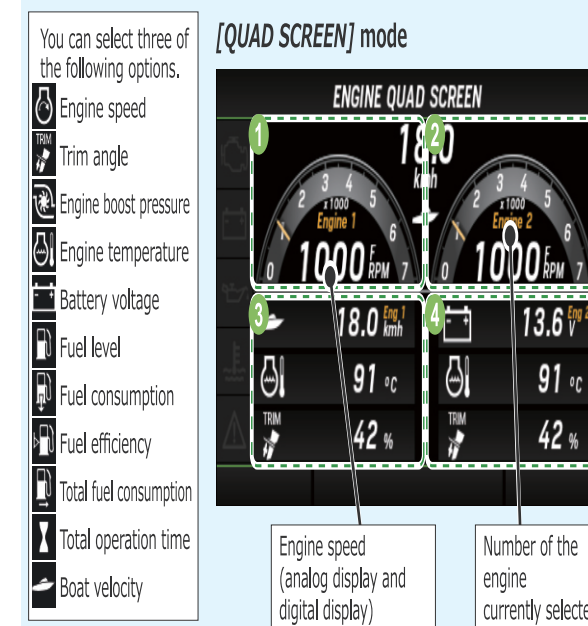

Screen 2

◆ When there are one to four engines

 Displays information about the single engine, or multiple engines simultaneously by dividing the screen into four.

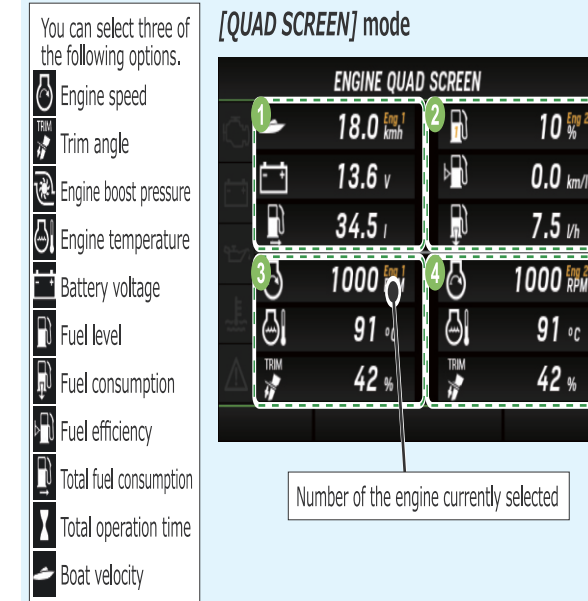

English 3

◆ Charge Indicator

Notifies of errors involving the charge system.

◆ Low Oil Pressure

Notifies of an error involving pressure of the engine oil.

◆ Over temperature

Notifies of engine overheating.

◆ Engine Check

Notifies of the following states:

- Water in Fuel: Water is mixed into the fuel system.
- Maintenance Needed: Time for periodic inspection
- Rev Limit Exceeded: Engine over speed
- Engine Emergency Stop Mode: The emergency stop switch is activated.
- Warning level 1, 2: Major errors are 1, all others are 2.
- Power reduction: Engine speed is restricted.

◆ Adjustment of screen brightness

Press and hold the  buttons simultaneously in the engine information screen to change the status to brightness adjustment. Eight brightness levels are available for adjustment using the  buttons.

◆ Storage and cleaning

Soak a cloth in water, wring it tightly, and wipe the exterior and monitor with it. Do not use alcohol, gasoline, detergent, or other similar solvents. Doing so may damage the exterior parts. If the product is not used, cover it with the attached sun cover. Do not expose the product to rain or direct sunlight.

◆ Specifications

	BF40 BF50	BF60	BF75 BF80 BF90 BF100	BF115 BF135 BF150	BF175 BF200 BF225 BF250 (me- chanical model)	BF175 BF200 BF225 BF250 (DBW model)
Engine information display	○	○	○	○	○	○
Boat velocity display Fuel level display	○	○	○	○	○	○
Error occurrence notification	○	○	○	○	○	○
DTC (Diagnostic Trouble Code) display	-	-	○*	-	○*	○

* These specifications may not be supported depending on the production period or type of DTC.

Power supply	Rated voltage: 12 V Operating voltage: 10 to 16 V
Communication system	NMEA2000
Monitor	TFT 4.3 inches
Size	Height: About 125 mm (about 133 mm with the sun cover) Width: About 125 mm (about 133 mm with the sun cover) Thickness: About 54.2 mm Diameter of mounting part: About φ 110 mm Depth of mounting part: About 38.5 mm
Weight of main unit	About 460 g (about 550 g with the sun cover)
Number of outboard motors supported	Up to 4


Display Assy 4.3

Bahasa Panduan Pemilik

Tampilan Depan

	English	English	English
日本語	Deutsch	Deutsch	Deutsch
日本語	Francais	Francais	Francais
日本語	Espanol	Espanol	Espanol

 Tampilan Belakang

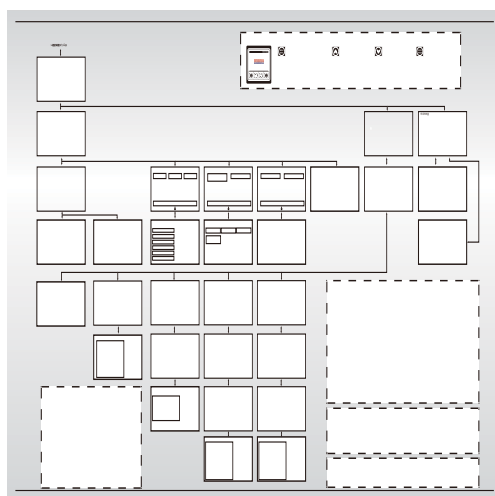

87995-ZV6-7110 © Honda Motor Co., Ltd. 2018
Ditetakl di Indonesia

Bahasa

Terima kasih telah membeli Display Assy 4.3, Display Multi Fungsi untuk motor tempel Honda. Sebelum menggunakan produk ini, bacalah terlebih dahulu Panduan Pemilik dengan segera. Untuk informasi bagaimana penggunaan motor tempel, merujuk ke panduan pemilik. Produk ini khusus digunakan untuk motor tempel Honda. Jangan digunakan untuk motor tempel yang diproduksi selain motor tempel Honda atau untuk penggunaan lainnya. Isi panduan pemilik ini mungkin tidak sesuai dengan aktual produk dikarenakan pembuatan disesuaikan spesifikasi produk. Untuk memasangnya, hubungi dealer dimana anda membelinya. Juga kontak dealer anda ketika akan membuang produk.

◆ Aksesoris

- Pelindung matahari untuk display
- Sekrup dan ring (4pcs)
- Panduan instalasi

◆ Konfigurasi pengaturan ketika daya dihidupkan pertama kalinya

Tentukan informasi jumlah mesin yang akan ditampilkan. **[SELECT ENGINE AMOUNT]**

- Ketika daya dihidupkan, logo HONDA MARINE muncul pertama kali, maka tampilan secara otomatis beralih ke layar SELECT ENGINE AMOUNT.
- Tentukan informasi jumlah mesin yang akan ditampilkan. Gunakan tombol   . Ketika beberapa motor tempel terpasang, layar dapat menampilkan informasi sampai empat mesin.
- Setelah pengaturan selesai, layar beralih ke tampilan informasi mesin. Ketika daya telah hidup untuk beberapa detik atau waktu berikutnya, Logo HONDA MARINE tampil pertama kali, kemudian layar secara otomatis berpindah ke tampilan informasi mesin.

◆ Tampilan informasi mesin


Layar informasi mesin terdiri dari tiga layar, yang dapat diaktifkan menggunakan tombol   . Tata letak berbeda tergantung pada jumlah mesin yang telah ditentukan. Anda dapat mengubah konten dan tata letak. (Lihat sisi sebaliknya.)

* Konten yang dijelaskan di sini adalah pengaturan awal.

Tampilan 1

◆ Ketika terdapat satu mesin

 Informasi layar mengenai satu mesin.

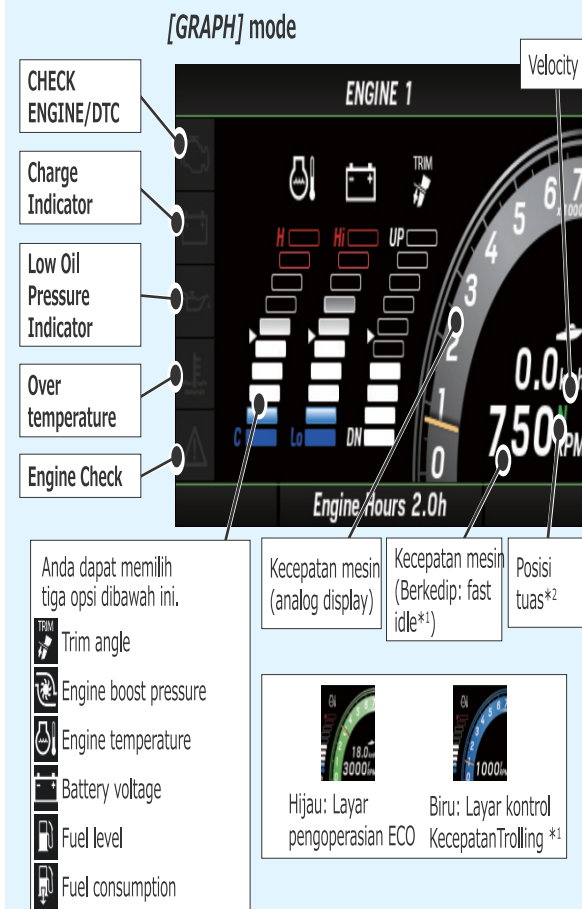


*1: Hanya DBW model BF175, BF200, BF225, BF250

*2: DBW model BF175, BF200, BF225, BF250 layar N/F/R, model lainnya tampil hanya N

Bahasa 2

◆ Ketika terdapat dua atau lebih dari dua mesin

 
Menampilkan informasi tentang mesin secara bersamaan dengan membagi layar menjadi empat.

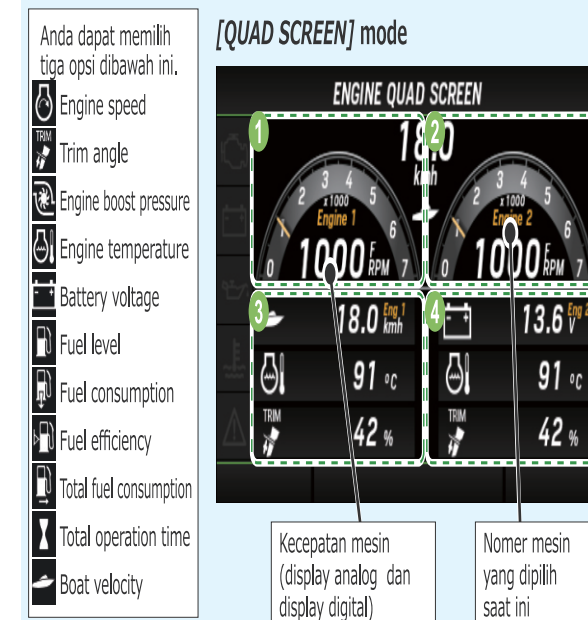

Tampilan 2

◆ Ketika terdapat satu sampai empat mesin

 Menampilkan informasi satu mesin atau banyak mesin secara bersamaan dengan membagi layar jadi empat tampilan.

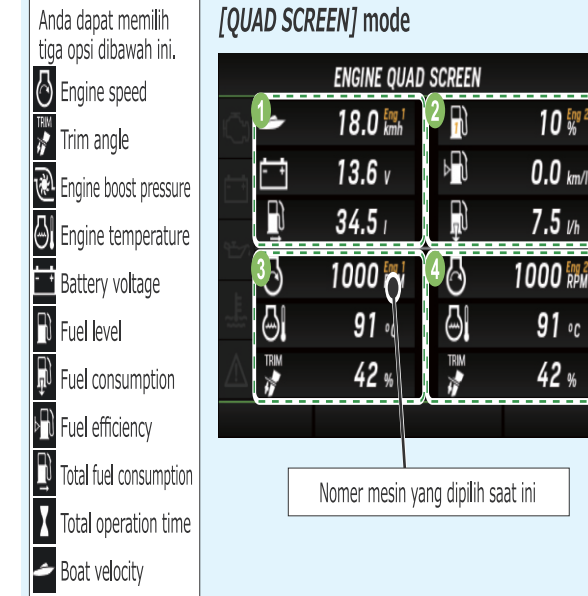

Bahasa 3

◆ Indikator Charge/Indikator Pengisian

Notifikasi adanya kesalahan yang melibatkan sistem pengisian.

◆ Low Oil Pressure/Tekanan Oli Rendah

Notifikasi adanya kesalahan yang melibatkan tekanan oli mesin.

◆ Over temperature/Kelebihan panas

Notifikasi adanya kelebihan panas mesin.

◆ Engine Check/Periksa mesin

Notifikasi pernyataan berikut:

- Water in Fuel: Air bercampur di sistem bahan bakar.
- Maintenance Needed: Waktu untuk pemeriksaan berkala
- Rev Limit Exceeded: Mesin kelebihan kecepatan
- Engine Emergency Stop Mode: Saklar emergency stop telah aktif
- Warning level 1, 2: Error mayor adalah 1, lainnya adalah 2.
- Power reduction: Kecepatan mesin dibatasi

◆ Pengaturan kecerahan layar

Tekan dan tahan tombol   bersamaan di layar informasi mesin untuk merubah status pengaturan kecerahan. Delapan level kecerahan tersedia untuk pengaturan menggunakan tombol   .

◆ Penyimpanan dan pembersihan

Rendam kain dalam air, peras dengan keras, dan bersihkan bagian luar dan monitor dengan kain tersebut. Jangan gunakan alkohol, bensin, deterjen, atau pelarut serupa lainnya. Melakukannya dapat merusak bagian eksterior. Jika produk tidak digunakan, tutup dengan penutup matahari yang terpasang. Jangan biarkan produk terkena hujan atau sinar matahari langsung.

Menu dan Fungsi

