



HSM1380i – CONTROL PARTS LOCATION AND FUNCTION

MAIN SHIFT LEVER

- Switches drive direction in forward or reverse
- Adjusts driving speed

CHUTER CONTROL SWITCH

- Adjusting snow discharge direction and angle.

THROTTLE CONTROL LEVER

- Adjusts the engine speed and snow discharge distance.

AUGER HOUSING CONTROL SWITCH

- ETD type: Adjusts the auger housing height
- ETDR type: Adjusts the auger housing height and tilt angle

RESET SWITCH (ETDR type only)

- Returns the auger housing to initial height and tilt angle.



DRIVE CLUTCH LEVER

- Squeeze to propel the snow blower, release to stop it.

STEERING LEVER (on left and right)

- Turn by squeezing the lever on the side which you want to turn.

ICS SWITCH

- Press the switch to turn on intelligence control.
- Reduces the drive speed automatically when snow cleaning load is heavy
- Keeps the snow discharge distance at the distance that you've set
- Raises the auger housing automatically when the snow blower is reversing

AUGER CLUTCH SWITCH

- Press to turn the auger and blower, release to stop them.
- Lights up while auger and blower are turning
- While driving, auger and blower keep turning without pressing the switch
- Auger and blower stop when the drive clutch is disengaged

For more details, please refer to the owner's manual.