



HSM1390i – CONTROL PARTS LOCATION AND FUNCTION

MAIN SHIFT LEVER

- Switches drive direction in forward or reverse
- Adjusts driving speed

CHUTTER CONTROL SWITCH

Adjusts snow discharge direction and angle.

MODE SELECTOR SWITCH


- Switches the work mode.
- AUTO mode
 - POWER mode
 - SELF mode

AUGER HOUSING CONTROL SWITCH

Adjusts the auger housing height and tilt angle

RESET SWITCH

Return the auger housing to initial height and tilt angle.

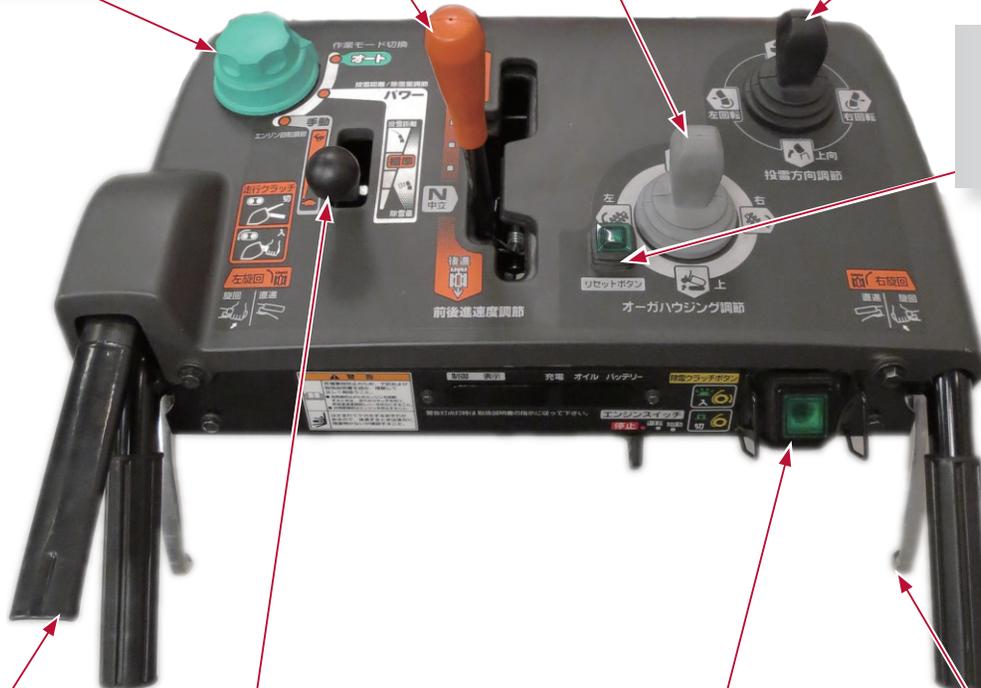

DRIVE CLUTCH LEVER

Squeeze to propel the snow blower, release to stop it.

STEERING LEVER (on left and right)

Turn by squeezing the lever on the side which you want to turn.

THROTTLE CONTROL LEVER

Adjusts the engine speed and snow discharge distance.

AUGER CLUTCH SWITCH

Press to turn the auger and blower, release to stop them.

- Lights up while auger and blower are turning
- While driving, auger and blower keep turning even when switch is released
- Auger and blower stop when the drive clutch is disengaged

For more details, please refer to the owner's manual.