

HSM1390i – WORK MODE

The work mode (automatic control) can be changed between three modes. Select the most suitable mode for your preferences and the snow conditions.

- 【AUTO】** Reduces the travel speed as the cleaning load increases, and keeps the engine speed that you have set. Travel speed will be set to slower than the POWER mode. This mode is suitable for those who have not been accustomed to the operation.
- 【POWER】** Reduces the travel speed as the cleaning load increases, and keeps the engine speed that you have set. Also, the engine speed can be adjusted with the throttle lever. This system is suitable for those who have become accustomed to operation to some extent.
- 【SELF】** No automatic control. All adjustment must be done by the operator.



CONTROLS	AUTO	POWER
Drive speed adjustment with the main shift lever	yes	yes
Reduce the drive speed control automatically Reduces speed as the cleaning load increases to restrain changing the snow discharge distance	yes	yes
Automatic engine speed control Helps restrain the changing of the snow discharge distance	yes	no
Engine speed adjustment with the throttle lever For manual adjustment of the snow discharge distance	no	yes
Raise the auger housing automatically when the snow blower is reversing * When the auger clutch switch is on, the auger housing automatically returns to previous position when the main shift lever is set to forward position.	yes	yes