






Maintenance Schedule

: Check
 : Change
 : Clean
 : Check-adjust
 : Grease up


Regular Service Period	Before each use	First month or 10 Hours	Every 3 months or 25 Hours	Every 6 months or 50 Hours	Every year or 100 Hours	Every 2 years or 300 Hours
Engine oil	 					
Air cleaner				Service more frequently when used in dusty areas		
Spark plug						
Engine coolingfans						
Bolts and nuts		Retighten if necessary			 Tool kit	
Throttle cable		Replace if necessary				
Fuel tank & filter						
Leakage from pump			After starting the engine, check for chemical leakage from the pump			
Chemical tank and filter						
Nozzle						
Pump grease		 Every 2 hrs.				
Pump oil						
Clutchshoe Drum		 Take the power sprayer to a Honda servicing dealer.				
Idle speed						
Valve clearance						
Seal rubber					Replace if necessary	
Combustion chamber				After every 300 hrs.		
Fuel tube				Every 2 years		
Oil tube		Replace if necessary				

* Read and understand the Owner's Manual before operating the power sprayer


Air Cleaner Element

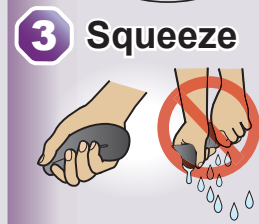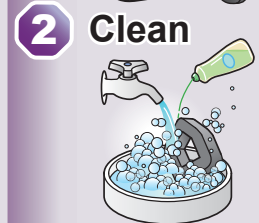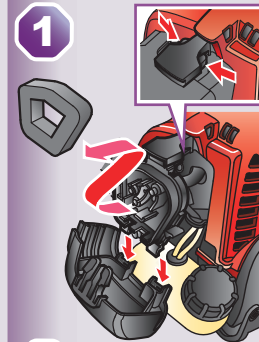


Pump Grease Every 2 Hours (Refill grease)

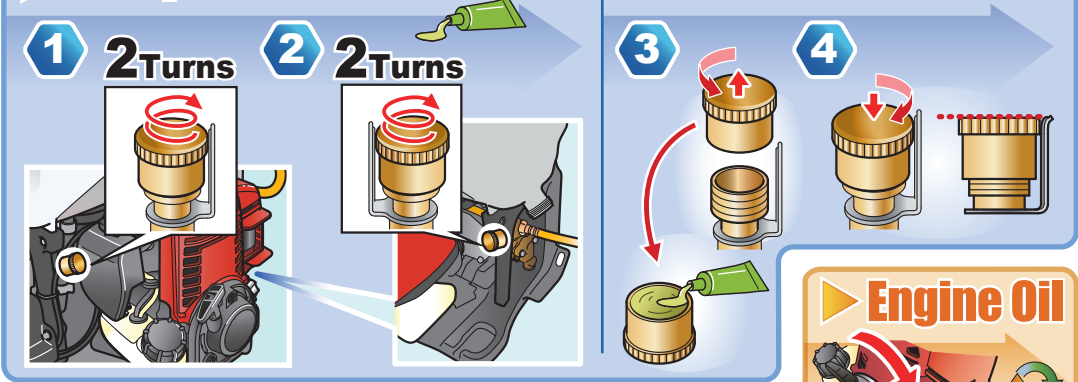

Spark Plug

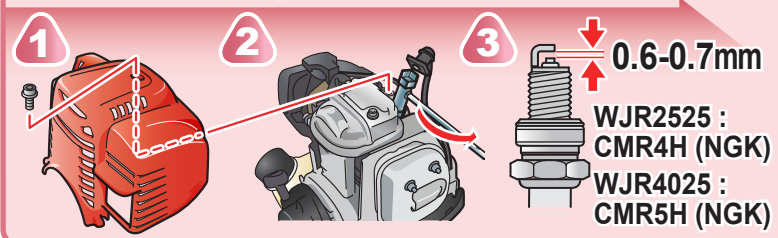

Engine Oil

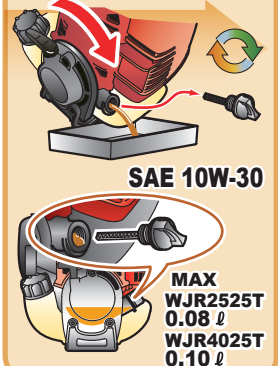

Prolonged storage

