




* Read and understand the Owner's Manual before operating the Outboard motor.

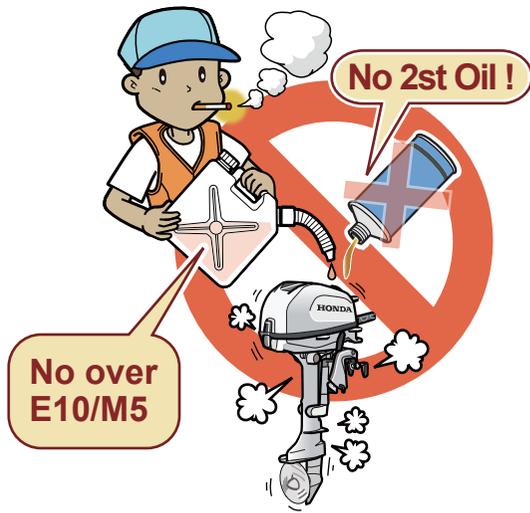

Pre Operation Check

- Engine Oil**

Check

4st Oil SAE 10W-30
MAX 0.55 ℓ
- Anode Metal**

1/3

Replace

COTTER PIN
- Propeller & Cotter Pin**

After Use

- Flushing**

10min.~
- Drain Fuel: Carburetor**

Safety Precaution

- Wear Life jacket!
- Emergency Stop Switch Lanyard.
- Confirmation of left and right.
- Weather forecast is confirmed.

Transporting

Carrying Handle

Storage Position

INCORRECT

How to start

- Vent Knob OPEN**
- Fuel Valve Lever ON/**
- Shift Lever (N)**
- (Priming) First time Out of Gas**
10 times
- Throttle START**
- Choke ON/OFF**
Cold Out of Gas
Hot
- Start**
- Oil Pressure Indicator Light**

STOP
5-3-PUSH-2-1



Maintenance Schedule : Check : Change : Clean : Check-adjust

* Read and understand the Owner's Manual before operating the Outboard motor.

Regular Service Period	Before each use	First month or 20 Hours	Every 6 months or 100 Hours	Every year or 200 Hours
Engine oil				
Gear case oil				
Starter rope				
Spark plug				
Propeller and Cotterpin				
Emergency stop switch				
Anode				
Grease				
Fuel filter				
Fuel line				
Fuel line		Every 2 years Replace if necessary		
Valve clearance				
Idle speed 1550 Carburetor linkage				
Fuel tank Tank filter		Take the outboard motor to a Honda servicing dealer.		
Breather tube Thermostat Water pump				
Bolts and nuts				

Engine Oil

Check


4st Oil
SAE 10W-30
MAX 0.55 l

Gear Oil

SAE 90
GL-4 0.1 l

Grease

Water resistant urea based grease.

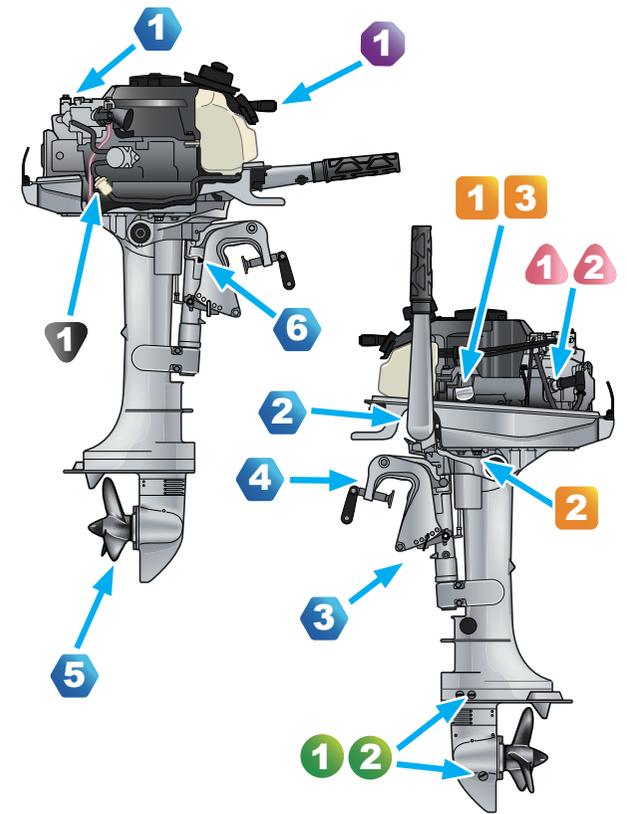

Starter Rope

Spark Plug

0.6-0.7mm

BKR6E-E (NGK)

Fuel Filter

Replace