





\* Read and understand the Owner's Manual before operating the Outboard motor.

## Befor Operation Check

### 1 Engine Oil

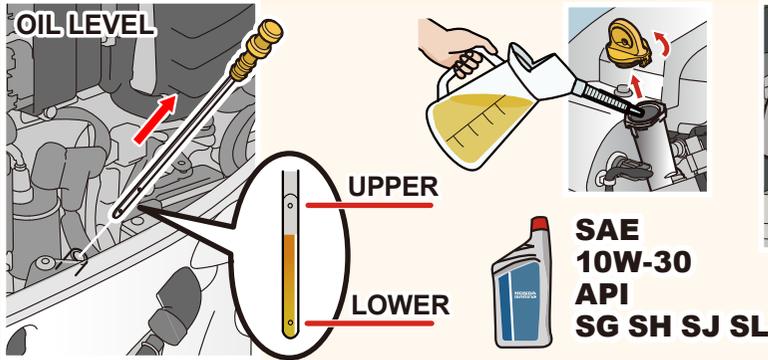

### 2 Water Separator

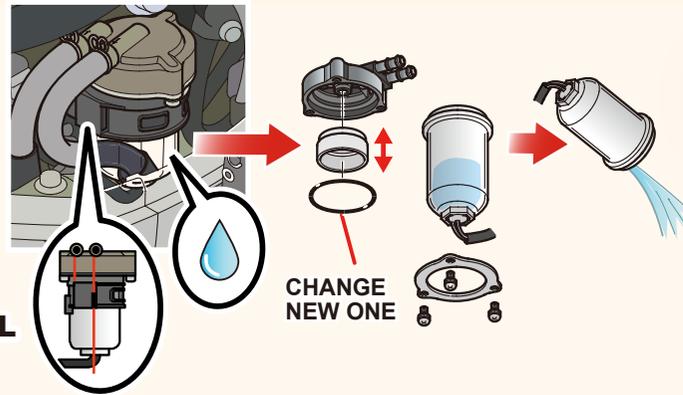


### 3 Anode Metal




### 4 Emergency Stop Switch

Make Sure The Engine Stops By Pulling Crip From The Emergency Stop Switch

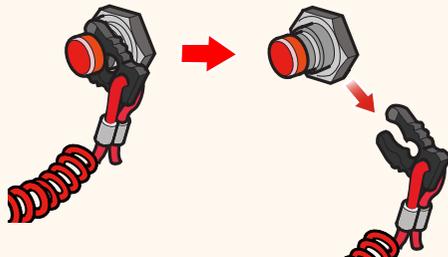


### 5 Propeller & Cotter Pin

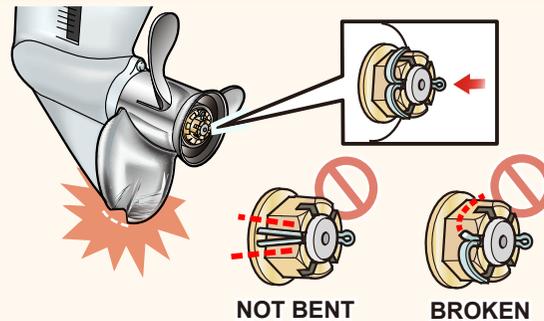

### 6 Battery

12V-55Ah/5HR (65Ah/20HR)  
[CCA582A] or More Capacity

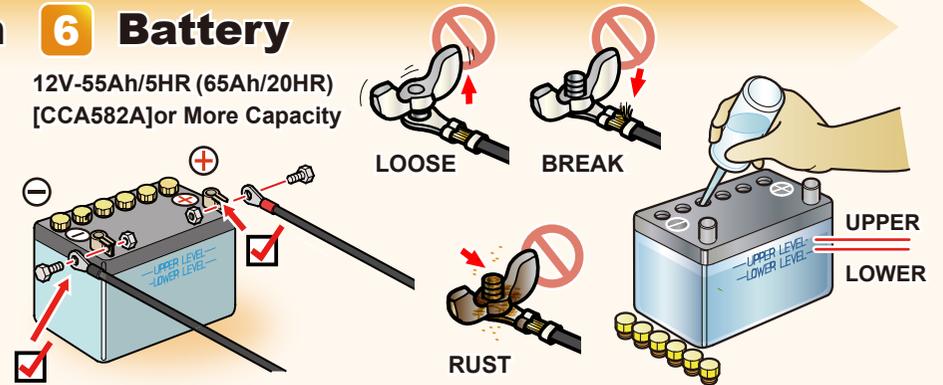

### 7 Fuel Line

Amount Of Gasoline  
Fuel Hose Connection  
Fuel Hose Bending



Research Octane Number  
Of 91 Or Higher

### 8 Condition



Engine Start  
Engine Sound  
Water Pilot Hole



## After Use

For a long time to use.

- 1 Cool down the engine by idling for few minutes.
- 2 **Flush The Engine For At Least 10minutes**
- 3 Drain the fresh water completely. Do not tiltup the engine soon.

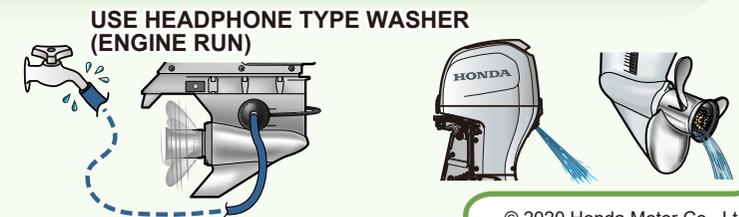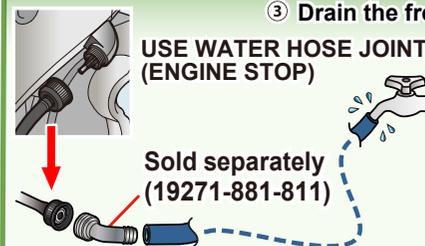



## 1 Engine Oil Change

**SAE 10W-30  
API SG SH SJ SL**

**WITH FILTER REPLACEMENT**  
4.4 l

**W/O FILTER REPLACEMENT**  
4.2 l

## 2 Spark Plug

**0.8–0.9 mm**  
ZFR6K-9E (NGK)

**(OP)**  
**1.0–1.3 mm**  
IZFR6K-11E (NGK)

## 3 Fuel Filter (Lo)

**CHECK THE FILTER FOR WATER OR SEDIMENT**

## 4 Propeller & Cotter Pin

**1**

**NOT BENT**      **BROKEN**

## 5 Grease

**Water resistant urea based grease.**

Before Operation  
Regular Service

### Maintenance Schedule

👁️: Check   🔄: Change   🧽: Clean   ⚙️: Check-adjust

Regular Service Period	Before each use	First month or 20 Hours	Every 6 months or 100 Hours	Every year or 200 Hours	Every 2 year or 400 Hours
1 1 Engine oil	👁️	🔄	🔄	👁️	🔄
2 Spark plug			🧽	⚙️ (OP)	⚙️ (OP)
2 Water separator	👁️				
3 Fuel filter (Lo)			👁️		🔄
3 Anode (Outer)	👁️			👁️	
4 Emergency stop switch	👁️				
5 4 Propeller Cotter pin	👁️				
6 Battery	👁️				
5 Grease		🧽	🧽		
7 Fuel line	👁️				

### Inspection Items By The Dealer

Fuel line				Every 2 years Replace if necessary	🔄
Spark plug				⚙️ (OP)	
Valve clearance				⚙️	
Idle speed Throttle linkage	🔧	🔧			
Engine oil filter	Take the outboard motor to a Honda servicing dealer.				🔄
Breather tube Thermostat Water pump	👨🔧 👩🔧 HONDA MARINE			👁️	
Bolts and nuts	🔧	🔧			
Gear case oil	🔄	🔄			
Fuel filter (Hi)					🔄
Power Trim/Tilt		👁️			
Shift cable		🔧			
Anode (Inner)					👁️



To use safely, read the owner's manual before operating the outboard motor.

