



HSS1370i – CONTROL PARTS LOCATION AND FUNCTION

MAIN SHIFT LEVER

- Switches drive direction in forward or reverse
- Adjusts driving speed

CHUTER CONTROL SWITCH


Adjusting snow discharge direction and angle.

THROTTLE CONTROL LEVER

Adjusts the engine speed and snow discharge distance.

AUGER HOUSING CONTROL SWITCH

Adjusts the auger housing height

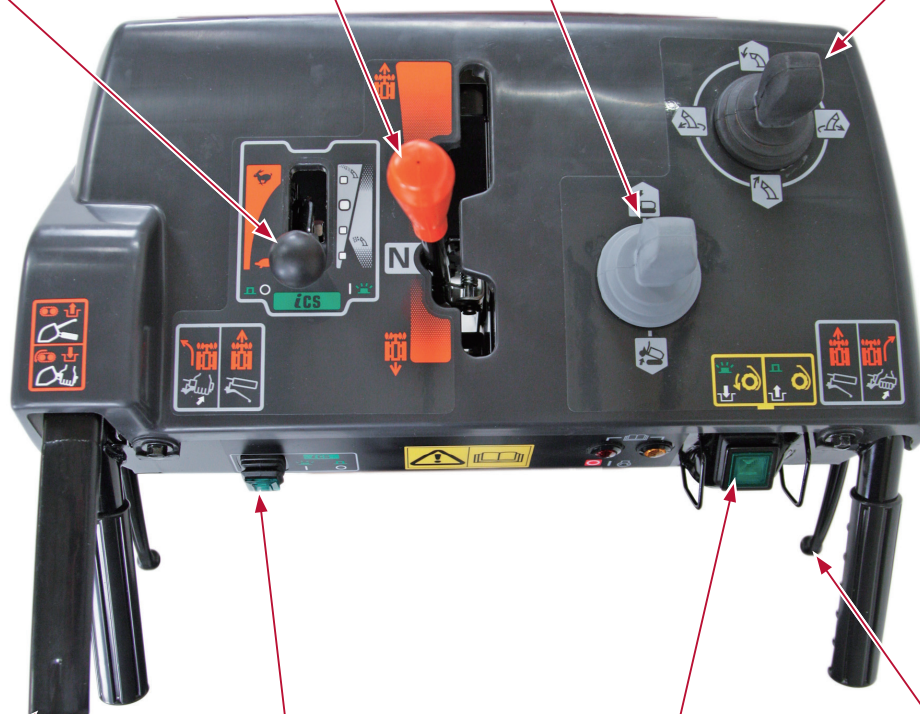

DRIVE CLUTCH LEVER

Squeeze to propel the snow blower, release to stop it.

STEERING LEVER

(on left and right)

Turn by squeezing the lever on the side which you want to turn.

ICS SWITCH

Press the switch to turn on intelligence control.

- Reduces the drive speed automatically when snow cleaning load is heavy
- Keeps the snow discharge distance at the distance that you've set
- Raises the auger housing automatically when the snow blower is reversing

AUGER CLUTCH SWITCH

Press to turn the auger and blower, release to stop them.

- Lights up while auger and blower are turning
- While driving, auger and blower keep turning without pressing the switch
- Auger and blower stop when the drive clutch is disengaged