

Routine Maintenance Schedule

Daily Maintenance	
Activity	Description
Check engine oil	Ensure proper oil level before operation
Inspect flexible shaft	Check for cuts, cracks, or bends
Clean vibrator head	Remove concrete residue after use
Tighten bolts & couplings	Ensure all connections are secure
Check engine operation	Smooth starting and running

Weekly Maintenance (40–50 Hours)	
Activity	Description
Clean air filter	Remove dust and debris
Inspect control cables	Ensure smooth throttle movement
Check shaft alignment	Confirm proper fitting and rotation
Lubricate flexible shaft	Reduce internal wear if required

Monthly Maintenance (100 Hours)	
Activity	Description
Change engine oil	Use recommended oil grade
Inspect spark plug	Clean and adjust gap
Check fuel system	Inspect for leakage or blockage
Inspect vibrator head	Look for wear or damage

Quarterly Maintenance (250 Hours)	
Activity	Description
Replace air filter	If heavily clogged or damaged
Check mounting bolts	Tighten all structural fasteners
Inspect internal shaft	Check for wear and tear
Check vibration performance	Ensure proper output