


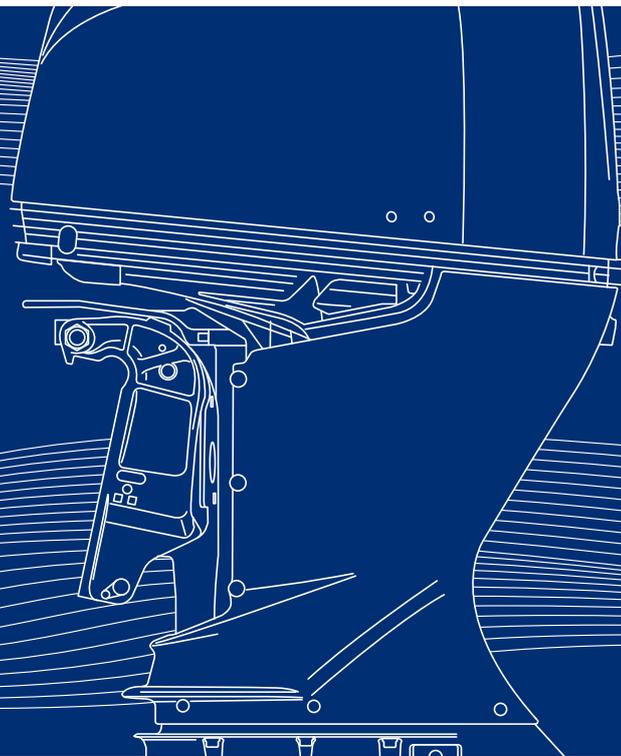

OWNER'S MANUAL  
BF175D • BF200D •  
BF225D • BF250D

Original instructions

© 2022 Honda Motor Co., Ltd.



Thank you for purchasing a Honda Outboard Motor.

This manual covers operation and maintenance of the Honda BF175D/BF200D/BF225D/BF250D Outboard Motor.

All information in this publication is based on the latest product information available at the time of approval for printing.

Honda Motor Co., Ltd. reserves the right to make changes at any time without notice and without incurring any obligation.

No part of this publication may be reproduced without written permission.

This manual should be considered a permanent part of the Outboard Motor and should remain with it if it is resold.

Throughout this manual, you will see safety messages preceded by the following words and symbols. Here's what they mean:

### **DANGER**

Indicates serious injury or death **WILL** result if instructions are not followed.

### **WARNING**

Indicates a strong possibility that serious personal injury or death may result if instructions are not followed.

### **CAUTION**

Indicates a possibility that personal injury or equipment damage could result if instructions are not followed.

### **NOTICE**

**Indicates that equipment or property damage could result if instructions are not followed.**

**NOTE:** Gives helpful information.

If a problem should arise, or if you have any questions about the Outboard Motor, consult an authorized Honda Outboard Motor dealer.

### **WARNING**


Honda Outboard Motors are designed to give safe and dependable service if operated according to instructions. Read and understand the Owner's Manual before operating the Outboard Motor. Failure to do so could result in personal injury or equipment damage.

Honda Motor Co., Ltd. 2022, All Rights Reserved



## How To Determine Which Direction The Propeller Shaft Rotates

The direction the propeller shaft rotates can be determined based on whether or not the shaft has a groove.  
With groove: Counterrotating  
Without groove: Standard rotating

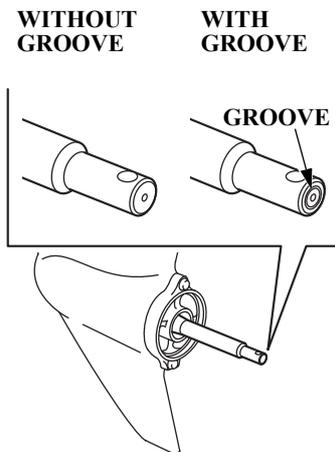

## Remote Control Types


The remote control type is classified into the following three categories according to the control box position.

Flush-mount type  
(DBW type): D1 type  
Top-mount type  
(DBW type): D2 type  
Side-mount type: R1 type  
Flush-mount type  
(Mechanical wire type): R2 type  
Top-mount type  
(Mechanical wire type): R3 type

Check the type of your outboard motor and read this Owner's Manual thoroughly before operation. Texts with no type indication are the information and/or procedures common to all types.

---

## Serial Number Locations

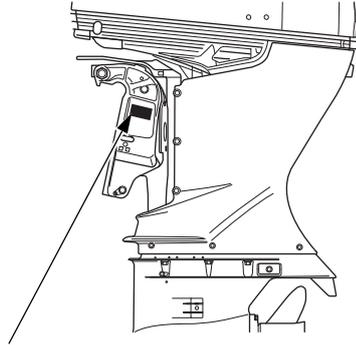

### FRAME SERIAL NUMBER


Record the frame and engine serial numbers for your reference. Refer to the serial numbers when ordering parts, and when making technical or warranty inquiries.

The frame serial number is stamped on a plate attached on the left side of the stern bracket.

Frame serial number:

---

### ENGINE SERIAL NUMBER

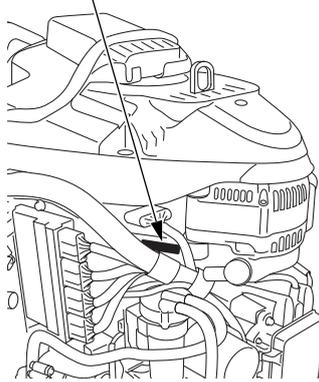

The engine serial number is stamped on the upper right side of the engine.

Engine serial number:

---

# CONTENTS

1. SAFETY .....	7	Anode .....	42
SAFETY INFORMATION .....	7	Cooling Water Check Hole .....	43
2. SAFETY LABEL LOCATIONS .....	9	Cooling Water Intake Port .....	43
3. COMPONENT IDENTIFICATION .....	11	Engine Cover Latches .....	43
4. CONTROLS AND FEATURES .....	20	Tachometer (optional equipment) .....	44
Remote Control Lever (D1 type) .....	20	NMEA Interface Coupler .....	44
Remote Control Lever (D2 type) .....	21	Operating Hour Notification System .....	44
Remote Control Lever (R1 type) .....	22	5. INSTALLATION .....	47
Remote Control Lever (R2 type) .....	23	Transom Height .....	47
Remote Control Lever (R3 type) .....	24	Location .....	48
Neutral Release Lever .....	25	Installation Height .....	48
Engine Switch .....	25	Outboard Motor Installation .....	49
Power Switch (Normal Key type) .....	26	Outboard Motor Angle Inspection (Cruising) .....	50
Power Switch (Honda Smart Key type) .....	26	Battery Connections .....	51
Honda Smart Key .....	26	Remote Control Installation (optional equipment) .....	53
START/STOP SWITCH .....	27	<Remote Control Box Location> .....	56
FUNCTION SWITCHES (D1 type) .....	28	<Remote Control Cable Length> .....	56
FUNCTION SWITCHES (D2 type) .....	29	Propeller Selection .....	57
Fast Idle Lever (R1 type)/Fast Idle Button (R2, R3 types) .....	31	Fuel Line Connection .....	57
PGM-FI Indicator/Buzzer .....	32	6. PRE-OPERATION CHECKS .....	58
ACG Indicator/Buzzer .....	33	Engine Cover Removal/Installation .....	58
Oil Pressure Indicator/Buzzer .....	33	Engine Oil .....	59
Overheat Indicator/Buzzer .....	34	Fuel .....	61
Water Separator Buzzer .....	35	GASOLINE CONTAINING ALCOHOL .....	62
Power Trim/Tilt Switch .....	35	Propeller and Cotter Pin Inspection .....	63
PTT SWITCH PANEL .....	37	Remote Control Lever Friction .....	64
Trim Meter (optional equipment) .....	38	Fuel Filter with Water Separator .....	65
Power Tilt Switch (outboard motor pan) .....	38	Battery .....	66
Manual Relief Valve .....	39	Other Checks .....	67
Emergency Stop Switch .....	40	7. STARTING THE ENGINE .....	68
Emergency Stop Switch Lanyard/ Clip .....	40	Fuel Priming .....	68
Spare Emergency Stop Switch Clip (optional equipment) .....	41	Starting the Engine .....	68
Tilt Lock Lever .....	42	(D1, D2 types) .....	68
Trim Tab .....	42	(R1 type) .....	73

# CONTENTS

(R2, R3 types) .....	76	Transporting .....	112
Station Select Mode .....	80	Trailering .....	113
8. OPERATION .....	81	11. CLEANING AND FLUSHING .....	114
Break-in Procedure .....	81	12. MAINTENANCE .....	115
Gear Shifting (D1 type) .....	82	Tool Kit and Spare Parts	
Gear Shifting (D2 type) .....	83	(Tool Kit does not come with Counter Rotation Types) .....	116
Gear Shifting (R1 type) .....	84	MAINTENANCE SCHEDULE .....	117
Gear Shifting (R2 type) .....	85	Engine Oil .....	119
Gear Shifting (R3 type) .....	86	Spark Plugs .....	121
Cruising .....	87	<Optional Parts: Iridium Spark Plug> .....	124
Trolling Mode .....	90	Lubrication .....	125
One-Lever Mode .....	91	Fuel Filter with Water Separator .....	126
Trimming the Outboard Motor .....	91	EMISSION CONTROL SYSTEM .....	129
Trim Meter (optional equipment) .....	95	Battery .....	130
Tilting the Outboard Motor .....	96	Fuse .....	132
Moorage .....	98	ACG Fuse .....	134
Power Tilt Switch .....	99	Power Harness .....	134
Manual Relief Valve .....	99	Propeller .....	134
Trim Tab Adjustment .....	100	Inspect After Operating .....	136
Engine Protection System .....	101	Submerged Outboard Motor .....	136
<Engine Oil Pressure, Overheat, Water Separator, PGM-FI and ACG Warning Systems> .....	101	13. STORAGE .....	138
<Over-rev Limiter> .....	106	Fuel .....	138
<Anode> .....	106	Vapor Separator Draining .....	139
<Power Reduction> .....	106	Battery Storage .....	140
Shallow Water Operation .....	107	Outboard Motor Position .....	141
Multiple Outboard Motors .....	107	14. DISPOSAL .....	142
9. STOPPING THE ENGINE .....	108	15. TROUBLESHOOTING .....	143
Emergency Engine Stop .....	108	Emergency Gear Shifting (for DBW type) .....	145
Normal Engine Stop (D1, D2 type) .....	108	16. SPECIFICATIONS .....	146
Normal Engine Stop		17. MAJOR Honda DISTRIBUTOR ADDRESSES .....	154
(D1, D2 without START/STOP Switch type) (R1, R2, R3 type) ...	110	18. "UK DECLARATION OF CONFORMITY" CONTENT OUTLINE ...	157
10. TRANSPORTING .....	112	19. "EC DECLARATION OF CONFORMITY" CONTENT OUTLINE ...	158
Fuel Line Disconnection .....	112	20. INDEX .....	163

## SAFETY INFORMATION

For your safety and the safety of others, pay special attention to these precautions.

### Operator Responsibility



- **Honda outboard motor is designed to give safe and dependable service if operated according to instructions. Read and understand the Owner's Manual before operating the outboard motor. Failure to do so could result in personal injury or equipment damage.**



**Shift to the neutral position and then shift to the reverse position at low engine speed. Do not shift to the reverse position suddenly at high engine speed.**

- Gasoline is harmful or fatal if swallowed. Keep the fuel tank out of reach of children.
- Gasoline is extremely flammable and is explosive under certain conditions. Refuel in a well-ventilated area with the engine stopped.
- Do not smoke or allow flames or sparks where the engine is refueled or where gasoline is stored.
- Do not overfill the fuel tank. After refueling make sure that the fuel filler cap is closed properly and securely.

- Be careful not to spill any fuel while refueling. Spilled fuel or fuel vapor may ignite. If any fuel is spilled make sure that the area is dry before starting the engine.
- Know how to stop the engine quickly in case of emergency. Understand the use of all controls.
- Do not exceed the boat manufacturer's power recommendation, and be sure that the outboard motor is properly mounted.
- Never permit anyone to operate the outboard motor without proper instruction.
- Stop the engine immediately if anyone falls overboard.
- Do not run the engine while the boat is near anyone in the water.
- Attach the emergency stop switch lanyard securely to the operator.
- Before operating the outboard motor, familiarize yourself with all laws and regulations relating to boating and the use of outboard motors.

# SAFETY

---

- Do not attempt to modify the outboard motor.
- Always wear a life-jacket when on board.
- Do not operate the outboard motor without the engine cover. Exposed moving parts can cause injury.
- Do not remove any guards, labels, shields, covers or safety devices; they are installed for your safety.
- Stop the engine immediately if anyone falls overboard.
- Do not run the engine while the boat is near anyone in the water.
- Attach the emergency stop switch lanyard securely to the operator.

## **Burn Hazards**

The engine and exhaust system become very hot during operation and remain hot for a while after stopping. Contact with hot engine components can cause burns and may ignite some materials.

- Avoid touching a hot engine or exhaust system.
- Allow the engine to cool before performing maintenance or transporting.

## **Carbon Monoxide Poisoning Hazard**

Exhaust contains poisonous carbon monoxide, a colorless and odorless gas. Breathing exhaust can cause loss of consciousness and may lead to death.

- If you run the engine in an area that is confined, or even partially enclosed, the air can become contaminated with a dangerous amount of exhaust gas. To keep exhaust gas from building up, provide adequate ventilation.

## 2. SAFETY LABEL LOCATIONS

---

These labels are in the locations shown.



The label warns you of potential hazards that can cause serious injury.

The label is considered permanent part of your outboard motor.

Read the label and safety notes and precautions described in this manual carefully.

If the label comes off or becomes hard to read, contact your outboard motor dealer for a replacement.

**READ OWNER'S MANUAL  
GEAR SHIFTING**

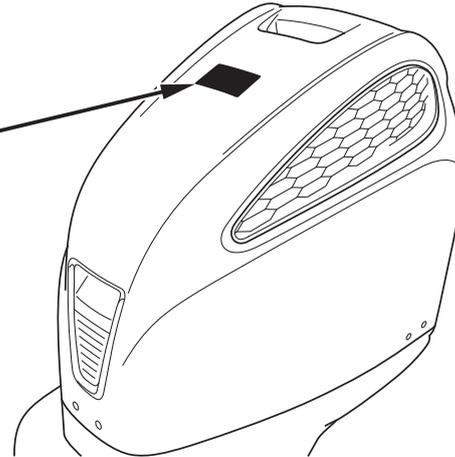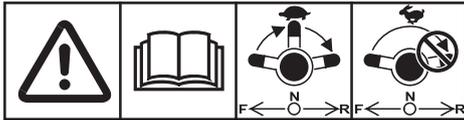

# SAFETY LABEL LOCATIONS


## CE mark/UKCA mark location [European Types]

CE MARK/UKCA MARK  
[Example : BF250D]

The diagram shows a rectangular label with the following fields:

- (13) CE mark
- (13) UKCA mark
- EAC mark
- (1) Model name
- (2) Engine family name
- Rated power (7) kW
- (3) (4) Minor model change code
- (8) Mass kg
- (10) Type name
- (5) Year code
- (6) Month code
- (7) Rated power
- (8) Dry mass (weight) (with propeller)
- (9) Country of manufacture
- (10) Frame serial number
- (11) Manufacture and address
- (12) Name and address of authorized representative
- (12) Name and address of authorized representative
- (13) The identification number of the notified body

- (1) Model name
- (2) Engine family name
- (3) Minor model change code
- (4) Type name
- (5) Year code
- (6) Month code
- (7) Rated power
- (8) Dry mass (weight) (with propeller)
- (9) Country of manufacture
- (10) Frame serial number  
(Type and serial number of Declaration of Conformity)
- (11) Manufacture and address
- (12) Name and address of authorized representative
- (13) The identification number of the notified body

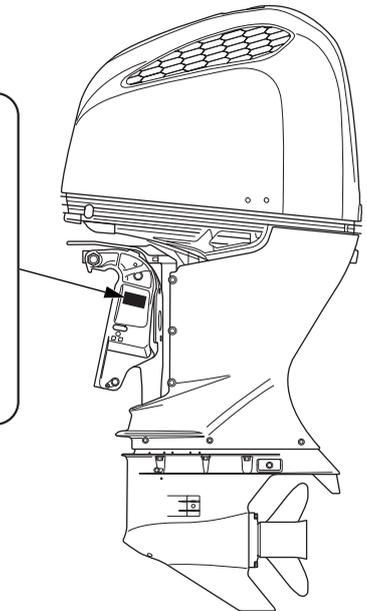


Year code	M	N	P	R	S	T	U	V	W	X
Year of manufacture	2021	2022	2023	2024	2025	2026	2027	2028	2029	2030

Month code	A	B	C	D	E	F	G	H	J	K	L	M
Month of manufacture	1	2	3	4	5	6	7	8	9	10	11	12

Name and address of manufacturer and authorized representative are written in the “Declaration of Conformity” CONTENT OUTLINE in this Owner’s Manual.

### 3. COMPONENT IDENTIFICATION

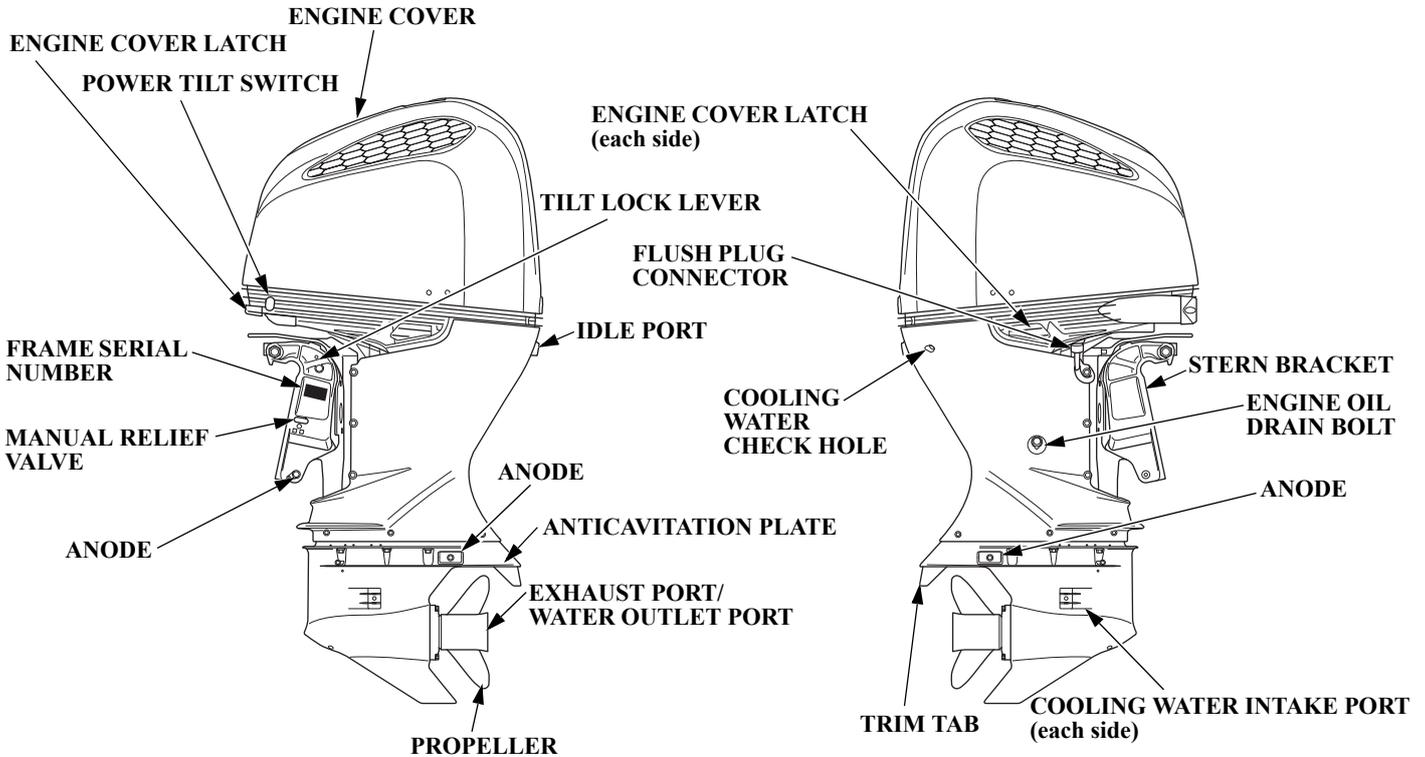


\* Illustrations are based on X type


# COMPONENT IDENTIFICATION

---

**(R1, R2, R3 type)  
THROTTLE ARM/SHIFT  
ARM SHAFT**

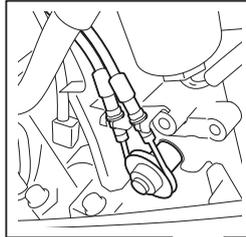


**IGNITION COIL GUARD**

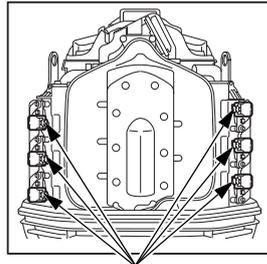


**SPARK PLUGS  
(under coil)**

**OIL LEVEL DIPSTICK**

**FUEL FILTER with  
WATER SEPARATOR**

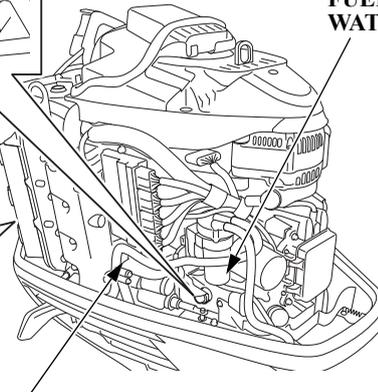

# COMPONENT IDENTIFICATION

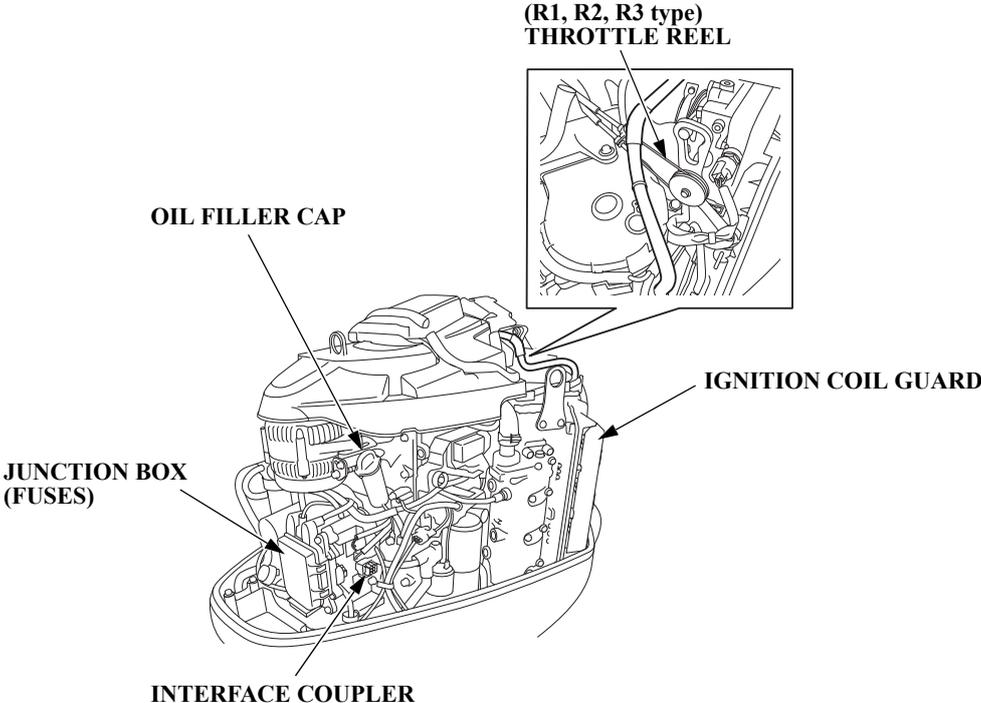


# COMPONENT IDENTIFICATION


---

## DBW REMOTE CONTROL BOX (optional equipment)


### FLUSH-MOUNT TYPE (D1 type)

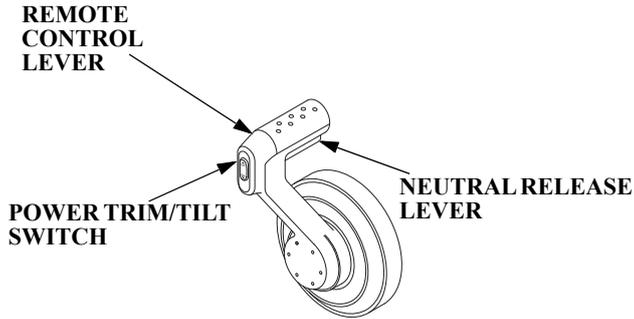

## TOP-MOUNT TYPE (D2 type) (SINGLE OUTBOARD MOTOR TYPE)

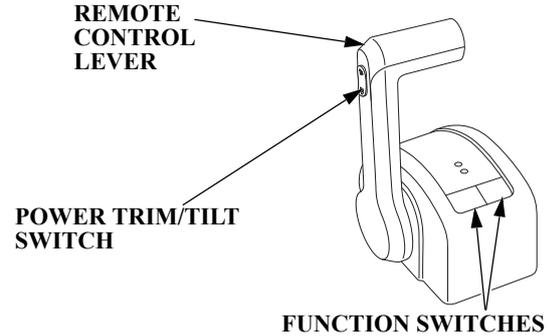


### (DUAL OUTBOARD MOTOR TYPE)

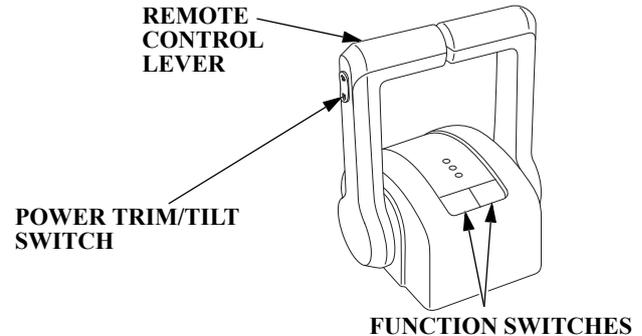


# COMPONENT IDENTIFICATION

## KEY SWITCH PANEL (optional equipment)


(Normal Key with START/STOP switch type)  
(Horizontal type)

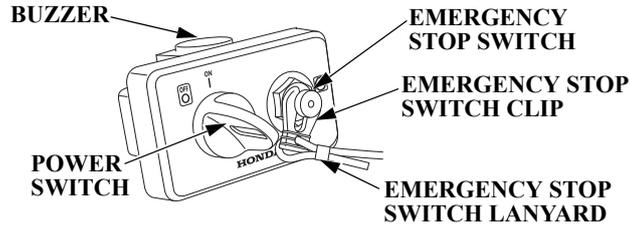

(Normal Key without START/STOP switch type)  
(Horizontal type)

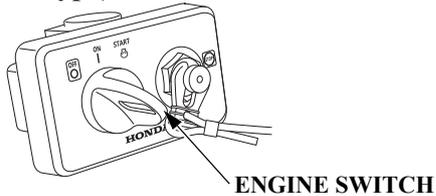


(Honda Smart Key type)  
(Horizontal type)

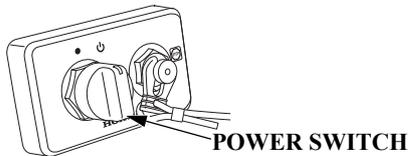


## START/STOP SWITCH PANEL (optional equipment)

START/STOP SWITCH

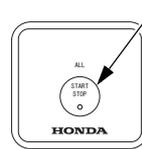


ALL ENGINE START  
FOR MULTIPLE  
OUTBOARD MOTORS

START/STOP SWITCH

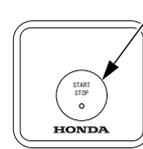


SINGLE TYPE  
OUTBOARD MOTOR

START/STOP SWITCH

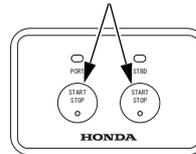

DUAL TYPE  
OUTBOARD MOTOR

START/STOP SWITCH

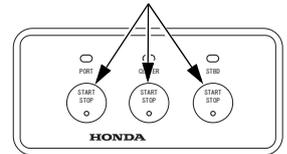


TRIPLE TYPE  
OUTBOARD MOTOR

PORT: Port side engine  
CENTER: Center engine  
STBD: Starboard side engine

# COMPONENT IDENTIFICATION


## PTT SWITCH PANEL (optional equipment)

### POWER TRIM/TILT SWITCH

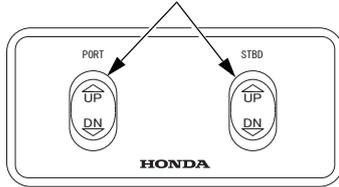

### DUAL TYPE

### POWER TRIM/TILT SWITCH

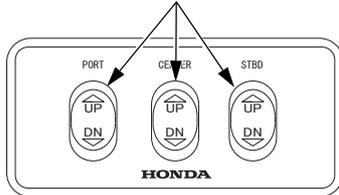


### TRIPLE TYPE


**PORT:** Port side engine  
**CENTER:** Center engine  
**STBD:** Starboard side engine

## FUNCTION SWITCH PANEL (optional equipment) (for FLUSH-MOUNT type)


### FUNCTION SWITCHES

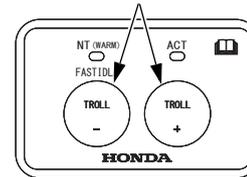

## EMERGENCY STOP SWITCH PANEL (optional equipment)

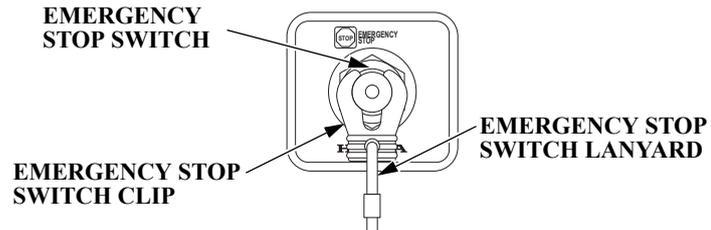


## DISPLAY ASSY (optional equipment)

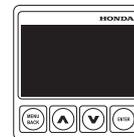


# COMPONENT IDENTIFICATION

## REMOTE CONTROL BOX (optional equipment)

### SIDE-MOUNT TYPE (R1 type)

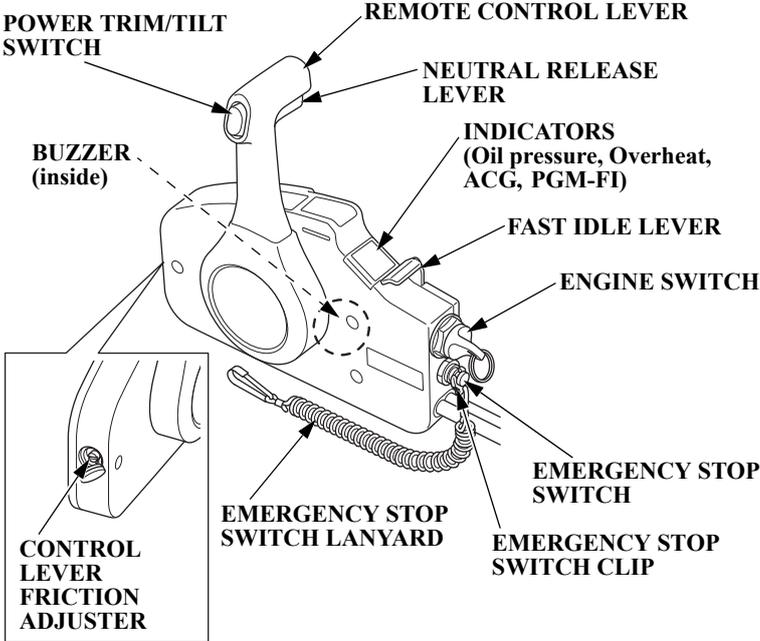

### FLUSH-MOUNT TYPE (R2 type)

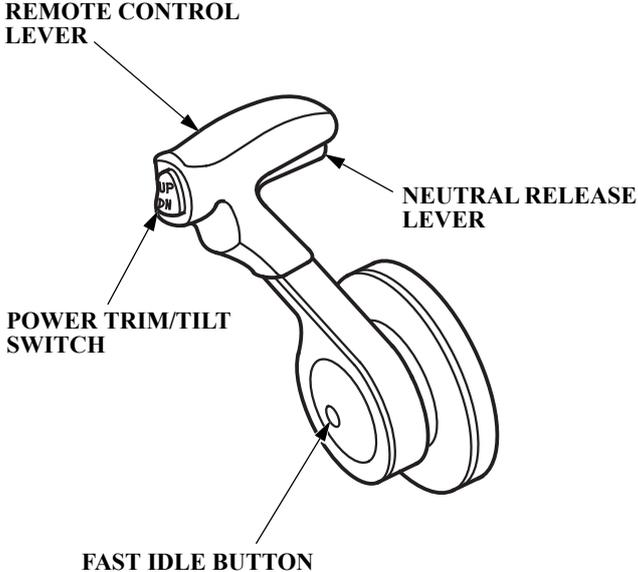

# COMPONENT IDENTIFICATION


---

## TOP-MOUNT TYPE (R3 type) (SINGLE OUTBOARD MOTOR TYPE)

REMOTE CONTROL LEVER

POWER TRIM/  
TILT SWITCH

FAST IDLE BUTTON

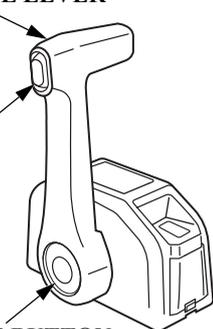

## (DUAL OUTBOARD MOTOR TYPE)


REMOTE CONTROL LEVERS

POWER TRIM/TILT  
SWITCH (Left and  
right operations are  
interlocked)

POWER TRIM/ TILT  
SWITCH (Left side  
operation only)

FAST IDLE BUTTON

POWER TRIM/ TILT  
SWITCH (Right side  
operation only)

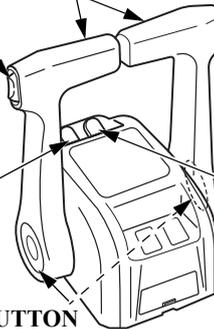

## SWITCH PANEL (optional equipment) (FLUSH-MOUNT, TOP-MOUNT)

BUZZER


ENGINE SWITCH

EMERGENCY STOP SWITCH


EMERGENCY STOP SWITCH CLIP

EMERGENCY STOP SWITCH LANYARD

INDICATORS  
(Oil pressure, Overheat,  
ACG, PGM-FI)

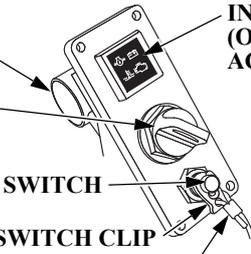


## (for TOP-MOUNT DUAL type)

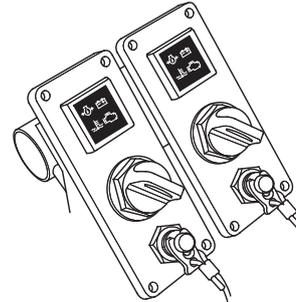


# COMPONENT IDENTIFICATION


**SWITCH PANEL without indicators type  
(optional equipment)  
(FLUSH-MOUNT, TOP-MOUNT SINGLE)**

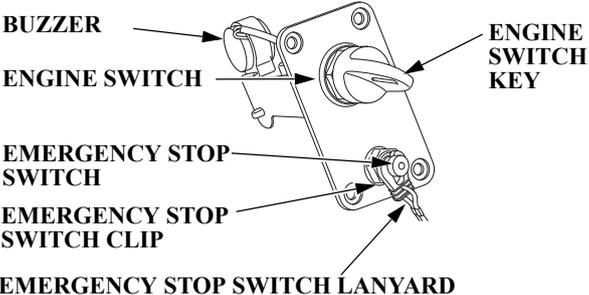

**(for DUAL OUTBOARD MOTORS type)**

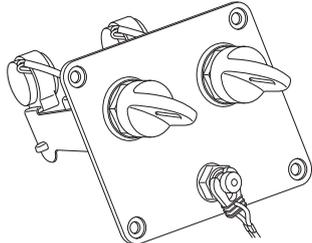


**(for TRIPLE OUTBOARD MOTORS type)**

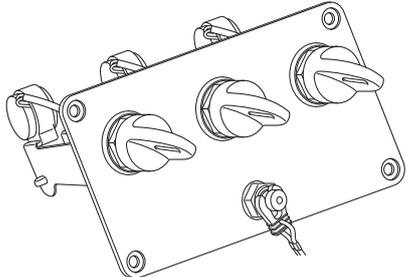


For the switch panel without indicators type, use it along with the NMEA2000-compatible device.

**(Common)**

**TACHOMETER (Optional equipment)**

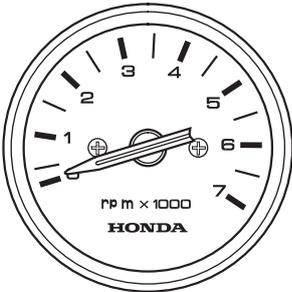



**TRIMMETER (Optional equipment)**

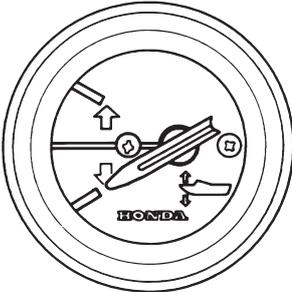

## 4. CONTROLS AND FEATURES

### Remote Control Lever (D1 type)

#### REMOTE CONTROL LEVER

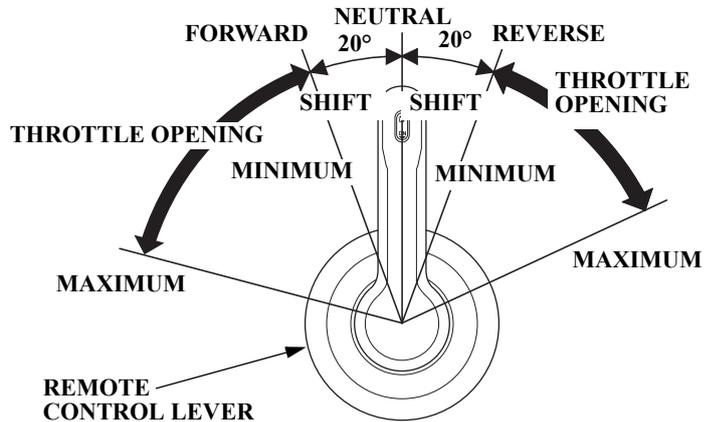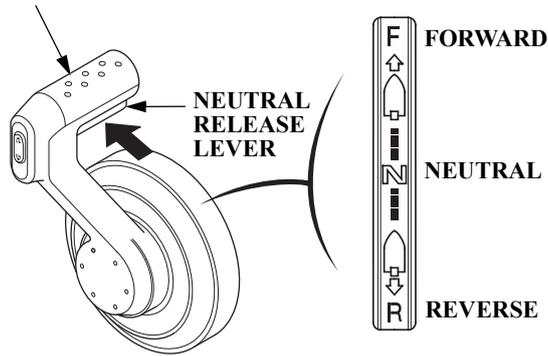

Shifting gear into forward, reverse, or neutral and the engine speed adjustment can be performed with the remote control lever.

It is necessary to pull up the neutral release lever to operate the remote control lever.

#### FORWARD:

Moving the lever to the FORWARD position (i.e. approximately 20° from the NEUTRAL position) engages the gear into forward. Moving the lever further from the FORWARD position will increase the throttle opening and the boat forward speed.

#### NEUTRAL:




Engine power is cut off from the propeller.

#### REVERSE:

Moving the lever to the REVERSE position (i.e. approximately 20° from the NEUTRAL position) engages the gear into reverse. Moving the lever further from the REVERSE position will increase the throttle opening and the boat reverse speed.

# CONTROLS AND FEATURES

## Remote Control Lever (D2 type)

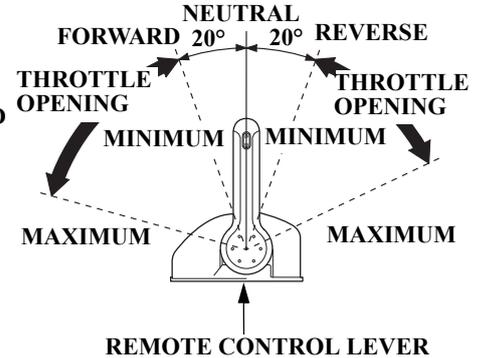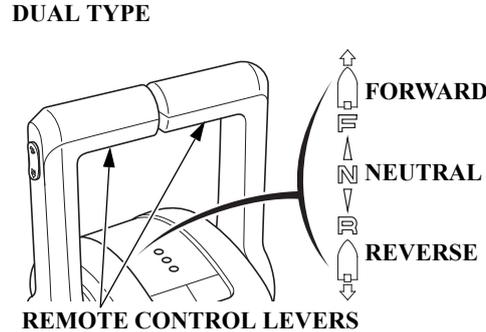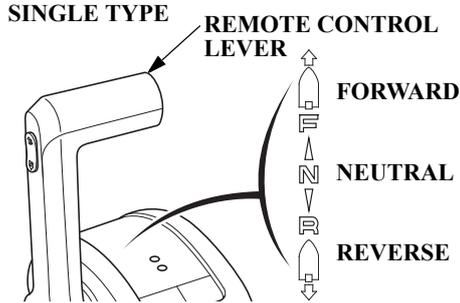

Shifting gear into forward, reverse, or neutral and the engine speed adjustment can be performed with the remote control lever.


**FORWARD:**  
Moving the lever to the FORWARD position (i.e. approximately 20° from the NEUTRAL position) engages the gear into forward. Moving the lever further from the FORWARD position will increase the throttle opening and the boat forward speed.

**NEUTRAL:**  
Engine power is cut off from the propeller.

**REVERSE:**  
Moving the lever to the REVERSE position (i.e. approximately 20° from the NEUTRAL position) engages the gear into reverse. Moving the lever further from the REVERSE position will increase the throttle opening and the boat reverse speed.


# CONTROLS AND FEATURES

## Remote Control Lever (R1 type)

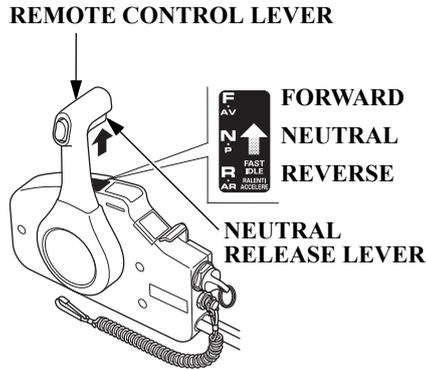

Shifting gear into forward, reverse, or neutral and the engine speed adjustment can be performed with the remote control lever.

It is necessary to pull up the neutral release lever to operate the remote control lever.

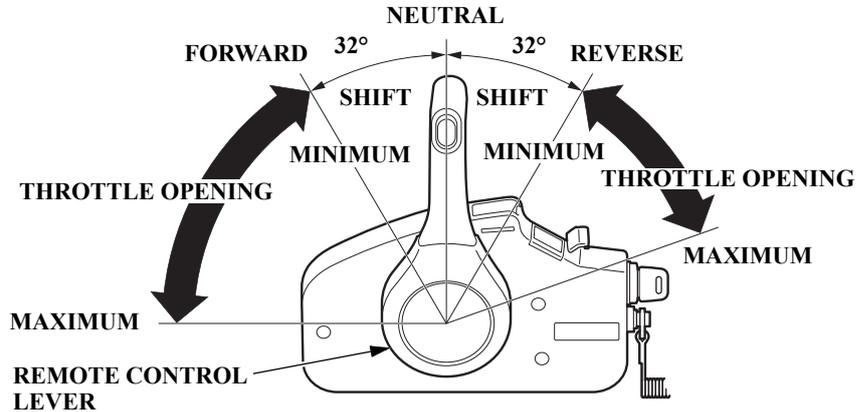

### FORWARD:

Moving the lever to the FORWARD position (i.e. approximately 32° from the NEUTRAL position) engages the gear into forward. Moving the lever further from the FORWARD position will increase the throttle opening and the boat forward speed.

### NEUTRAL:

Engine power is cut off from the propeller.



### REVERSE:

Moving the lever to the REVERSE position (i.e. approximately 32° from the NEUTRAL position) engages the gear into reverse. Moving the lever further from the REVERSE position will increase the throttle opening and the boat reverse speed.

# CONTROLS AND FEATURES

## Remote Control Lever (R2 type)

### REMOTE CONTROL LEVER

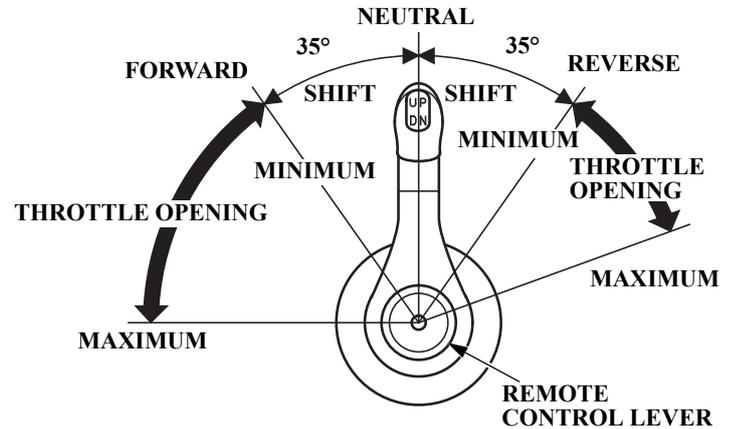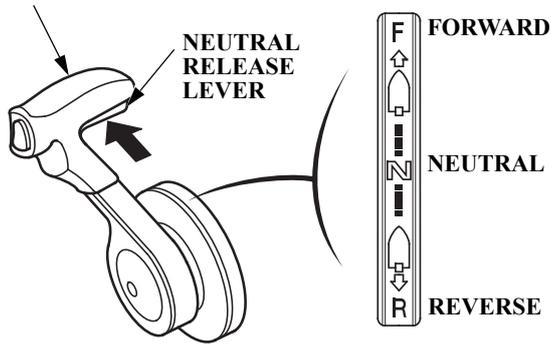

Shifting gear into forward, reverse, or neutral and the engine speed adjustment can be performed with the remote control lever.

It is necessary to pull up the neutral release lever to operate the remote control lever.

### FORWARD:

Moving the lever to the FORWARD position (i.e. approximately 35° from the NEUTRAL position) engages the gear into forward. Moving the lever further from the FORWARD position will increase the throttle opening and the boat forward speed.

### NEUTRAL:

Engine power is cut off from the propeller.


### REVERSE:

Moving the lever to the REVERSE position (i.e. approximately 35° from the NEUTRAL position) engages the gear into reverse. Moving the lever further from the REVERSE position will increase the throttle opening and the boat reverse speed.



# CONTROLS AND FEATURES

## Remote Control Lever (R3 type)

### SINGLE TYPE

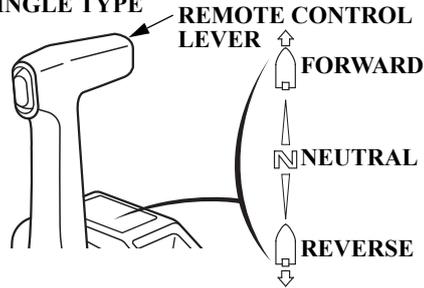

### DUAL TYPE

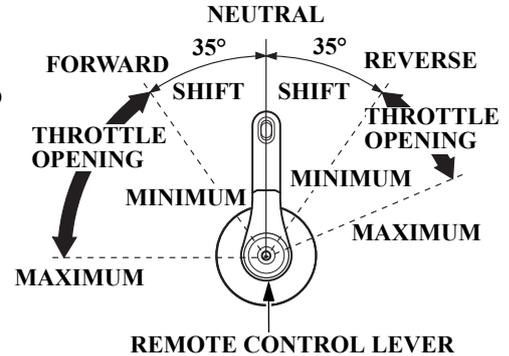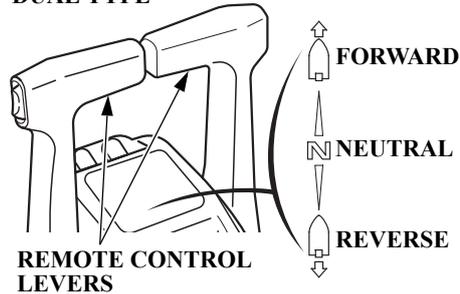

Shifting gear into forward, reverse, or neutral and the engine speed adjustment can be performed with the remote control lever.

### FORWARD:

Moving the lever to the FORWARD position (i.e. approximately 35° from the NEUTRAL position) engages the gear into forward. Moving the lever further from the FORWARD position will increase the throttle opening and the boat forward speed.

### NEUTRAL:

Engine power is cut off from the propeller.

### REVERSE:


Moving the lever to the REVERSE position (i.e. approximately 35° from the NEUTRAL position) engages the gear into reverse. Moving the lever further from the REVERSE position will increase the throttle opening and the boat reverse speed.

# CONTROLS AND FEATURES

## Neutral Release Lever


(D1 type)

REMOTE CONTROL LEVER

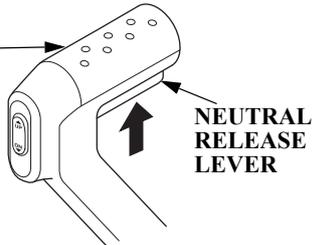


(R1 type)

REMOTE CONTROL LEVER

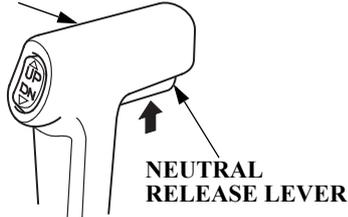


(R2 type)

REMOTE CONTROL LEVER

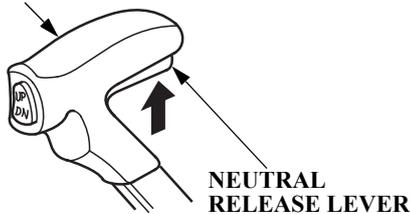


## Engine Switch

(R1 type)

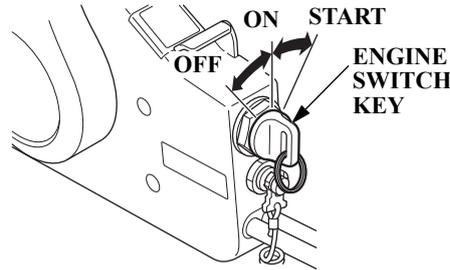

(D1, D2 without START/STOP Switch type)

(R2, R3 type)

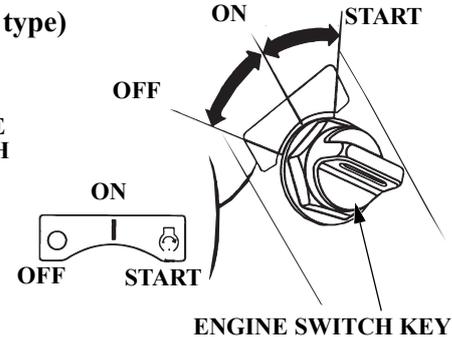

The neutral release lever is set on the remote control lever to prevent an accidental operation of the remote control lever. The remote control lever does not operate unless it is moved while pulling the neutral release lever up.

This remote control is equipped with an automotive type engine switch. On the flush-mount type (D1 type), the top-mount type (D2 type), the engine switch locates on the key switch panel. On the side-mount type (R1 type), the engine switch locates on your side near the remote control box. On the flush-mount type (R2 type) and the top-mount type (R3 type), the engine switch locates at the center of the switch panel.

Key positions:

START: to start the engine.

ON: to run the engine after starting.

OFF: to stop the engine (IGNITION OFF).

### NOTICE


**Do not leave the engine switch ON (key in ON position) when the engine is not running as the battery will discharge.**

### NOTE:

The starter motor will not work unless the remote control lever is in the NEUTRAL position, and the clip is in the emergency stop switch.

# CONTROLS AND FEATURES

## Power Switch (Normal Key type)

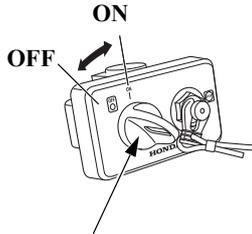

POWER SWITCH

This remote control is equipped with the power switch. This switch locates on the key switch panel.

Key positions (For normal key type):

ON: to run the engine after starting.

OFF: to stop the engine  
(IGNITION OFF).

For Honda Smart Key type, turning the power switch to the right switches the power. The power is turned ON when it is OFF, and the power is turned OFF when it is ON.

## Power Switch (Honda Smart Key type)



POWER SWITCH

### NOTICE


**Do not leave the power switch ON when the engine is not running as the battery will discharge.**

### NOTE:

For Honda Smart Key type, the power will not be turned ON unless the Honda Smart Key is authenticated.

The power will not be turned OFF if the engine is running.


## Honda Smart Key

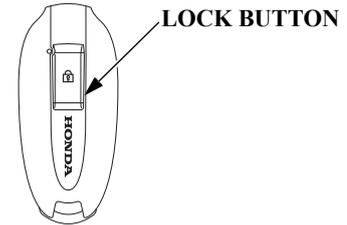

Use the Honda Smart Key to authenticate to your remote control box.

The Honda Smart Key has an immobilizer system. The immobilizer system helps to protect against boat theft.

## START/STOP SWITCH

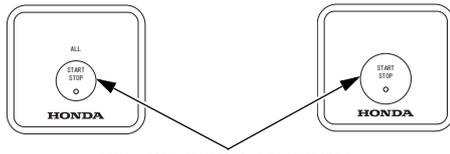


START/STOP SWITCH

**ALL ENGINE START  
FOR MULTIPLE  
OUTBOARD MOTORS**

Pushing the start/stop switch when the power is in ON starts the engine.

**SINGLE TYPE  
OUTBOARD MOTOR**

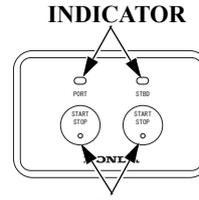


START/STOP SWITCH

**DUAL TYPE  
OUTBOARD MOTORS**

For the multiple outboard motors, it is possible to start all engines at the same time by using the all engine start switch.

Also, it is possible to start each engine individually by using dual or triple type switch.

At this time, the indicator of the corresponding switch comes on.

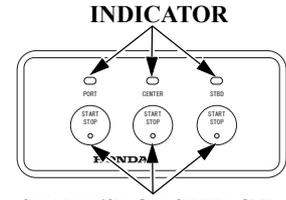

START/STOP SWITCH


**TRIPLE TYPE  
OUTBOARD MOTORS**

### **NOTE:**

The starter motor will not work unless the remote control lever is in the NEUTRAL position, and the clip is in the emergency stop switch.

# CONTROLS AND FEATURES

## FUNCTION SWITCHES (D1 type)

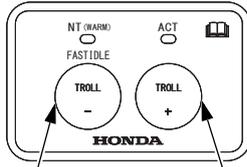

**[-] SWITCH**

**[+] SWITCH**

Function switches are used for operations in the fast idle mode and trolling mode.

### NT (WARM)

Lights: The shift is in neutral.

Blinks: It is in the fast idle mode.

### ACT


Lights: The shift and throttle operations are possible.

Off: The shift and throttle operations are not possible.

## <Fast Idle Mode>

The fast idle mode is only needed for starting carbureted outboard models. The BF175D, BF200D, BF225D and BF250D models use programmed fuel injection so, this mode will not be needed for starting.

After the engine starts and if the outside temperature is below 5°C (41°F), the fast idle mode can be used to accelerate engine warm up.

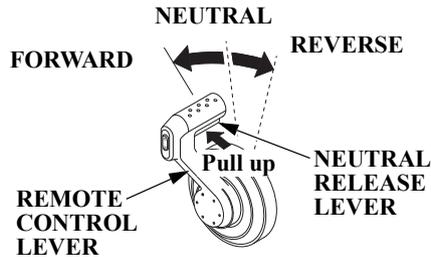

Use the [-] switch and the remote control lever to adjust the engine speed without gearshift when warming up the engine. Keeping the [-] switch pressed when the remote control lever is in the NEUTRAL position, turn the lever forward. Keep turning the lever forward. The throttle opens and the engine speed increases after the lever passed the shift point.

Note that the gearshift mechanism does not function when the [-] switch is pushed once and then released after the remote control lever is moved. The control lever does not operate unless the neutral release lever is pulled.

To release the fast idle mode, press and hold the [-] switch.

## <Trolling Mode>

The engine speed can be adjusted with the [-] switch and [+] switch when in trolling mode.


If you press and hold the [+] switch while cruising with the throttle closed, the mode changes to trolling mode.

### Engine speed adjusting range:

650 min<sup>-1</sup> (rpm) – 1,000 min<sup>-1</sup> (rpm)  
(every 50 min<sup>-1</sup> (rpm))

To release the trolling mode, press and hold the [+] switch.

## FUNCTION SWITCHES (D2 type)

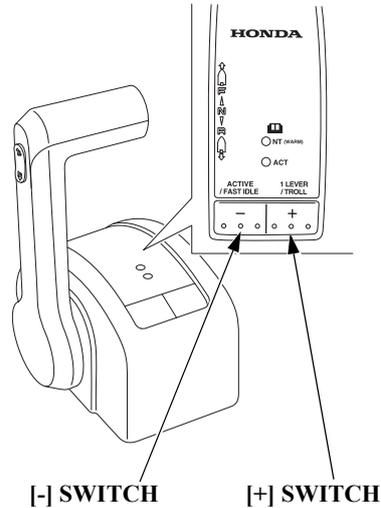

Function switches are used for operations in the fast idle mode, trolling mode, one-lever mode and station select mode.

## NT (WARM)

Lights: The shift is in neutral.

Blinks: It is in the fast idle mode.

## ACT

Lights: The shift and throttle operations are possible.


Off: The shift and throttle operations are not possible.

## <Fast Idle Mode>

The fast idle mode is only needed for starting carbureted outboard models. The BF175D, BF200D, BF225D and BF250D models use programmed fuel injection so, this mode will not be needed for starting.

After the engine starts and if the outside temperature is below 5°C (41°F), the fast idle mode can be used to accelerate engine warm up.

# CONTROLS AND FEATURES

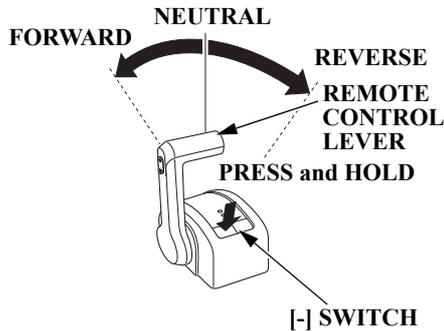

Use the [-] switch and the remote control lever to adjust the engine speed without gearshift when warming up the engine.

Keeping the [-] switch pressed when the remote control lever is in the NEUTRAL position, turn the lever forward. Keep turning the lever forward. The throttle opens and the engine speed increases after the lever passed the shift point.

Note that the gearshift mechanism does not function when the [-] switch is pushed once and then released after the remote control lever is moved.

To release the fast idle mode, press and hold the [-] switch.

## <Trolling Mode>

The engine speed can be adjusted with the [-] switch and [+] switch when in trolling mode.

If you press and hold the [+] switch while cruising with the throttle closed, the mode changes to trolling mode.

### Engine speed adjusting range:

650 min<sup>-1</sup> (rpm) – 1,000 min<sup>-1</sup> (rpm)  
(every 50 min<sup>-1</sup> (rpm))

To release the trolling mode, press and hold the [+] switch.

## <One-Lever Mode>

(For multiple outboard motors type)  
Shifting gear and the engine speed adjustment of the all outboard motors can be performed with one remote control lever when in one-lever mode.

If you press and hold the [+] switch when all remote control lever is in the NEUTRAL position, the mode changes to one-lever mode.

To release one-lever mode, press and hold the [+] switch.

## <Station Select Mode>

For multiple station type, use the [-] switch to change the operating station.


If you press and hold the [-] switch of the inactive station when all remote control lever is in the NEUTRAL position, you can operate the outboard motors using this station.

## Fast Idle Lever (R1 type)/Fast Idle Button (R2, R3 types)

The fast idle lever/fast idle button is only needed for starting carbureted outboard models. The BF175D, BF200D, BF225D and BF250D models use programmed fuel injection so, this lever will not be needed for starting.

After the engine starts and if the outside temperature is below 5°C (41°F), the fast idle lever/fast idle button can be used to accelerate engine warm up.


## <Fast Idle Lever> (R1 type)

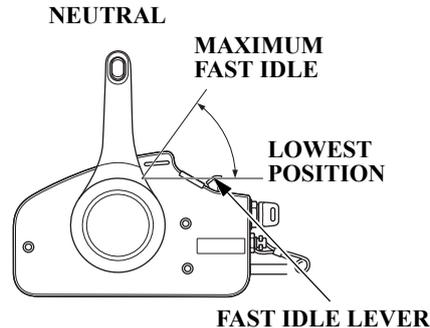

The fast idle lever will not move unless the remote control lever is in the NEUTRAL position. Conversely, the remote control lever will not move unless the fast idle lever is in the lowest position.

Lower the fast idle lever to the lowest position to decrease the fast idle.

## <Fast Idle Button> (R2 type)

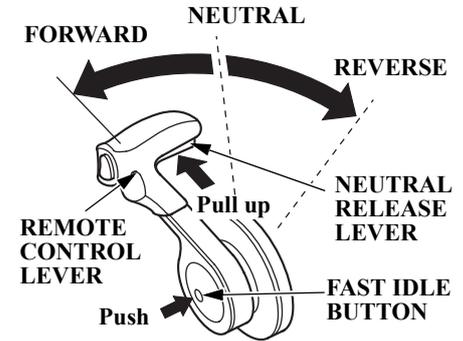


Pushing the fast idle button, turn the remote control lever forward. Keep turning the lever forward. The throttle opens and the engine speed increases after the lever passed the shift point. Note that the gearshift mechanism does not function when the fast idle button is pushed once and then released after the remote control lever is moved.

The control lever does not operate unless the neutral release lever is pulled.

# CONTROLS AND FEATURES


## <Fast Idle Button>

(R3 type)

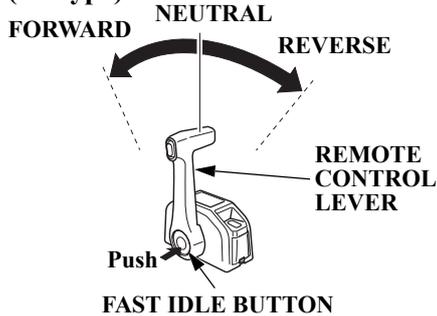


Use the fast idle button and the remote control lever to adjust the engine speed without gearshift when warming up the engine. Pushing the fast idle button, turn the remote control lever forward. Keep turning the lever forward. The throttle opens and the engine speed increases after the lever passed the shift point. Note that the gearshift mechanism does not function when the fast idle button is pushed once and then released after the remote control lever is moved.

## PGM-FI Indicator/Buzzer (R1 type)

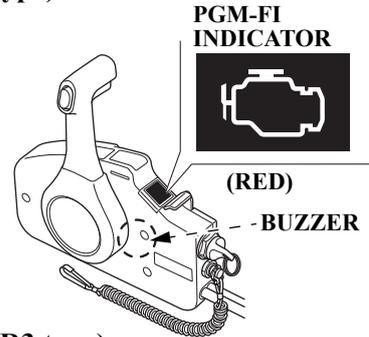


(R2, R3 type)

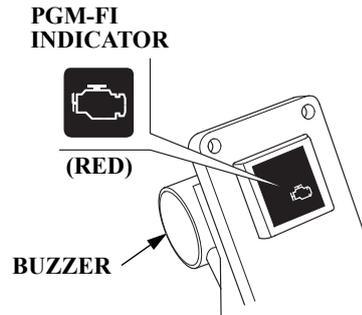


## Display assy

PGM-FI INDICATOR

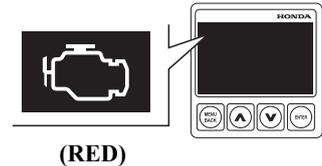


The PGM-FI indicator turns on and the buzzer sounds when the engine control system is faulty.


## ACG Indicator/Buzzer (R1 type)

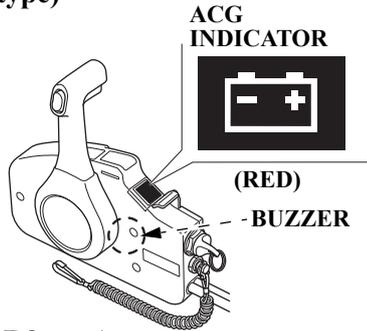

## (R2, R3 type)

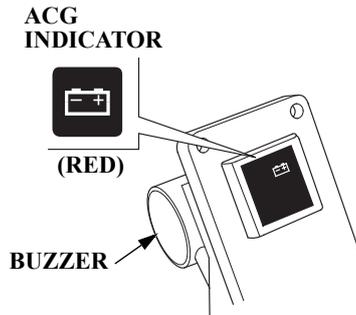


## Display assy

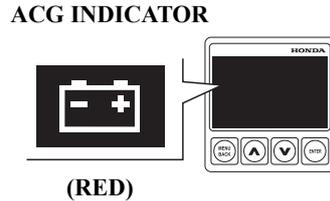


The ACG indicator turns on and the buzzer sounds when the charging system is faulty.

## Oil Pressure Indicator/Buzzer (R1 type)

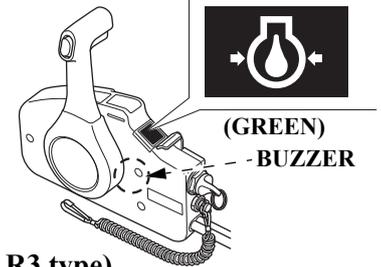

## (R2, R3 type)


### OIL PRESSURE INDICATOR

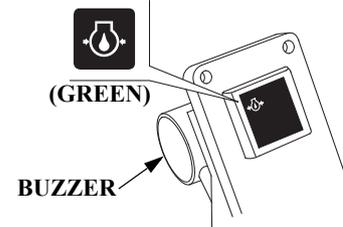

# CONTROLS AND FEATURES

## *Display assy*

### OIL PRESSURE INDICATOR

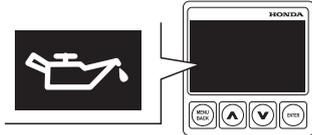


(RED)

The oil pressure indicator turns off and the buzzer sounds when the oil level is low and/or the engine lubrication system is faulty. The engine speed slows down gradually this time.

## Overheat Indicator/Buzzer

(R1 type)


### OVERHEAT INDICATOR

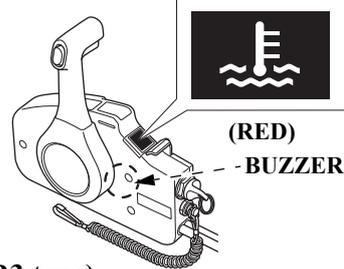

(RED)  
-BUZZER

(R2, R3 type)

### OVERHEAT INDICATOR

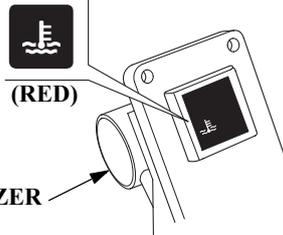


(RED)

BUZZER

## *Display assy*

### OVERHEAT INDICATOR

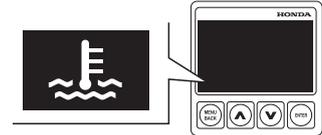

(RED)

The overheat indicator turns on and the buzzer sounds when the engine cooling circuit is faulty. The engine speed slows down this time.

### Water Separator Buzzer

The water separator buzzer sounds when water has accumulated in the water separator.

### Power Trim/Tilt Switch

#### Power Trim

Press the power trim/tilt switch on the remote control lever to adjust the outboard motor trim angle of  $-4^{\circ}$  to  $16^{\circ}$  to maintain proper boat trim. The power trim/tilt switch can be operated while the boat is under way or while stopped.

By using the power trim/tilt switch the operator can change the trim angle of the outboard motor to achieve maximum boat acceleration, speed, stability and maintain optimum fuel consumption.

#### NOTE:

The outboard motor trim angle of  $-4^{\circ}$  to  $16^{\circ}$  is the angle when the outboard motor is installed on the boat at  $12^{\circ}$ .


#### NOTICE

**Excessive trim/tilt angle during operation can cause the propeller to raise out of the water and cause propeller ventilation and engine over-revving. Excessive trim/tilt angle can also damage the water pump.**

# CONTROLS AND FEATURES

**(R1 type)**


**REMOTE CONTROL LEVER**

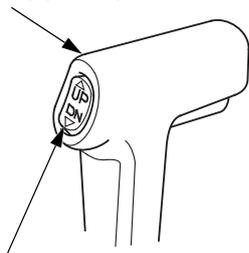

**POWER TRIM/ TILT SWITCH**

**(R2 type)**

**REMOTE CONTROL LEVER**

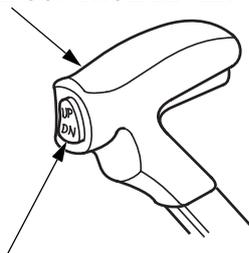


**POWER TRIM/ TILT SWITCH**

**(R3 type)**

**SINGLE TYPE**

**REMOTE CONTROL LEVER**

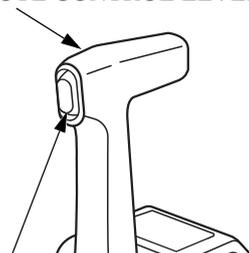


**POWER TRIM/ TILT SWITCH**

**DUAL TYPE**

**POWER TRIM/TILT SWITCH (Left and right operations are interlocked)**

**REMOTE CONTROL LEVERS**

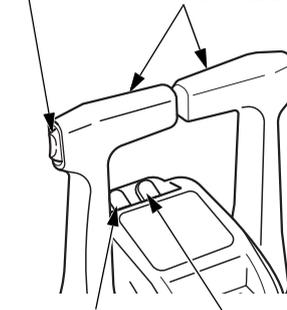


**POWER TRIM/ TILT SWITCH (Left side operation only)**

**POWER TRIM/ TILT SWITCH (Right side operation only)**


# CONTROLS AND FEATURES

(D1 type)

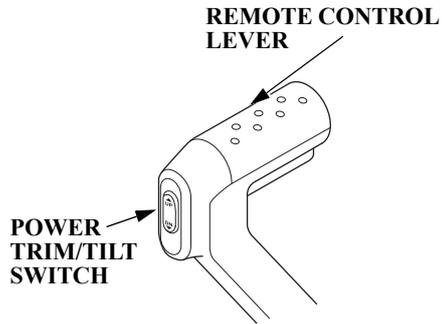


(D2 type)

**SINGLE TYPE**

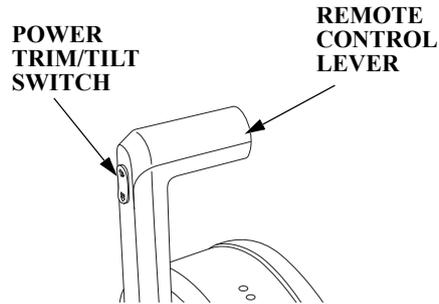


**DUAL TYPE**

**POWER TRIM/TILT SWITCH**

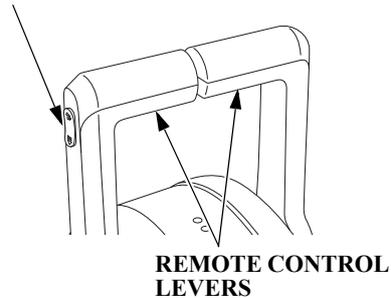


**PTT SWITCH PANEL**

**DUAL TYPE**



**TRIPLE TYPE**




**POWER TRIM/TILT SWITCH**

**NOTE:**

For multiple outboard motors, the trim/tilt angle of all outboard motors is adjusted at the same time by using the power trim/tilt switch on the remote control lever and the trim/tilt angle of each outboard motor is adjusted by using each power trim/tilt switch on the panel.

# CONTROLS AND FEATURES

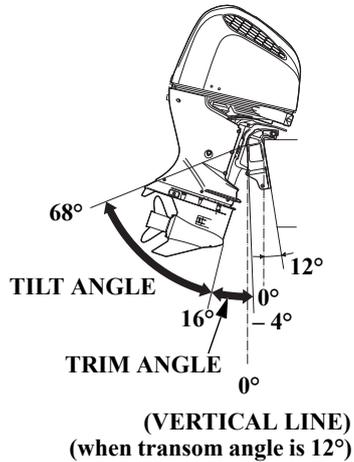


## Power Tilt

Press the power trim/tilt switch to adjust the outboard motor tilt angle of 16° to 68°.

By using the power trim/tilt switch the operator can change the tilt angle of the outboard motor for shallow water operation, beaching, launching from a trailer, or mooring. Please tilt up simultaneously, when you mount the dual type outboard motor.

## Trim Meter (optional equipment)

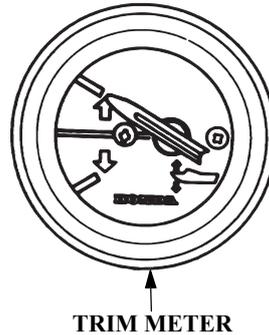


The trim meter has a range of  $-4^{\circ}$  to  $16^{\circ}$  and indicates the trim angle of the outboard motor. Refer to the trim meter when using the power trim/tilt switch to achieve proper boat performance.

### NOTE:

The outboard motor trim angle of  $-4^{\circ}$  to  $16^{\circ}$  is the angle when the outboard motor is installed on the boat at  $12^{\circ}$ .


## Power Tilt Switch (outboard motor pan)

### POWER TILT SWITCH

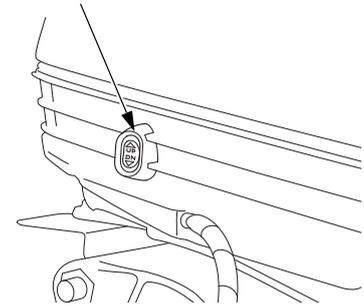

The power tilt switch located on the outboard motor pan is a convenience switch for tilting the outboard motor for trailering, or performing outboard maintenance. This power tilt switch should only be operated with the boat being stopped and engine off.

## Manual Relief Valve

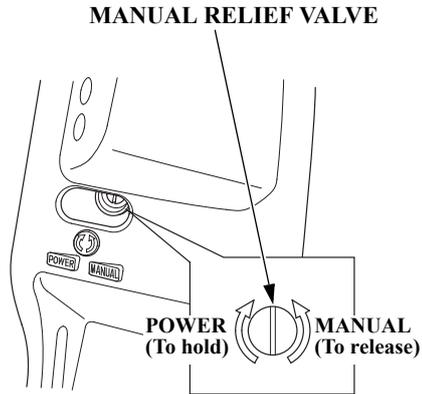

If the power trim/tilt switch will not tilt the outboard motor, the outboard motor can be manually tilted up or down by opening the manual relief valve. To tilt the outboard motor manually, turn the manual relief valve under the left stern bracket no more than 1 or 2 turns counterclockwise using a screwdriver.

After tilting the outboard motor, turn the manual relief valve clockwise securely.


The manual relief valve must be tightened securely before operating the outboard motor or the outboard motor could tilt up when operating in reverse.

# CONTROLS AND FEATURES

## Emergency Stop Switch


The emergency stop switch lanyard is provided to stop the engine immediately in the event the operator should fall overboard or away from the controls.

(D1, D2 type)

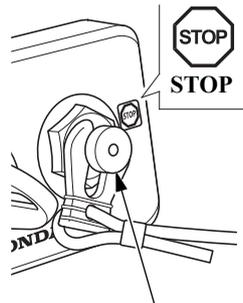


EMERGENCY STOP SWITCH

(R1 type)

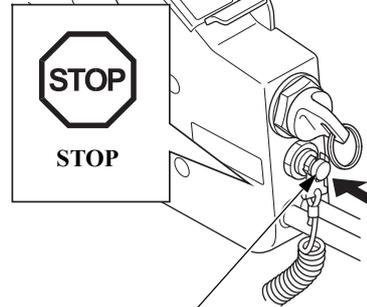


EMERGENCY STOP SWITCH

(R2, R3 type)

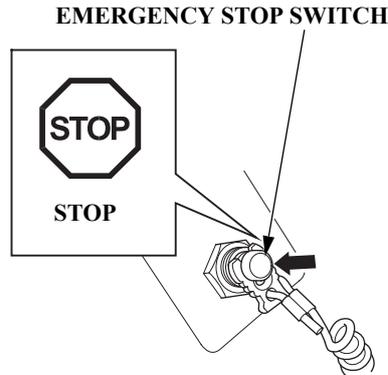

## Emergency Stop Switch Lanyard/Clip

EMERGENCY STOP SWITCH LANYARD

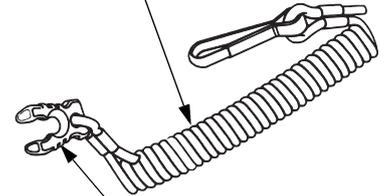

EMERGENCY STOP SWITCH CLIP

The emergency stop switch clip must be engaged with the emergency stop switch or the engine will not start. When the emergency stop switch clip becomes disengaged with the emergency stop switch the engine will stop immediately.


## ⚠ WARNING

If the emergency stop switch lanyard is not set, the boat might run out of control when the operator, for example, falls overboard and is not able to operate the outboard motor.

For the sake of the operator's and the passengers' safety, be sure to set the emergency stop switch clip located at one end of the emergency stop switch lanyard with the emergency stop switch. Attach the other end of the emergency stop switch lanyard securely to the operator.


### (D1, D2 type)

#### EMERGENCY STOP SWITCH

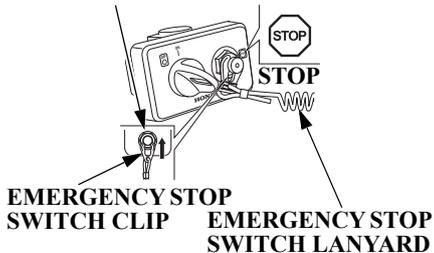


### (R1 type)

#### EMERGENCY STOP SWITCH

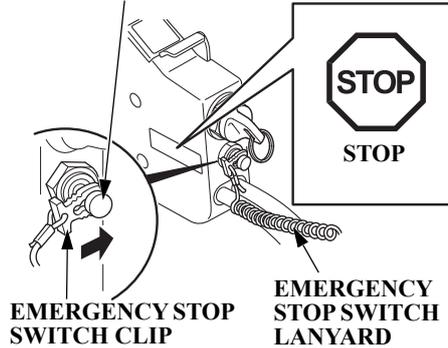

### (R2, R3 type)

#### EMERGENCY STOP SWITCH

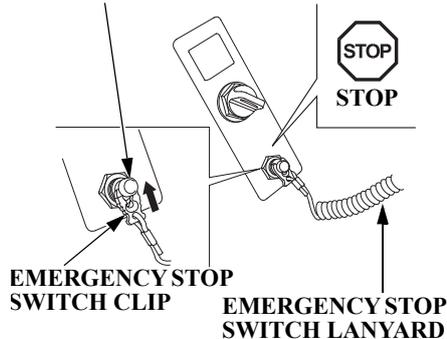


### Spare Emergency Stop Switch Clip (optional equipment)

A spare emergency stop switch clip is available from your outboard motor dealer.

A spare emergency stop switch clip can be stored in the tool bag (see page 116).

# CONTROLS AND FEATURES


## Tilt Lock Lever

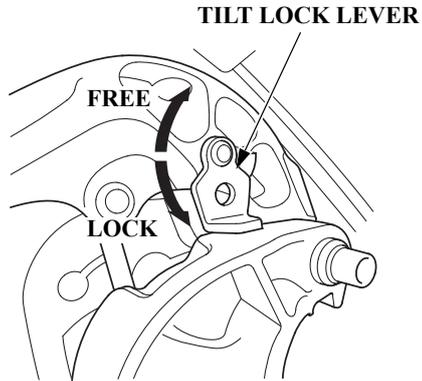

Use the tilt lock lever to raise the outboard motor and lock it in the position when the boat is moored or anchored for a long time.

Tilt the outboard motor as far as it goes and move the lock lever in the locking direction.


## Trim Tab

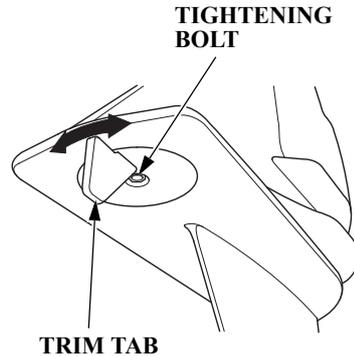

If the steering wheel/handle is pulled to the side while running at full speed, adjust the trim tab so that the boat runs straight ahead.

Loosen the tightening bolt and turn the trim tab right or left to adjust.

## Anode

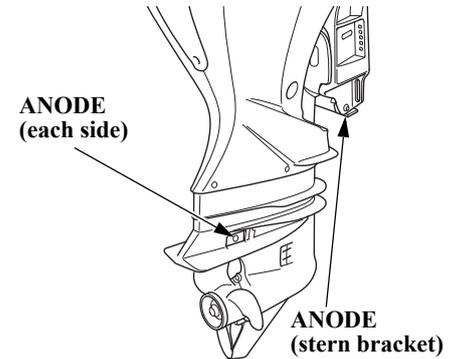


The anode is a sacrificial material which helps to protect the outboard motor from corrosion.

### NOTICE

**Do not paint the anode. It deteriorates the function of the anode, which can lead to rust and corrosion damage to the outboard motor.**

## Cooling Water Check Hole

### COOLING WATER CHECK HOLE

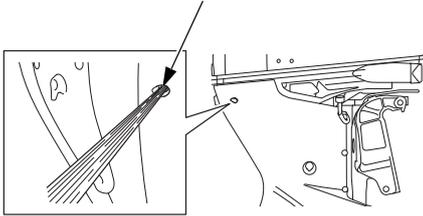


The cooling water is checked here to see whether it is circulating inside the engine properly.

After starting the engine, check at the cooling water check hole whether the cooling water is circulating through the engine.

## Cooling Water Intake Port


### COOLING WATER INTAKE PORT (each side)

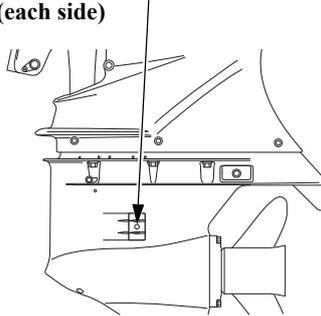

The engine cooling water is drawn into the engine through this port.


## Engine Cover Latches

### Front

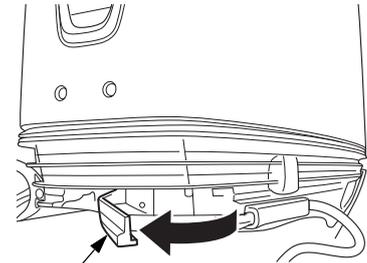

### ENGINE COVER LATCH

### Side

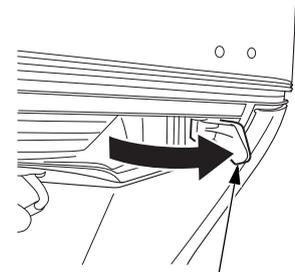


### ENGINE COVER LATCH (each side)

Pull the engine cover latches to remove the engine cover.

# CONTROLS AND FEATURES

## Tachometer (optional equipment)

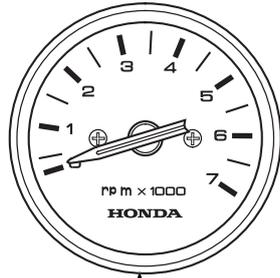


TACHOMETER

The tachometer shows the engine speed in revolutions per minute.

## NMEA Interface Coupler

The NMEA2000 interface coupler can provide information regarding engine speed, fuel consumption, and various warnings to an existing NMEA2000 network via an optional interface cable. Contact your dealer for more information.

### NMEA INTERFACE COUPLER

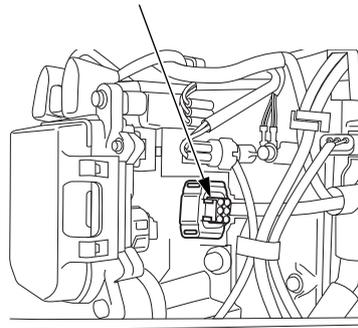

## Operating Hour Notification System

This outboard motor engine counts the number of operating hours since the last periodic maintenance. When the next periodic maintenance is due, the engine notifies the NMEA2000 network, and a maintenance indication is displayed on an NMEA2000-compatible device.

After periodic maintenance is performed, reset the hour counter by:

DBW type:

1. Turn ON the power switch or engine switch. (The buzzer will sound twice.)
  - Wait at least 1 second.
2. With the control lever of the outboard motor, shift to the "F" (forward) or "R" (reverse) gear.
3. Turn OFF the power switch or engine switch.
4. Turn ON the power switch or engine switch. (The buzzer will sound twice.)
5. Insert and remove the emergency stop switch clip five times within 20 seconds.
  - When reset, the buzzer will sound once.


Mechanical wire type:

1. Stop the engine.
2. Set the gearshift at F or R.
3. Turn the engine switch ON. The buzzer will sound once.
4. Insert and remove the emergency stop switch clip five times within 20 seconds.  
The buzzer will sound once when the hour counter is reset.

Periodic maintenance is required when either the operating hours or the time since last maintenance reaches the prescribed limit. Therefore, periodic maintenance may be required based on the number of months since the last maintenance before the alert based on engine operating hours displays (see Maintenance Schedule on page 117).

Reset the hour counter whenever maintenance is performed, whether based on the time interval or the number of operating hours.

## <Operating hour notification timing>

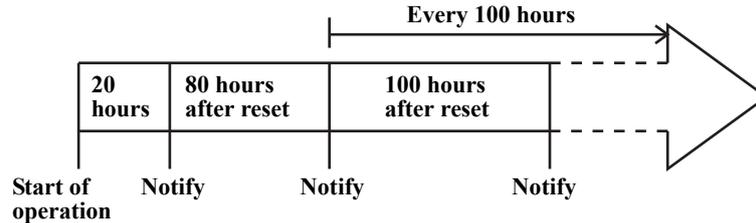

## <Display>

Steps	1	2	3	4
Outboard motor	—	Engine switch ON	Start engine	Gear at F or R
Display	Switch ON	—	—	—
Maintenance indication on display	Not shown Maintenance indication	Shown Maintenance indication	Shown Maintenance indication	Not shown Maintenance indication

# CONTROLS AND FEATURES

---

NMEA2000-compatible display:

- Follow instructions for the display.
- If the display allows selection of notification to be preset, select “Notify” (or equivalent).
- Turn on the power supply to the display before turning on the engine switch of the outboard motor.
- The indication may differ, depending on the type of display.

When “Periodic Maintenance” is indicated:

1. Have the periodic maintenance performed without delay after returning to port.
2. Reset the hour counter.  
If not reset, the maintenance indication will remain in the display, and the hour count until the next maintenance will be in error.

When the periodic maintenance is conducted before “Periodic Maintenance” is indicated, reset the hour counter.

If not reset, the hour count until the next maintenance will be in error.

# 5. INSTALLATION

### NOTICE

**Improperly installed outboard motor can result in the outboard motor dropped into the water, boat not able to cruise straight ahead, engine speed not increase, and much fuel consumption.**

We recommend that the outboard motor be installed by an authorized outboard motor dealer. Consult the authorized Honda dealer in your area for the Y-OP (User Optional Parts)/equipments installation and operation.


**Applicable Boat**  
Select the boat suitable for the engine power.  
**Engine power:**  
BF175D : 128.7 kW (175 PS)  
BF200D : 147.1 kW (200 PS)  
BF225D : 165.5 kW (225 PS)  
BF250D : 183.9 kW (250 PS)

Power recommendation is indicated on most of the boats.

### ⚠ WARNING

Do not exceed the boat manufacturer's power recommendation. Damage and injury may result.

### Transom Height

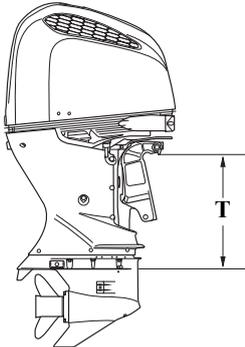


Type:	T (Transom Height) (when transom angle is 12°)
L:	508 mm (20.0 in)
X:	635 mm (25.0 in)
U:	762 mm (30.0 in)

Select the outboard motor which is correct for the boat transom height of your boat.


# INSTALLATION

## Location

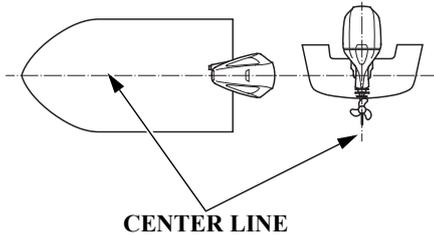

Install the outboard motor at the stern, at the center line of the boat.

## Installation Height

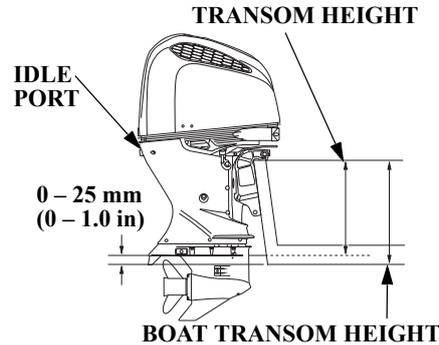


Make sure that the boat transom height is correct for the outboard motor. Incorrect installation height will reduce performance. The outboard motor should be installed so that the anticavitation plate is 0 - 25 mm (0 - 1.0 in) upper the bottom of the boat. The correct dimensions differ according to the type of the boats and the figuration of the bottom of the boats. Follow the manufacture's recommended installation height.

## NOTICE

- The water level must be at least **100 mm (4 in)** above the anticavitation plate, otherwise the water pump may not receive sufficient cooling water, and the engine will overheat.

## Outboard Motor Installation

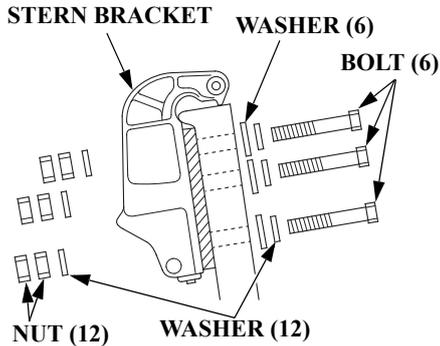


1. Apply the silicone sealant (Three Bond 1216 or equivalent) to the outboard motor mounting holes.
2. Set the outboard motor on the boat and secure with the bolts, washers, and nuts. Using two nuts per bolt to prevent self-loosening.

### NOTE:

#### Standard torque:

55 N·m (5.6 kgf·m, 41 lbf·ft)

The standard torque is given just as a guideline. Torque of the nut can be different according to the material of the boat. Consult with an authorized Honda outboard motor dealer.

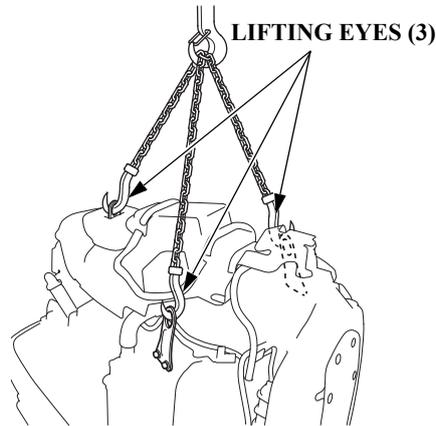

### ⚠ CAUTION


Install the outboard motor securely. Loosely mounted outboard motor can result in accidental loss of the outboard motor and damage and injury to the equipment and personnel.

Before installing the outboard motor on the boat, hang the outboard motor with the hoist or equivalent device by attaching the three lifting eyes to the outboard. Use the hoist which allowable load is 300 kg (661 lbs) or above.

# INSTALLATION

---


## Outboard Motor Angle Inspection (Cruising)

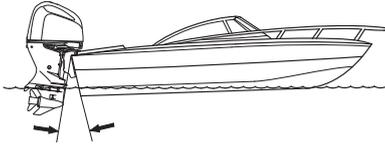

**INCORRECT  
CAUSES BOAT TO “SQUAT”**


Install the outboard motor at the best trim angle for stable cruising and maximum power.

Trim angle too large: Incorrect causes boat to “squat.”

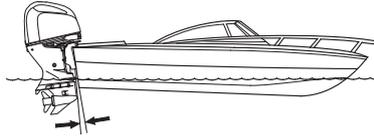

**INCORRECT  
CAUSES BOAT TO “PLOW”**

Trim angle too small: Incorrect causes boat to “plow.”

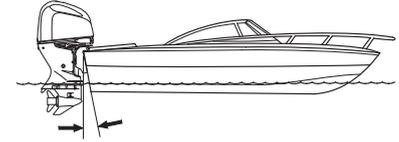

**CORRECT  
GIVES MAXIMUM PERFORMANCE**

The trim angle differs according to the combination of the boat, outboard motor, and propeller, and the operating conditions.

Adjust the outboard motor so that it is perpendicular to the water surface (i.e. axis of the propeller is parallel with the water surface).

## Battery Connections

Use a battery which has CCA (COLD CRANKING AMPERES) 799 at  $-18^{\circ}\text{C}$  ( $0^{\circ}\text{F}$ ) and a reserve capacity 229 minutes (12V-110Ah/20HR) or more specifications.

The battery is an optional part (i.e. part to be purchased separately from the outboard motor).

## ⚠ WARNING

Batteries produce explosive gases: If ignited, an explosion can cause serious injury or blindness. Provide adequate ventilation when charging.

- **CHEMICAL HAZARD:**

Battery electrolyte contains sulfuric acid. Contact with eyes or skin, even through clothing, may cause severe burns. Wear a faceshield and protective clothing.


- Keep flames and sparks away, and do not smoke in the area.  
ANTIDOTE: If electrolyte gets into your eyes, flush thoroughly with warm water for at least 15 minutes and call a physician immediately.

- **POISON:** Electrolyte is poison.  
**ANTIDOTE:**
  - External: Flush thoroughly with water.
  - Internal: Drink large quantities of water or milk. Follow with milk of magnesia or vegetable oil, and call a physician immediately.
- **KEEP OUT OF REACH OF CHILDREN.**

To protect the battery from mechanical damage and to prevent the battery from falling or tipping over, the battery must be:

- Installed in the correct size corrosion-resistant battery box.
- Properly secured in the boat.
- Secured in a location free from direct sunlight and water spray.
- Secured away from the fuel tank to avoid potential sparks near the fuel tank.

# INSTALLATION

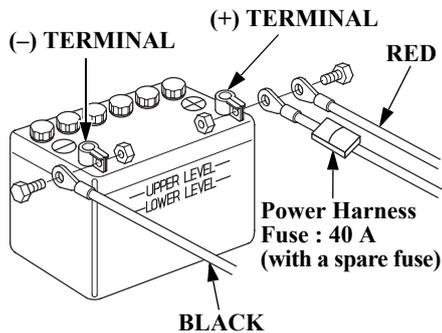

## Connect the battery cables:

1. Connect the cable with the red terminal cover to the positive (+) terminal of the battery.
2. Connect the cable with the black terminal cover to the negative (-) terminal of the battery.

## NOTE:

When more than one outboard motor is mounted on a boat, connect a battery to each respective outboard motors.

## NOTICE

- Be sure to connect the (+) side battery cable first. When disconnecting the cables, disconnect the (-) side first then the (+) side.
- Unless the cables are properly connected to the terminals, the starter motor may fail to operate normally.
- Be careful to avoid connecting the battery in reverse polarity, as this will damage the battery-charging system in the outboard motor.
- Do not disconnect the battery cables while the engine is running. Disconnecting the cables while the engine is running, will damage the outboard motor's electrical system.
- Do not place the fuel tank near the battery.

- **Battery cable extension:** Extending the original battery cable will cause the battery voltage to drop due to the increased length of the cable and number of connections. This voltage drop may cause the buzzer to sound momentarily when engaging the starter motor and may prevent the outboard from starting. If the outboard starts and the buzzer sounds momentarily, there may be barely sufficient voltage reaching the engine.

## Remote Control Installation (optional equipment)

### NOTICE

Improperly installed steering system, remote control box, and remote control cable, or installing those of the different types could cause unpredictable accident. Consult an authorized Honda outboard motor dealer for proper installation.

The control box is available in types as shown.


Select the most suitable control box for your outboard motor considering the installation position, operationability, etc. of the control box.

See an authorized Honda outboard motor dealer for further information.


# INSTALLATION

DBW type:


## REMOTE CONTROL BOX

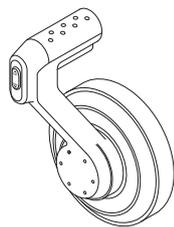

**FLUSH-MOUNT TYPE  
CONTROL BOX**

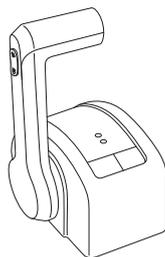

**TOP-MOUNT TYPE  
CONTROL BOX  
(FOR SINGLE  
OUTBOARD  
MOTOR TYPE)**

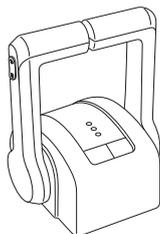

**TOP-MOUNT TYPE  
CONTROL BOX  
(FOR DUAL OUTBOARD  
MOTOR TYPE)**

## KEY SWITCH PANEL



**NORMAL KEY WITH  
START/STOP SWITCH TYPE**



**NORMAL KEY WITHOUT  
START/STOP SWITCH TYPE**



**HONDA SMART KEY TYPE**


## START/STOP SWITCH PANEL




**ALL ENGINE START  
FOR MULTIPLE  
OUTBOARD MOTORS**



**SINGLE TYPE/  
OUTBOARD MOTOR**

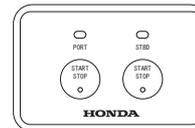


**DUAL TYPE  
OUTBOARD MOTOR**

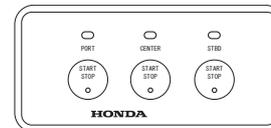


**TRIPLE TYPE  
OUTBOARD MOTOR**


## Mechanical wire type:

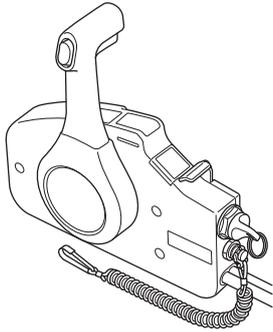


**SIDE-MOUNT  
TYPE CONTROL BOX**

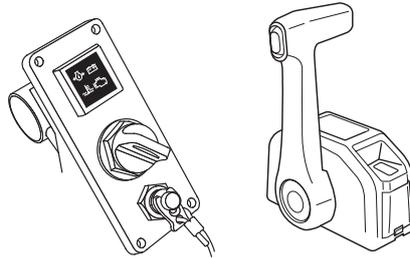

**TOP-MOUNT TYPE CONTROL BOX  
(FOR SINGLE OUTBOARD MOTOR TYPE)  
AND SWITCH PANEL**

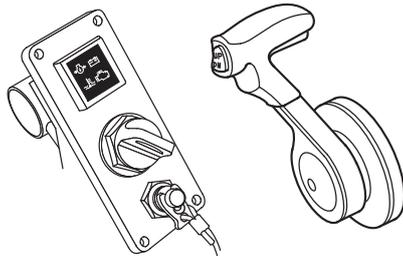


**FLUSH-MOUNT TYPE CONTROL  
BOX AND SWITCH PANEL**

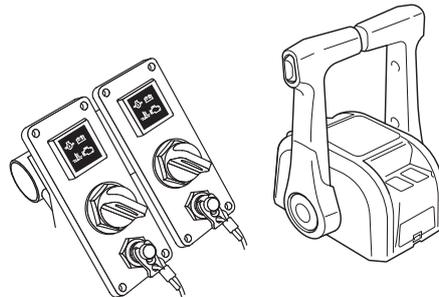

**TOP-MOUNT TYPE CONTROL BOX AND  
SWITCH PANEL  
(FOR DUAL OUTBOARD MOTOR TYPE)**

# INSTALLATION

## <Remote Control Box Location>

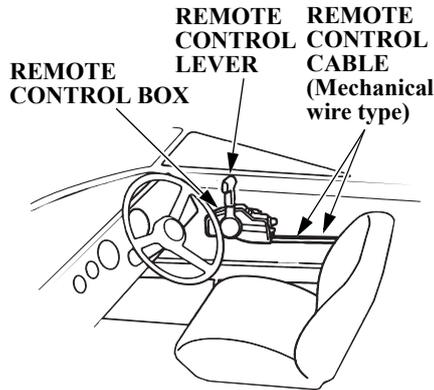


Install the remote control box in the position where is easy to operate the remote control lever and switches.

Mechanical wire type:

Be sure that there are no obstacles on the route of the control cable.

The control box position of the D1 type, D2 type, R2 type and the R3 type should be determined in the same manner.

## <Remote Control Cable Length> (Mechanical wire type)

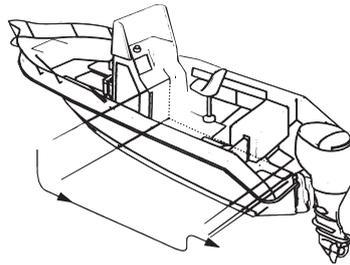

Measure the distance from the control box to the outboard motor along the cable routing.

Recommended cable length is 300 – 450 mm (11.8 – 17.7 in) longer than the measured distance.

Set the cable along the predetermined route and be sure that it is long enough to the route.

Connect the cable to the engine and be sure it is not kinked, bent sharp, pulled taut, or interfered while steering.

### NOTICE

Do not bend the remote control cable as sharp as its route diameter is 300 mm (11.8 in) or less, or it affects the service life of the cable and the remote control lever operation.

## Propeller Selection

BF175D/BF225D/BF250D:

Select the adequate propeller so that the engine speed at full throttle is  $5,000 \text{ min}^{-1}$  (rpm) to  $6,000 \text{ min}^{-1}$  (rpm) when the boat is loaded.

BF250D:

Select the adequate propeller so that the engine speed at full throttle is  $5,300 \text{ min}^{-1}$  (rpm) to  $6,300 \text{ min}^{-1}$  (rpm) when the boat is loaded.

Engine speed varies according to the propeller size and the boat condition. Use of the outboard motor outside the full throttle speed range will adversely affect the engine and cause serious problem. Use of the correct propeller assures powerful acceleration, top speed, excellency in terms of economy and cruising comfort, and it assures longer engine life as well.

Consult with your authorized Honda outboard motor dealer for proper propeller selection.

## Fuel Line Connection

Connect the fuel line to the tank and the outboard motor. Follow the boat manufacturer's instructions.

### **WARNING**

Gasoline is extremely flammable, and gasoline vapor can explode, causing serious injury or death.

- Be careful not to spill fuel.  
Spilled fuel or fuel vapor may ignite. If any fuel is spilled, make sure the area is dry before starting the engine.
- Keep heat, sparks, and flame away.

## 6. PRE-OPERATION CHECKS



BF175D/BF200D/BF225D/BF250D is 4-stroke, water cooled outboard motor which uses unleaded regular gasoline for fuel. It also requires the engine oil. Check the following before operating the outboard motor.

### **⚠ CAUTION**

Perform the following pre-operation checks with the engine stopped.


Before each use, look around and underneath the engine for signs of oil or gasoline leaks.

### Engine Cover Removal/Installation

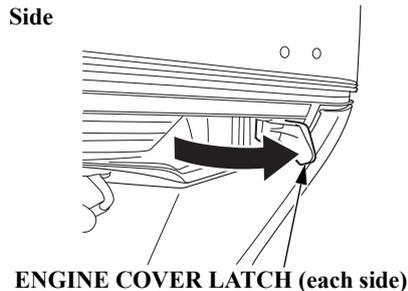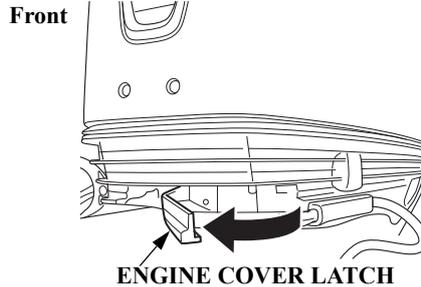

1. Pull all the engine cover latches.
2. Remove the engine cover by taking it up.


### <Installation>

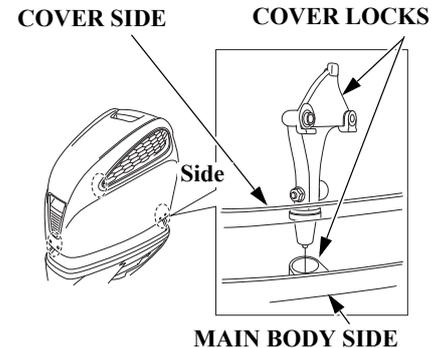

1. Place the engine cover on the main body.
2. Slide the engine cover so that the cover lock on the cover is mated with the lock in the main body.


# PRE-OPERATION CHECKS

Front

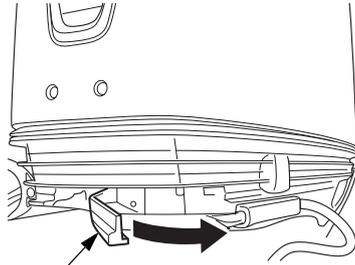

ENGINE COVER LATCH

Side

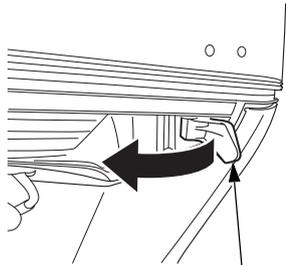

ENGINE COVER LATCH (each side)

3. Push the engine cover until any gap between the engine cover and main body is eliminated.
4. Push all the engine cover latches to lock them.

## ⚠ WARNING

Do not operate the outboard motor without the engine cover. Exposed moving parts can cause injury.

## Engine Oil

### NOTICE


- **Engine oil is a major factor affecting engine performance and service life. Nondetergent and low quality oils are not recommended, because they have inadequate lubricating properties.**
- **Running the engine with insufficient oil can cause serious engine damage.**

### <Recommended oil>


Use Honda 4-stroke oil or an equivalent high detergent, premium quality motor oil certified to meet or exceed U.S. automobile manufacturer's requirements for API Service category SG, SH, SJ or SL. Motor oils classified SG, SH, SJ or SL will show this designation on the container.

# PRE-OPERATION CHECKS

SAE 10W-30 is recommended for general use.

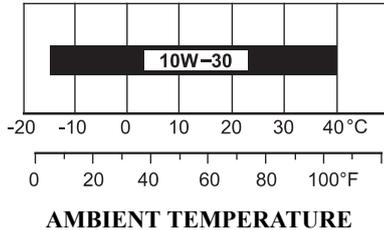


## <Inspection and Refilling>

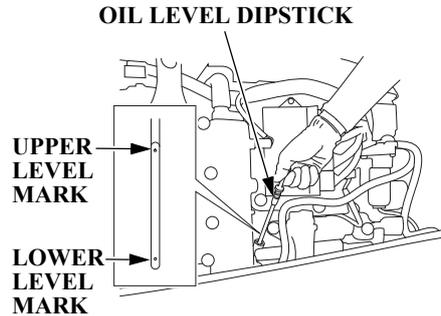

1. Position the outboard motor vertically, and remove the engine cover (see page 58).
2. Remove the oil level dipstick and wipe with a clean rag.
3. Reinsert the dipstick all the way in, then pull it out and read the level.
4. If near or below the lower level mark, remove the oil filler cap and fill to the upper level mark with the recommended oil (see page 59).
5. Insert the dipstick all the way in. Install the oil filler cap and tighten it securely. Do not overtighten.

## OIL FILLER CAP

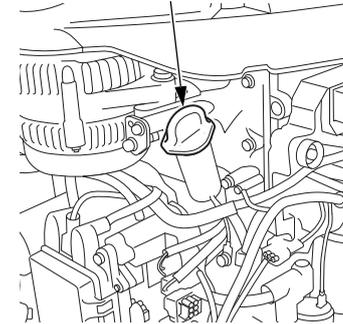

When the engine oil is contaminated or discolored, replace with the fresh engine oil (see page 119 for replacement interval and procedure).

6. Install the engine cover and lock it securely (see page 58).

### NOTICE

**Do not overfill the engine oil. Check the engine oil after refilling. Excessive engine oil as well as the insufficient oil could cause damage to the engine.**

## PRE-OPERATION CHECKS

When you check the oil level with the dipstick, you might notice the engine oil appears milky or the oil level has increased. If you notice either condition, change the engine oil. See the following table for an explanation of these conditions.

Operating Method	Result	Effect
Running the engine below 3,000 min <sup>-1</sup> (rpm) for more than 30% of the time so the engine does not warm up.	<ul style="list-style-type: none"><li>• Water condenses in the engine and mixes with the oil, resulting in a milky appearance.</li><li>• Unburned fuel mixes with the oil, increasing the volume of oil.</li></ul>	The engine oil deteriorates, becomes less efficient as a lubricant, and causes an engine malfunction.
Frequent starting and stopping without allowing the engine to warm up.		

### Fuel

Check the fuel level and refill if necessary. Do not fill the fuel tank above the UPPER LIMIT.

Refer to the boat manufacturer's instructions.

Use unleaded gasoline with a Research Octane Number of 91 or higher (a Pump Octane Number of 86 or higher). Use of leaded gasoline may cause damage to the engine.

Never use gasoline that is stale, contaminated, or mixed with oil. Avoid getting dirt, dust or water in the fuel tank.

# PRE-OPERATION CHECKS

---

## **⚠ WARNING**

Gasoline is extremely flammable and is explosive under certain conditions.

- Refuel in a well-ventilated area with the engine stopped.
- Do not smoke or allow flames or sparks in the area where the engine is refueled or where gasoline is stored.
- Do not overfill the fuel tank (there should be no fuel in the filler neck). After refueling, make sure the fuel filler cap is closed properly and securely.
- Be careful not to spill fuel when refueling. Spilled fuel or fuel vapor may ignite. If any fuel is spilled, make sure the area is dry before starting the engine.
- Avoid repeated or prolonged contact with skin or breathing of vapor.
- **KEEP OUT OF REACH OF CHILDREN.**

## **GASOLINE CONTAINING ALCOHOL**

If you decide to use a gasoline containing alcohol (gasohol), be sure its octane rating is at least as high as that recommended by Honda. There are two types of “gasohol”: one containing ethanol, and the other containing methanol.

Do not use gasohol that contains more than 10% ethanol.

Do not use gasoline containing more than 5% methanol (methyl or wood alcohol) and that does not also contain co-solvents and corrosion inhibitors for methanol.

## **NOTE:**

- Fuel system damage or engine performance problems resulting from the use of gasoline that contains more alcohol than recommended is not covered under the warranty.
- Before buying gasoline from an unfamiliar station, first determine if the gasoline contains alcohol, if it does, find out the type and percentage of alcohol used. If you notice any undesirable operating symptoms while using a particular gasoline. Switch to a gasoline that you know contains less than the recommended amount of alcohol.

### Propeller and Cotter Pin Inspection

#### ▲ WARNING

The propeller blades are thin and sharp. Careless handling of the propeller can result in injury. When checking the propeller:


- Remove the emergency stop switch clip to prevent an accidental start of the engine.
- Wear heavy gloves.

Propeller rotates rapidly while cruising. Before starting the engine, check the propeller blades for damage and deformation and replace if necessary.

Obtain a spare propeller for the event of an unpredictable accident while cruising. If no spare propeller is available, return to the pier at low speed and replace.

Consult an authorized Honda outboard motor dealer for propeller selection.

Keep the spare washer, castle nut and cotter pin with you on your boat.

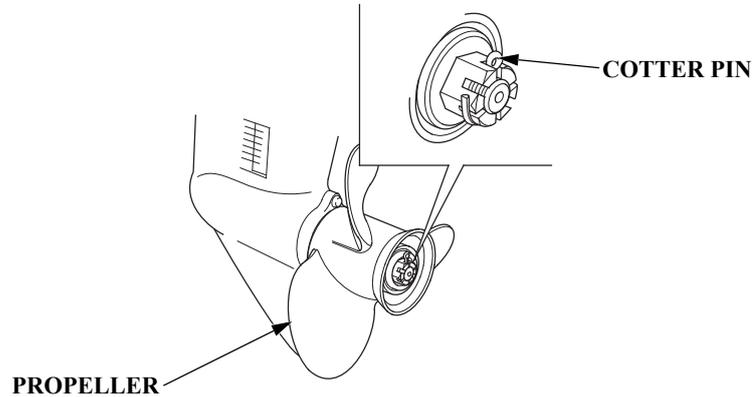


Engine speed varies according to the propeller size and the boat condition. Use of the outboard motor outside the full throttle speed range will adversely affect the engine and cause a serious problem. Use of the correct propeller assures powerful acceleration, top speed, excellency in terms of economy and cruising comfort, and it assures longer engine life as well.

Consult with your authorized Honda outboard motor dealer for proper propeller selection.


1. Check the propeller for damage, wear, or deformation.
2. Check whether the propeller is installed properly.
3. Check the cotter pin for damage. Replace whenever the propeller is faulty.

# PRE-OPERATION CHECKS

## Remote Control Lever Friction (D1 type)

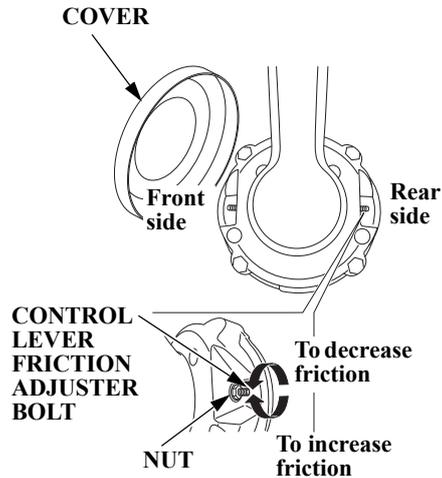


## (D2 type)

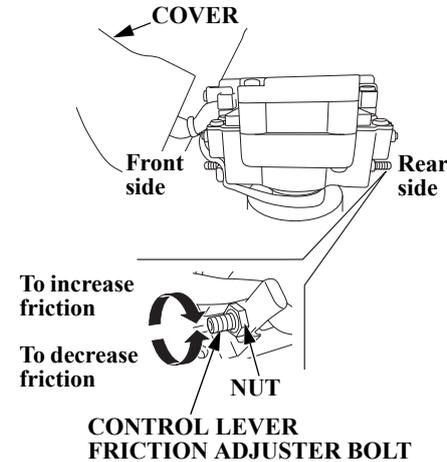


## (R1 type)

### CONTROL LEVER FRICTION ADJUSTER

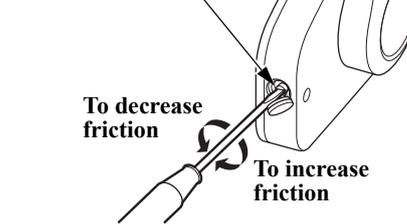

## (R2 type)

### CONTROL LEVER FRICTION ADJUSTER

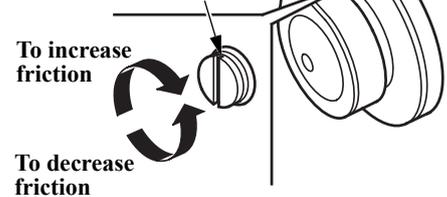


Check whether the remote control lever moves smoothly.

1. Remove the cover of the remote control lever.
2. Loosen the nut.
3. Adjust the lever friction when increasing throttle opening and boat speed by turning the control lever friction adjuster bolt right or left.
4. Tighten the nut to lock the lever friction.
5. Reinstall the cover of the remote control lever.

Check whether the remote control lever moves smoothly. Friction of the lever can be adjusted by turning the control lever friction screw right or left.

# PRE-OPERATION CHECKS

(R3 type)  
SINGLE TYPE

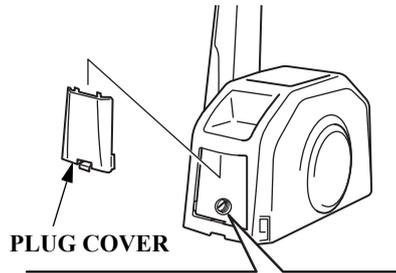


To decrease friction

To increase friction

CONTROL LEVER  
FRICTION ADJUSTER

DUAL TYPE

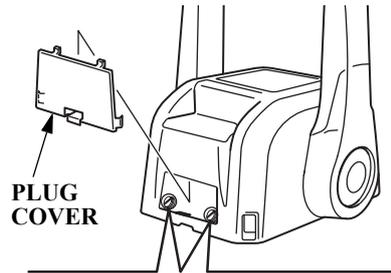


To decrease friction

To increase friction

CONTROL LEVER  
FRICTION ADJUSTER

Check whether the remote control lever moves smoothly.  
Friction of the lever can be adjusted by turning the control lever friction screw right or left.

## Fuel Filter with Water Separator

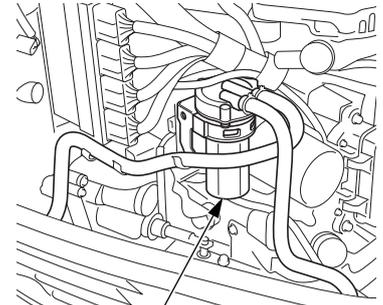

### FUEL FILTER with WATER SEPARATOR

The fuel filter with water separator is located near the junction box. Check the fuel filter with water separator for water accumulation. If water is accumulated, drain them (see page 127).

# PRE-OPERATION CHECKS

## Battery

### NOTICE


Battery handling differs according to the type of the battery and the instructions described below might not be applicable to the battery of your outboard. Refer to the battery manufacturer's instructions.

### Battery Inspection

Check whether the battery fluid is between the upper and lower levels, and check the vent hole in the battery caps for clogging.

If the battery fluid is near or below the lower level, add the distilled water to the upper level (see page 130).

Check that the battery cables are connected securely. If the battery terminals are contaminated or corroded, remove the battery and clean the terminals (see page 131).

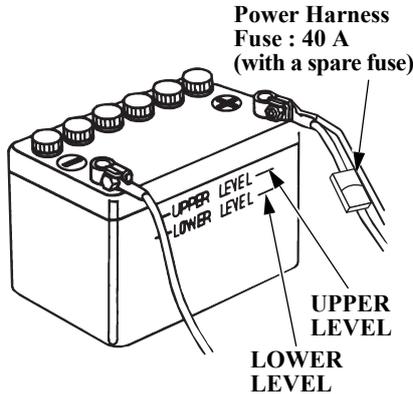

### ⚠ WARNING

Batteries produce explosive gases: If ignited, an explosion can cause serious injury or blindness. Provide adequate ventilation when charging.




- **CHEMICAL HAZARD:** Battery electrolyte contains sulfuric acid. Contact with eyes or skin, even through clothing, may cause severe burns. Wear a faceshield and protective clothing.

- Keep flames and sparks away, and do not smoke in the area. ANTIDOTE: If electrolyte gets into your eyes, flush thoroughly with warm water for at least 15 minutes and call a physician immediately.
- **POISON:** Electrolyte is poison. ANTIDOTE:
  - External: Flush thoroughly with water.
  - Internal: Drink large quantities of water or milk. Follow with milk of magnesia or vegetable oil, and call a physician immediately.
- **KEEP OUT OF REACH OF CHILDREN.**

# PRE-OPERATION CHECKS

## Other Checks

(5) TOOL KIT (page 116)

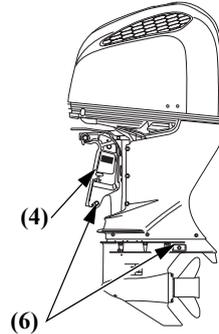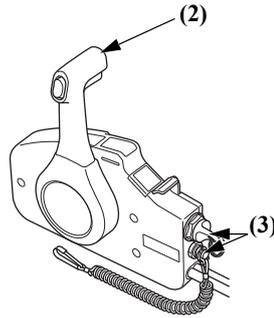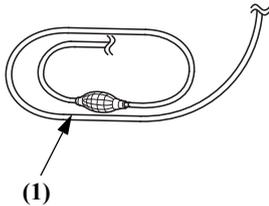

### Check the following items:

- (1) The fuel hose for kinking, collapsing or a loose connection.
- (2) The control lever for smooth operation.
- (3) The switch for correct operation.
- (4) The stern bracket for damage.
- (5) The tool kit for missing spare parts and tools (page 116).
- (6) The anode metal for damage, looseness or excessive corrosion.

The anode (sacrificed metal) helps to protect the outboard motor from corrosion damage; it must be exposed directly to the water whenever the outboard motor is in use. Replace the anodes when they have been reduced to about two-thirds of their original size, or if they are crumbling.

### NOTICE


**The possibility of corrosion damage is increased if the anode is painted over or allowed to deteriorate.**

Parts/materials which should be installed on board:

- Owner's Manual
- Tool kit
- Spare parts: spark plugs, engine oil, spare propeller, castle nut, washer, cotter pin.
- Spare emergency stop switch clip.
- Other parts/materials required by laws/regulations.

## 7. STARTING THE ENGINE

### Fuel Priming

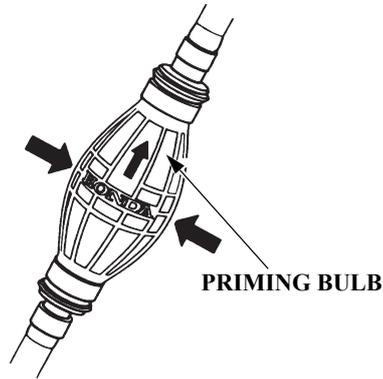

Hold the priming bulb so that the outlet end is higher than the inlet (so that the arrow on the priming bulb points up), and squeeze it until it feels firm, indicating that fuel has reached the outboard motor. Check for leaks.

#### **⚠ WARNING**


Be careful not to spill any fuel. Spilled fuel vapor may ignite. If any fuel is spilled, make sure the area is dry before starting the engine.

#### **NOTICE**

Do not touch the priming bulb with the engine running or when tilting up the outboard motor. The vapor separator could overflow.

### Starting the Engine (D1, D2 types)

#### EMERGENCY STOP SWITCH

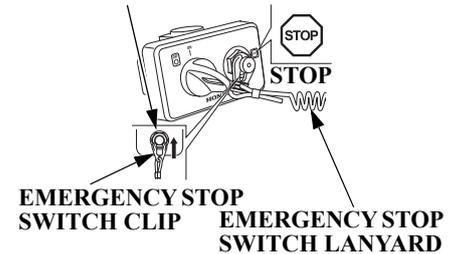

#### **⚠ WARNING**

Exhaust contains poisonous carbon monoxide which can cause unconsciousness and may lead to death. Never run the outboard motor in a boat house or other confined area.

#### **NOTICE**

To prevent damage to the outboard from overheating, never run the engine with the propeller out of water.

**NOTE:**


When the boat is mounted with the two outboard motors, perform the following on the right and left engines respectively.

1. Insert the emergency stop switch clip at one end of the emergency stop switch lanyard into the emergency stop switch. Attach the other end of the lanyard securely to the operator.

**⚠ WARNING**

If the operator does not attach the emergency stop switch lanyard, and is thrown from the seat or out of the boat, the out-of-control boat can seriously injure the operator, passengers, or bystanders. Always properly attach the lanyard before starting the engine.

**EMERGENCY STOP  
SWITCH CLIP**

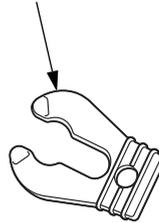


**NOTE:**

The engine does not start unless the emergency stop switch clip is set on the emergency stop switch.


A spare emergency stop switch clip can be stored in the tool bag (see page 116).

# STARTING THE ENGINE

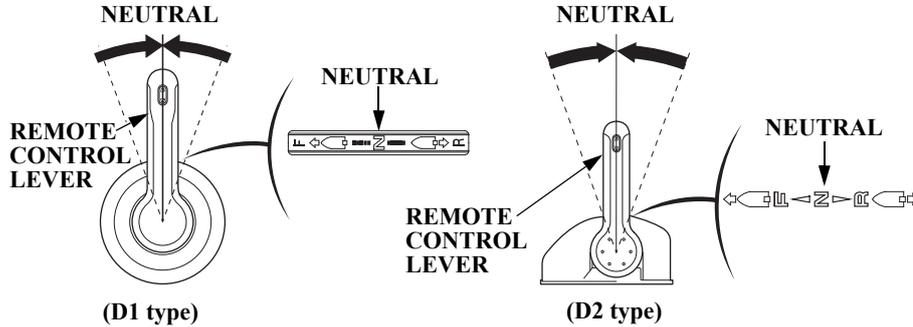

- Set the control lever in the NEUTRAL position.  
The engine does not start unless the control lever is set in the NEUTRAL position.

## (Normal Key without START/STOP switch type)

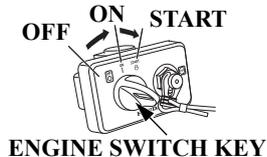


- Turn the engine switch key to the START position and hold it there until the engine starts.  
When the engine starts, release the key, allowing it to return to the ON position.  
Go to step 5.

### NOTICE


- Do not turn the engine switch key to the START position while the engine is running.

## (Normal Key with START/STOP switch type)

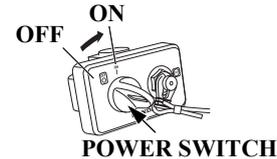


- Insert the key to the power switch and turn it to the ON position.
- Push the start/stop switch.

### START/STOP SWITCH

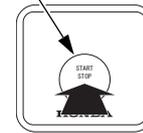

## (Honda Smart Key type)

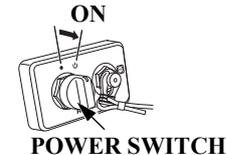

- Turn the power switch to the right.

## STARTING THE ENGINE

### NOTE:

The power will not be turned ON unless the Honda Smart Key is authenticated.

4. Push the start/stop switch.


### NOTE:

When the boat is mounted with the two outboard motors, push the all engine start switch.

### NOTICE

- **The starter motor consumes a large amount of current. Do not therefore run it continuously for more than 5 seconds at a time. If the engine does not start within 5 seconds, wait at least 10 seconds before running the starter motor again.**

### COOLING WATER CHECK HOLE

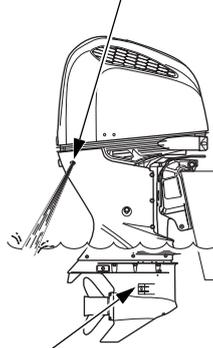

### COOLING WATER INTAKE PORT (each side)


5. After starting, check whether the cooling water is flowing out of the cooling water check hole. Amount of water flowing out of the check hole might vary due to the thermostat operation, but this is normal.

### NOTICE

**If water does not flow out, or if steam comes out, stop the engine. Check to see if the screen in the cooling water intake port is obstructed and remove foreign materials if necessary. Check the cooling water check hole for clogging. If water still does not flow out, have your outboard motor checked by an authorized outboard motor dealer. Do not operate the engine until the problem has been corrected.**

# STARTING THE ENGINE

## ENGINE OIL PRESSURE INDICATOR

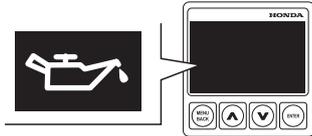

**NORMAL: OFF**  
**ABNORMAL: ON**

6. Check to see if the oil pressure indicator turns ON.

If it does not turn on, stop the engine and perform the following inspections.

- 1) Check the oil level (see page 60).
- 2) If the oil level is normal and the oil pressure indicator does not turn ON, consult with an authorized Honda outboard motor dealer.

7. Warm up the engine as follows:  
Above 5°C (41°F) – run the engine for 2 or 3 minutes.  
Below 5°C (41°F) – run the engine for at least 5 minutes at 2,000 min<sup>-1</sup> (rpm).  
Failure to completely warm up the engine will result in poor engine performance.

### NOTICE


**If the engine is not properly warmed-up before raising the engine speed, the warning buzzer and overheat indicator may activate and the engine speed will be automatically reduced.**

### NOTE:

Before leaving the dock, check the operation of the emergency stop switch.

(R1 type)

## EMERGENCY STOP SWITCH

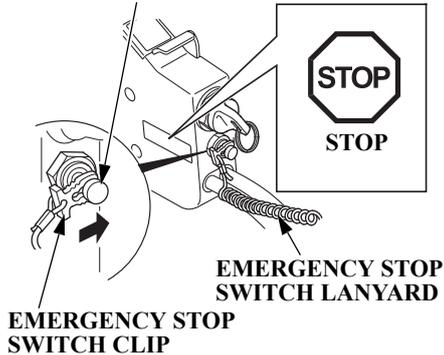

### ⚠ WARNING

Exhaust contains poisonous carbon monoxide which can cause unconsciousness and may lead to death. Never run the outboard motor in a boat house or other confined area.

### NOTICE


To prevent damage to the outboard from overheating, never run the engine with the propeller out of water.

1. Insert the emergency stop switch clip at one end of the emergency stop switch lanyard into the emergency stop switch. Attach the other end of the lanyard securely to the operator.

### ⚠ WARNING

If the operator does not attach the emergency stop switch lanyard, and is thrown from the seat or out of the boat, the out-of-control boat can seriously injure the operator, passengers, or bystanders. Always properly attach the lanyard before starting the engine.

## EMERGENCY STOP SWITCH CLIP

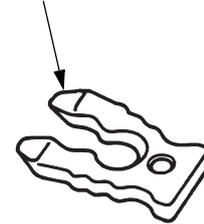


### NOTE:


The engine does not start unless the emergency stop switch clip is set on the emergency stop switch.

A spare emergency stop switch clip can be stored in the tool bag (see page 116).

# STARTING THE ENGINE

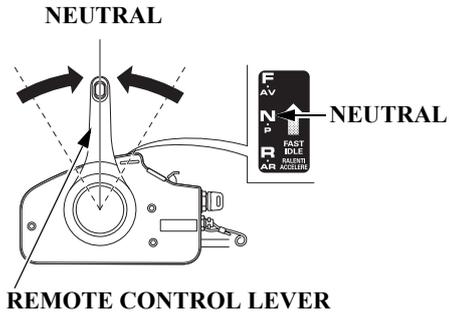

2. Set the control lever in the NEUTRAL position.  
The engine does not start unless the control lever is set in the NEUTRAL position.

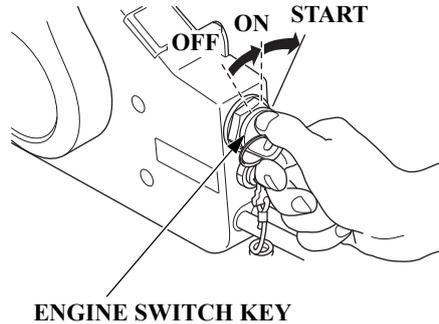


3. Turn the engine switch key to the START position and hold it there until the engine starts.  
When the engine starts, release the key, allowing it to return to the ON position.

## NOTICE

- The starter motor consumes a large amount of current. Do not therefore run it continuously for more than 5 seconds at a time. If the engine does not start within 5 seconds, wait at least 10 seconds before running the starter motor again.
- Do not turn the engine switch key to the START position while the engine is running.

# STARTING THE ENGINE

## COOLING WATER CHECK HOLE

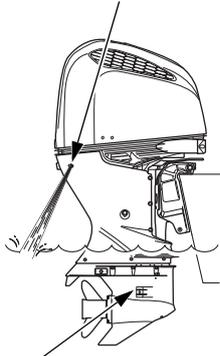

## COOLING WATER INTAKE PORT (each side)

4. After starting, check whether the cooling water is flowing out of the cooling water check hole. Amount of water flowing out of the check hole might vary due to the thermostat operation, but this is normal.

### NOTICE

If water does not flow out, or if steam comes out, stop the engine. Check to see if the screen in the cooling water intake port is obstructed and remove foreign materials if necessary. Check the cooling water check hole for clogging. If water still does not flow out, have your outboard motor checked by an authorized outboard motor dealer. Do not operate the engine until the problem has been corrected.

5. Check to see if the oil pressure indicator turns ON.



If it does not turn on, stop the engine and perform the following inspections.

- 1) Check the oil level (see page 60).
- 2) If the oil level is normal and the oil pressure indicator does not turn ON, consult with an authorized Honda outboard motor dealer.

## OIL PRESSURE INDICATOR LIGHT



**NORMAL: ON**  
**ABNORMAL: OFF**

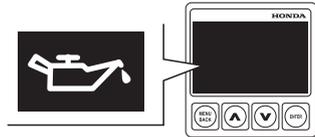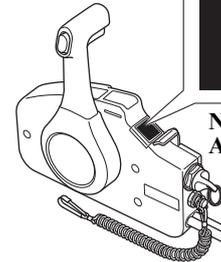

**NORMAL: OFF**  
**ABNORMAL: ON**

6. Warm up the engine as follows:  
Above 5°C (41°F) – run the engine for 2 or 3 minutes.  
Below 5°C (41°F) – run the engine for at least 5 minutes at 2,000 min<sup>-1</sup> (rpm).  
Failure to completely warm up the engine will result in poor engine performance.

# STARTING THE ENGINE

## NOTICE


If the engine is not properly warmed-up before raising the engine speed, the warning buzzer and overheat indicator may activate and the engine speed will be automatically reduced.

## NOTE:

Before leaving the dock, check the operation of the emergency stop switch.

(R2, R3 types)

EMERGENCY STOP SWITCH

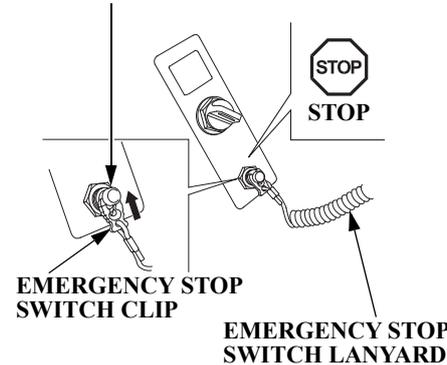

## ⚠ WARNING

Exhaust contains poisonous carbon monoxide which can cause unconsciousness and may lead to death. Never run the outboard motor in a boat house or other confined area.

## NOTICE

To prevent damage to the outboard from overheating, never run the engine with the propeller out of water.

## NOTE:

When the boat is mounted with the two outboard motors, perform the following on the right and left engines respectively.


1. Insert the emergency stop switch clip at one end of the emergency stop switch lanyard into the emergency stop switch. Attach the other end of the lanyard securely to the operator.

## ⚠ WARNING

If the operator does not attach the emergency stop switch lanyard, and is thrown from the seat or out of the boat, the out-of-control boat can seriously injure the operator, passengers, or bystanders. Always properly attach the lanyard before starting the engine.

# STARTING THE ENGINE


EMERGENCY STOP SWITCH CLIP

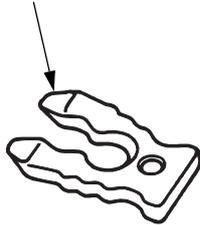

**NOTE:**


The engine does not start unless the emergency stop switch clip is set on the emergency stop switch.

A spare emergency stop switch clip can be stored in the tool bag (see page 116).

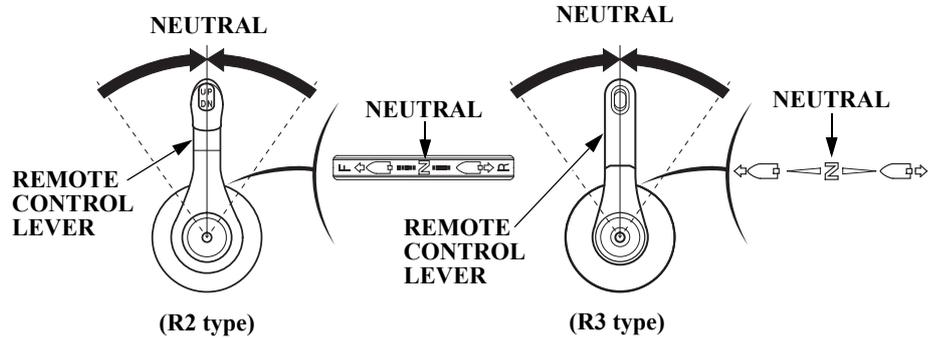

2. Set the control lever in the NEUTRAL position.  
The engine does not start unless the control lever is set in the NEUTRAL position.

# STARTING THE ENGINE

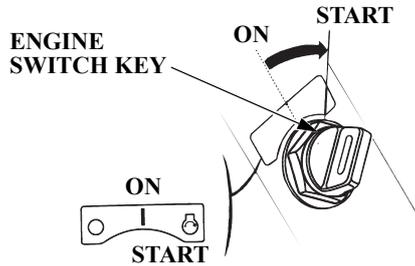

3. Turn the engine switch key to the START position and hold it there until the engine starts.  
When the engine starts, release the key, allowing it to return to the ON position.


## NOTICE

- **The starter motor consumes a large amount of current. Do not therefore run it continuously for more than 5 seconds at a time. If the engine does not start within 5 seconds, wait at least 10 seconds before running the starter motor again.**
- **Do not turn the engine switch key to the START position while the engine is running.**

## NOTE:

When the boat is mounted with the two outboard motors, perform the above procedure on the right and left outboard motors respectively.

## COOLING WATER CHECK HOLE

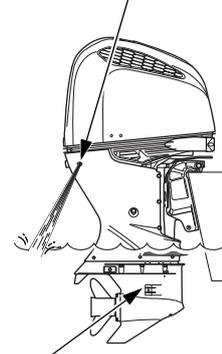

## COOLING WATER INTAKE PORT (each side)


4. After starting, check whether the cooling water is flowing out of the cooling water check hole. Amount of water flowing out of the check hole might vary due to the thermostat operation, but this is normal.

## STARTING THE ENGINE


### NOTICE

If water does not flow out, or if steam comes out, stop the engine. Check to see if the screen in the cooling water intake port is obstructed and remove foreign materials if necessary. Check the cooling water check hole for clogging. If water still does not flow out, have your outboard motor checked by an authorized outboard motor dealer. Do not operate the engine until the problem has been corrected.

### ENGINE OIL PRESSURE INDICATOR

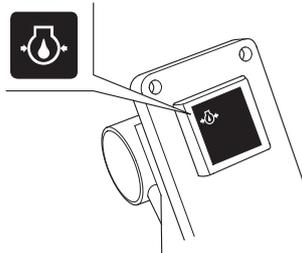

NORMAL: ON  
ABNORMAL: OFF

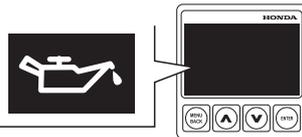

NORMAL: OFF  
ABNORMAL: ON

5. Check to see if the oil pressure indicator turns ON.

If it does not turn on, stop the engine and perform the following inspections.

- 1) Check the oil level (see page 60).
- 2) If the oil level is normal and the oil pressure indicator does not turn ON, consult with an authorized Honda outboard motor dealer.

6. Warm up the engine as follows:  
Above 5°C (41°F) – run the engine for 2 or 3 minutes.  
Below 5°C (41°F) – run the engine for at least 5 minutes at 2,000 min<sup>-1</sup> (rpm).  
Failure to completely warm up the engine will result in poor engine performance.

# STARTING THE ENGINE


## NOTICE

If the engine is not properly warmed-up before raising the engine speed, the warning buzzer and overheat indicator may activate and the engine speed will be automatically reduced.

## NOTE:

Before leaving the dock, check the operation of the emergency stop switch.

## Station Select Mode

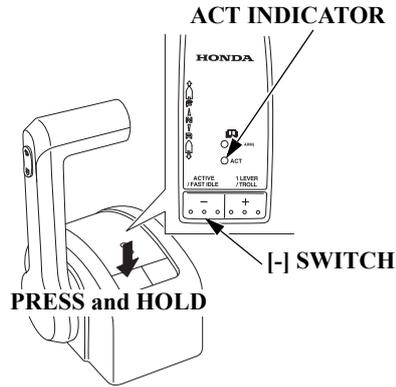

For multiple station type, use the [-] switch to change the operating station.

If you press and hold the [-] switch of the inactive station when all remote control lever is in the NEUTRAL position, you can operate the outboard motors using this station. A long buzz sounds once and the ACT indicator comes on when the station can be operated.

### **Break-in Procedure**

Break-in period: 10 hours

Break-in operation allows the mating surfaces of the moving parts to wear evenly and thus ensures proper performance and longer outboard motor life.

Break-in your new outboard motor as follows.

First 15 minutes:

Run the outboard motor at trolling speed. Use the minimum amount of throttle opening necessary to operate the boat at a safe trolling speed.

Next 45 minutes:

Run the outboard motor up to a maximum of 2,000 to 3,000  $\text{min}^{-1}$  (rpm) or 10% to 30% throttle opening.

Next 60 minutes:

Run the outboard motor up to maximum of 4,000 to 5,000  $\text{min}^{-1}$  (rpm) or 50% to 80% throttle opening. Short bursts of full throttle are acceptable but do not operate the outboard motor continuously at full throttle.

Next 8 hours:


Avoid continuous full throttle operation (100% throttle opening). Do not run the outboard motor at full throttle for more than 5 minutes at a time.

For boats that plane easily, bring the boat up on plane then reduce the throttle opening to the specified break-in settings called out above.

# OPERATION

## Gear Shifting (D1 type)



REMOTE CONTROL LEVER

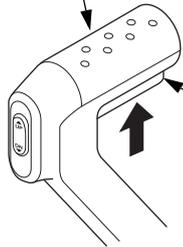

NEUTRAL RELEASE LEVER

FORWARD      NEUTRAL      REVERSE

REMOTE CONTROL LEVER

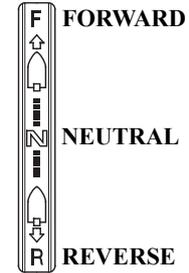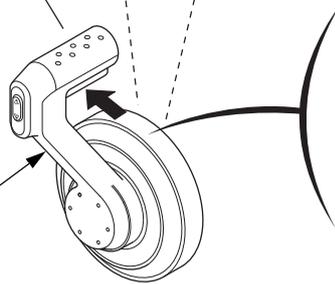

### **⚠ CAUTION**

Avoid sharp and abrupt operation of the control lever. Operate it moderately. Operate the control lever and raise the engine speed after making sure that the gear was shifted securely.


While pulling the neutral release lever, move the control lever approximately 20° toward the FORWARD or REVERSE position to engage the desired gear.

Moving the control lever further from approximately 20° will increase throttle opening and boat speed.


The control lever will not move unless the neutral release lever is pulled up.

## Gear Shifting (D2 type)


SINGLE TYPE

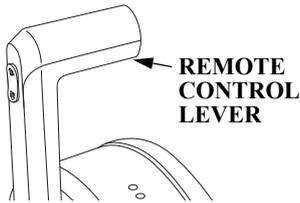

DUAL TYPE

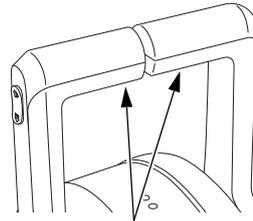

REMOTE CONTROL LEVERS

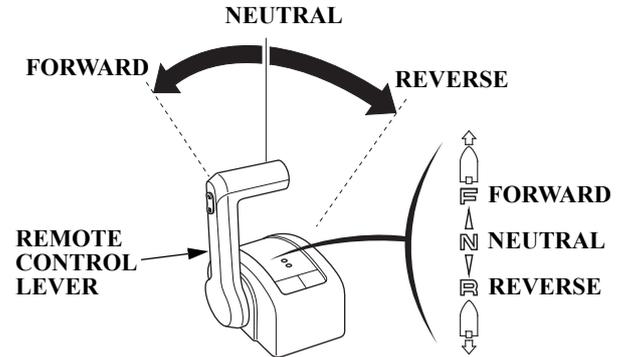

### ⚠ CAUTION

Avoid sharp and abrupt operation of the control lever. Operate it moderately. Operate the control lever and raise the engine speed after making sure that the gear was shifted securely.

Move the control lever(s) approximately 20° toward the FORWARD or REVERSE position to engage the desired gear.

When the boat is mounted with the two outboard motors, hold the control lever in the center as shown, and operate the right and left levers simultaneously.



Moving the control lever(s) further from approximately 20° will increase throttle opening and boat speed.

# OPERATION

## Gear Shifting

(R1 type) NEUTRAL RELEASE LEVER

REMOTE CONTROL LEVER

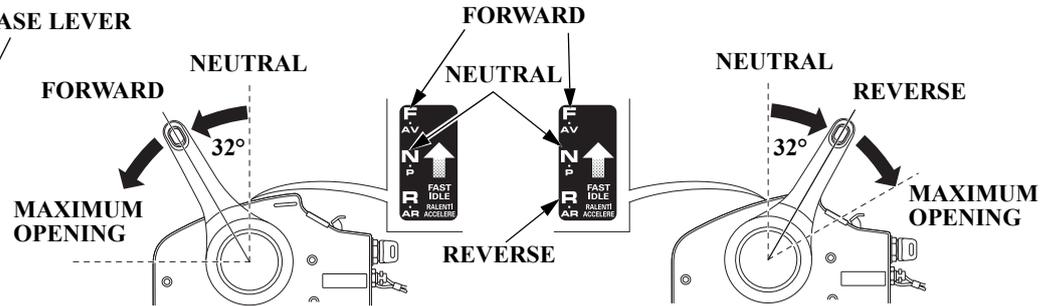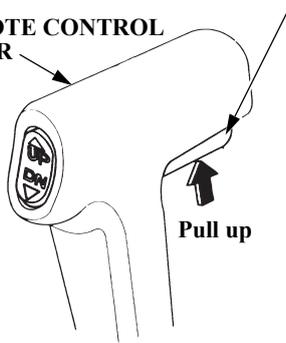

### ⚠ CAUTION

Avoid sharp and abrupt operation of the control lever. Operate it moderately. Operate the control lever and raise the engine speed after making sure that the gear was shifted securely.


While pulling the neutral release lever, move the control lever approximately 32° toward the FORWARD or REVERSE position to engage the desired gear.

Moving the control lever further from approximately 32° will increase throttle opening and boat speed.


The control lever will not move unless the neutral release lever is pulled up.

## Gear Shifting (R2 type)


REMOTE CONTROL LEVER

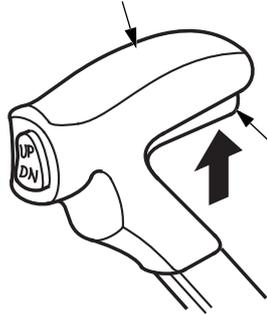

NEUTRAL RELEASE  
LEVER

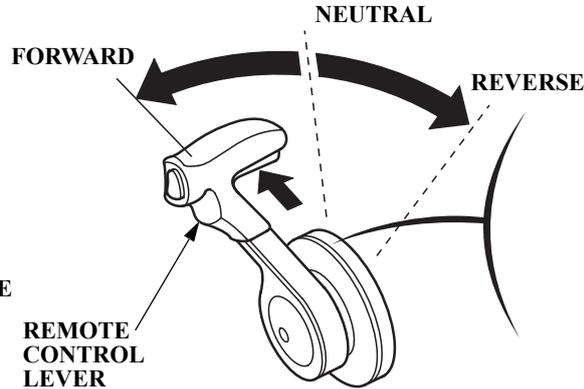

REMOTE  
CONTROL  
LEVER

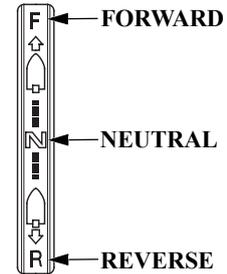

### **⚠ CAUTION**

Avoid sharp and abrupt operation of the control lever. Operate it moderately. Operate the control lever and raise the engine speed after making sure that the gear was shifted securely.

While pulling the neutral release lever, move the control lever approximately 35° toward the FORWARD or REVERSE position to engage the desired gear.


Moving the control lever further from approximately 35° will increase throttle opening and boat speed.

The control lever will not move unless the neutral release lever is pulled up.


# OPERATION

## Gear Shifting (R3 type)


SINGLE TYPE

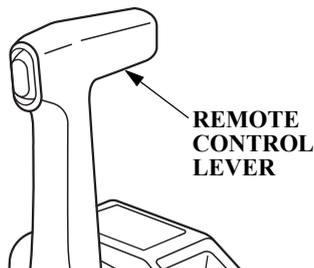

DUAL TYPE

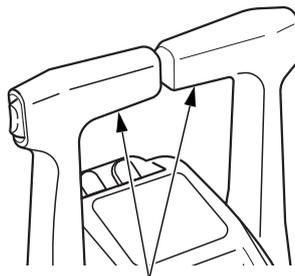

REMOTE CONTROL LEVERS

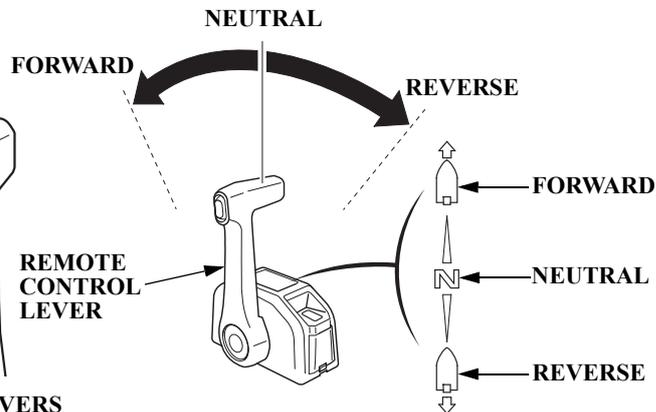

### ⚠ CAUTION

Avoid sharp and abrupt operation of the control lever. Operate it moderately. Operate the control lever and raise the engine speed after making sure that the gear was shifted securely.

Move the control lever(s) approximately 35° toward the FORWARD or REVERSE position to engage the desired gear.

When the boat is mounted with the two outboard motors, hold the control lever in the center as shown, and operate the right and left levers simultaneously.


Moving the control lever(s) further from approximately 35° will increase throttle opening and boat speed.

## Cruising

### POWER TRIM/TILT SWITCH



### POWER TRIM/TILT SWITCH

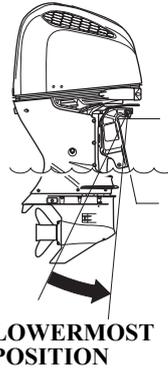


### (single type)

### POWER TRIM/ TILT SWITCH




### (dual type)

### POWER TRIM/TILT SWITCH (LEFT) (RIGHT)

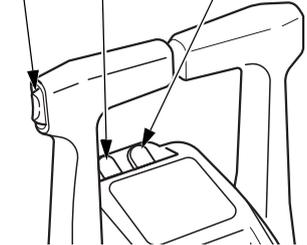


### (single type)

### POWER TRIM/TILT SWITCH

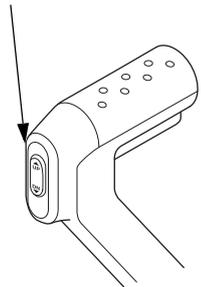


### (dual type)

### POWER TRIM/TILT SWITCH


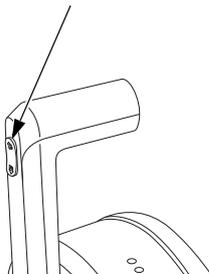


### POWER TRIM/ TILT SWITCH

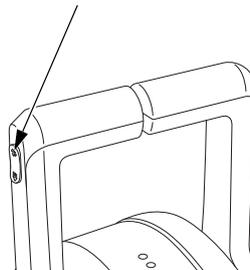

### (panel type)

### POWER TRIM/TILT SWITCH

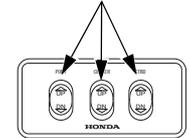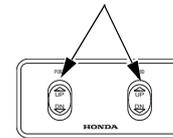

## OPERATION

---

1. Press on the DN (down) of the power trim/tilt switch and trim the outboard motor at the lowermost position.

D2 type:

When the two or more outboard motors are mounted:


- 1) Press on the DN (down) of the power trim/tilt switch on the remote control lever and trim the outboard motors at the lowermost position.
- 2) With the outboard motors trimmed at the lowermost position, adjust the trim angle of the each outboard motor using the switch on the panel.

R3 type:

When the two outboard motors are mounted:

- 1) Press on the DN (down) of the power trim/tilt switch on the remote control lever and trim the outboard motors at the lowermost position.

- 2) With the outboard motors trimmed at the lowermost position, adjust the trim angle of the right and left outboard motors using the switch on the remote control lever simultaneously.

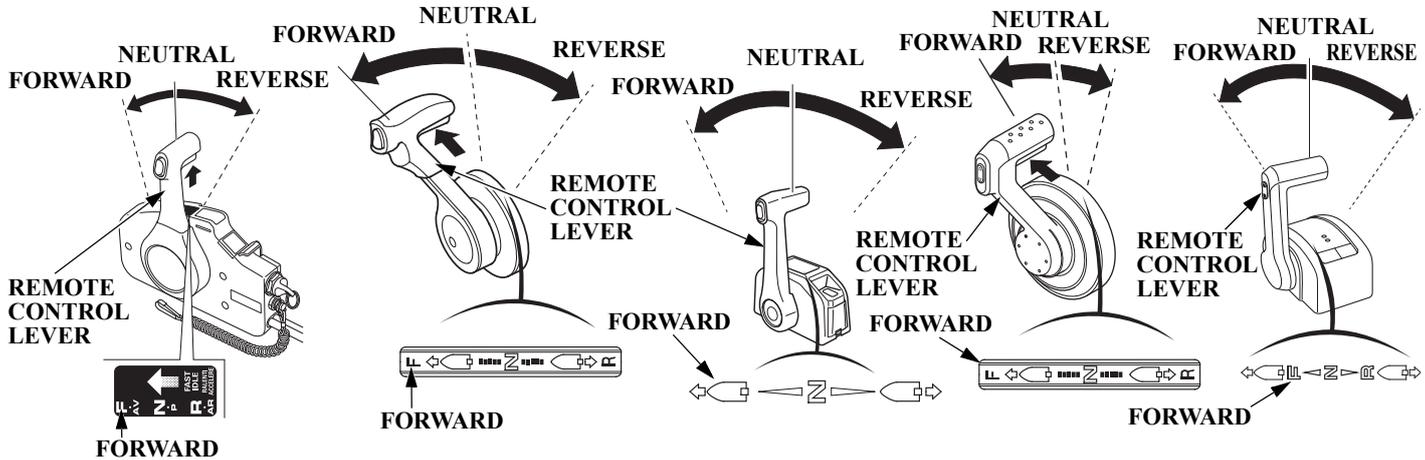

2. Move the control lever from NEUTRAL toward FORWARD position.

D1, D2 type:  
Moving about 20° engages the gear. Moving the control lever further opens the throttle and increase the boat speed.

R1 type:  
Moving about 32° engages the gear. Moving the control lever further opens the throttle and increases the engine speed.

R2, R3 type:  
Moving about 35° engages the gear. Moving the control lever further opens the throttle and increase the boat speed.

For the sake of fuel economy, open the throttle about 80%.

# OPERATION

## NOTE:

- BF175D/BF200D/BF225D:

When cruising at full throttle, note that the engine speed must be in the range between  $5,000 \text{ min}^{-1}$  (rpm) and  $6,000 \text{ min}^{-1}$  (rpm).

BF250D:

When cruising at full throttle, note that the engine speed must be in the range between  $5,300 \text{ min}^{-1}$  (rpm) and  $6,300 \text{ min}^{-1}$  (rpm).

- If you feel that the engine speed jumped up when the hull jumped or at ventilation, cruise the boat by returning the throttle to the slow speed side.
- See “Propeller Selection” (page 57) for a relation between the propeller and the engine speed.


## ⚠ CAUTION

Do not operate without the engine cover. Exposed moving parts could cause injury; water may damage the engine.

## NOTE:

For best performance, passengers and equipment should be distributed evenly to balance the boat.


## Trolling Mode

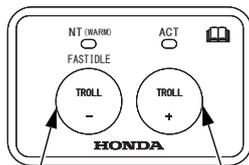

[-] SWITCH

[+] SWITCH

(ELECTRICAL REMOTE CONTROL BOX and FLUSH-MOUNT type)

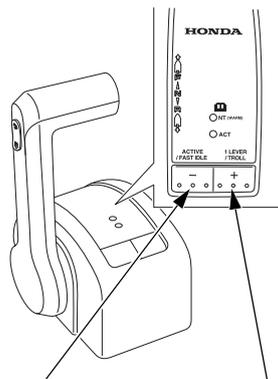

[-] SWITCH

[+] SWITCH

(ELECTRICAL REMOTE CONTROL BOX and TOP-MOUNT type)

[-] Switch: Reduce engine speed  
[+] Switch: Increase engine speed

After the engine has warmed up, keeping [+] switch pushed when cruising with the throttle fully closed, changes the mode to trolling mode.

A long buzz sounds once. When the mode is changed to trolling mode, the engine speed is  $650 \text{ min}^{-1}$  (rpm).

You can adjust the engine speed by  $50 \text{ min}^{-1}$  (rpm) every time you press the switch once. You will hear a short buzz.


The engine speed can be adjusted within the range of  $650 - 1,000 \text{ min}^{-1}$  (rpm).

Continuing to press the switch will not decrease or increase the engine speed beyond the lower ( $650 \text{ min}^{-1}$  (rpm)) or higher ( $1,000 \text{ min}^{-1}$  (rpm)) limit.

If you try to do this, a short buzz sounds twice.

The throttle may be operated while in trolling mode. The trolling mode is cancelled when you reach  $3,000 \text{ min}^{-1}$  (rpm).

## One-Lever Mode (For multiple outboard motors type)

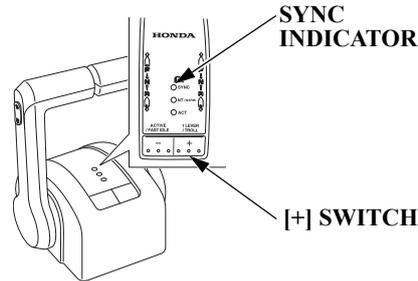


Shifting gear and the engine speed adjustment of the all outboard motors can be performed with one remote control lever when in one-lever mode.

If you press and hold the [+ ] switch when all remote control lever is in the NEUTRAL position, the mode changes to one-lever mode.

A long buzz sounds once and SYNC indicator comes on

## Trimming the Outboard Motor

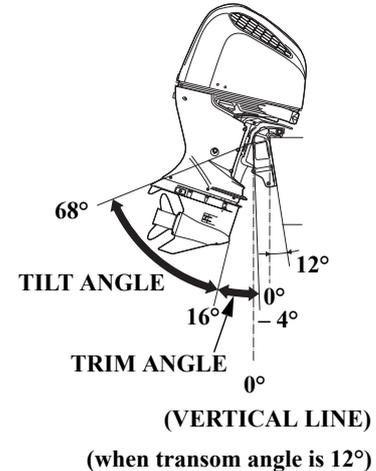


### NOTE:


For multiple outboard motors, the trim/tilt angle of all outboard motors is adjusted at the same time by using the power trim/tilt switch on the remote control lever and the trim/tilt angle of each outboard motor is adjusted by using each power trim/tilt switch on the panel.

# OPERATION


## (D1 type)

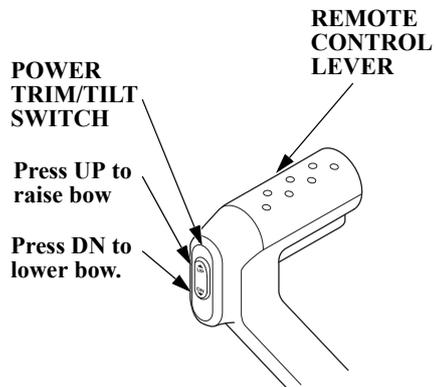

## (D2 type) (single type)

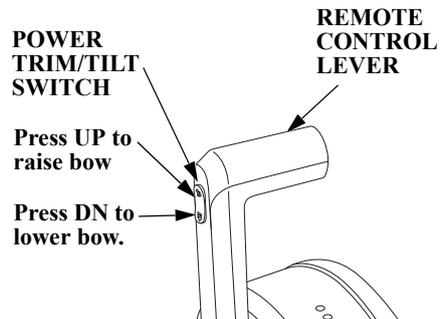


## (dual type)

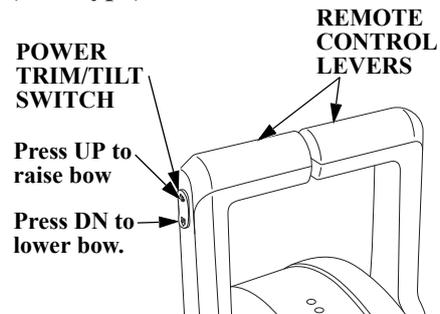


## (R1 type)

### POWER TRIM/TILT SWITCH

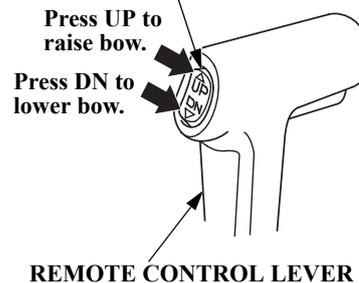



## (R2 type)

### POWER TRIM/TILT SWITCH

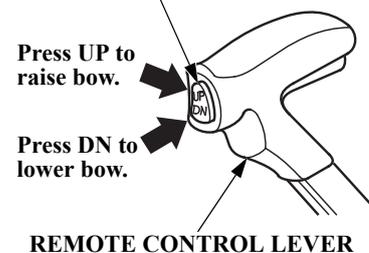



(R3 type)

## SINGLE TYPE

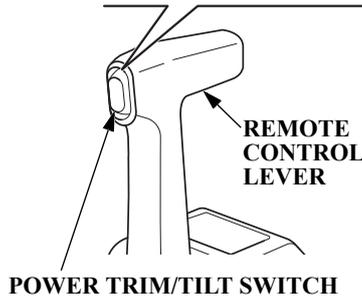

Consult an authorized Honda Outboard Motor dealer for the method to adjust the tilt limit switch. Press either UP or DN (down) of the power trim/tilt switch and tilt the outboard motor to the best position in compliance with the cruising conditions.


## DUAL TYPE

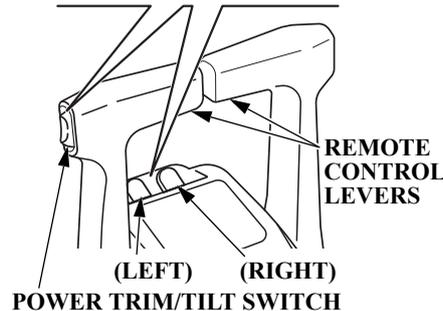

The power trim/tilt system operates when the switch is pressed, and it stops when the switch is released. To trim up slightly, press on UP momentarily but securely. To trim down slightly, press on DN (down) in the same manner.


## PTT SWITCH PANEL

### DUAL TYPE

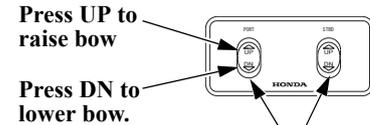

### POWER TRIM/TILT SWITCH

### TRIPLE TYPE

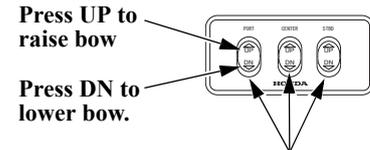

### POWER TRIM/TILT SWITCH

### NOTE:

For multiple outboard motors, the trim/tilt angle of all outboard motors is adjusted at the same time by using the power trim/tilt switch on the remote control lever and the trim/tilt angle of each outboard motor is adjusted by using each power trim/tilt switch on the panel.

# OPERATION


## ⚠ CAUTION

- Improper trim angle results in unstable steering condition.
- Do not trim excessively while cruising through rough waves, or it may cause an accident.
- Excessive trim angle can result in cavitation and racing of the propeller, and trimming up the outboard motor excessively can cause damage to the impeller pump.


### NOTE:

- Decrease the trim angle on high speed turns to reduce the possibility of propeller ventilation.
- Improper outboard motor trim angle can result in an unstable steering condition.


**OUTBOARD MOTOR TRIMMED TOO LOW**

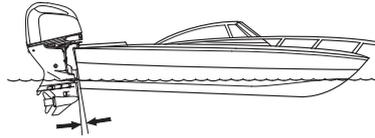

**OUTBOARD MOTOR TRIMMED TOO HIGH**

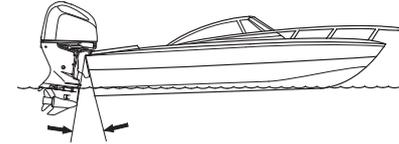

**OUTBOARD MOTOR TRIMMED CORRECTLY**

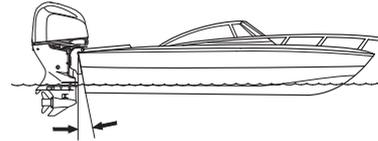

### When cruising:

- (A) Into a high wind, trim the outboard motor down slightly to lower the bow and improve boat stability.
- (B) With a tail wind, trim the outboard motor up slightly to raise the bow and improve boat stability.
- (C) Through rough waves, do not trim the outboard motor too low or too high to avoid an unstable steering condition.

## Trim Meter (optional equipment)


The trim meter indicates the trim angle of the outboard motor. Refer to the trim meter, and press the UP or DN (down) portion of the power trim/tilt switch to adjust the outboard motor trim angle to achieve boat performance and stability.

The illustration represents R1 type. Perform the same procedure for the other types.

### **▲ WARNING**


When the boat is mounted with two outboard motors, adjust with the switch on the control lever side. Adjustment with the switch on the console side will impair the balance between the right and left outboard motors, which adversely affects operationability and stability of the outboard motors.

- BOW TOO LOW DUE TO**  
**1. LOAD IN THE FRONT**  
**2. OUTBOARD MOTOR TRIMMED TOO LOW**

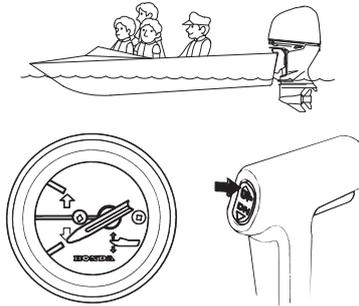

With the outboard motor trimmed low the trim meter will read as shown. To raise the bow increase the outboard motor trim angle by pressing the UP portion of the power trim/tilt switch.

- BOW TOO HIGH DUE TO**  
**1. LOAD IN THE REAR**  
**2. OUTBOARD MOTOR TRIMMED TOO HIGH**

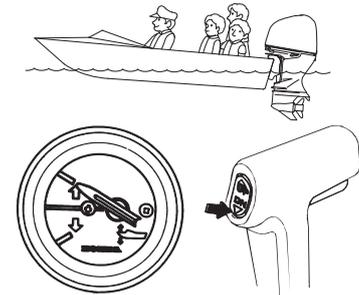

With the outboard motor trimmed high the trim meter will read as shown. To lower the bow decrease the outboard motor trim angle by pressing the DN (down) portion of the power trim/tilt switch.


# OPERATION

## Tilting the Outboard Motor

Tilt the outboard motor to prevent the propeller and gear case from hitting the bottom when the boat is beached or stopped in shallow water. Please tilt up simultaneously, when you mount the dual type outboard motor.


1. Move the shift lever or the control lever to the NEUTRAL position and stop the engine.
2. Press the UP of the power trim/tilt switch and tilt the outboard motor to the best position in compliance.

(D1 type)

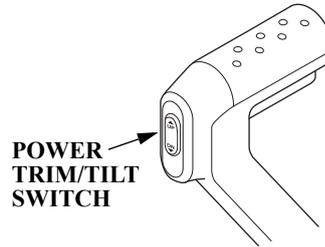


(D2 type)  
(single type)


POWER  
TRIM/TILT  
SWITCH

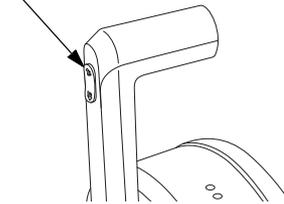

(dual type)  
POWER  
TRIM/TILT  
SWITCH

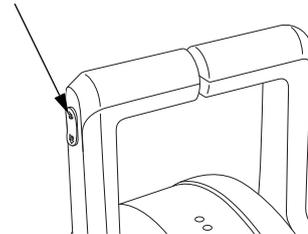


(R1 type)  
POWER TRIM/TILT SWITCH

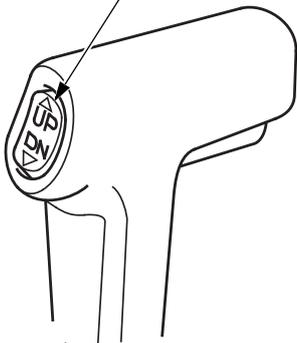


(R2 type)  
POWER TRIM/TILT SWITCH




(R3 type)  
(single type)  
POWER TRIM/TILT SWITCH

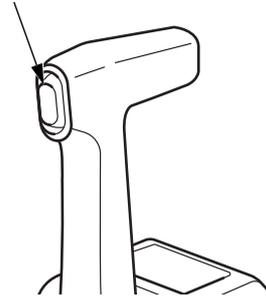

(dual type)  
POWER TRIM/TILT SWITCH  
(LEFT) (RIGHT)

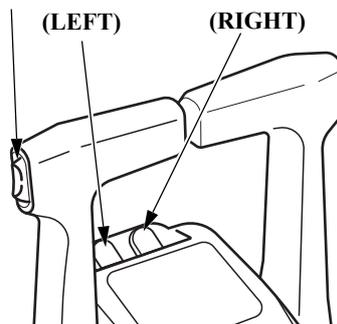


PTT SWITCH PANEL  
DUAL TYPE

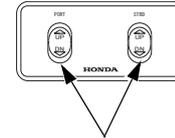

POWER TRIM/TILT SWITCH

TRIPLE TYPE

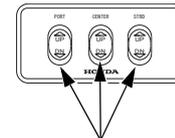


POWER TRIM/TILT SWITCH

**NOTE:**

For multiple outboard motors, the trim/tilt angle of all outboard motors is adjusted at the same time by using the power trim/tilt switch on the remote control lever and the trim/tilt angle of each outboard motor is adjusted by using each power trim/tilt switch on the panel.

# OPERATION

## Moorage

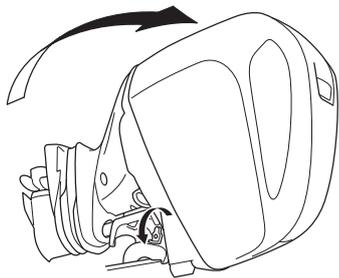


Tilt up the outboard motor using the tilt lock lever when mooring the boat. Shift the control lever into the NEUTRAL position and stop the engine before tilting up the outboard motor.

### NOTE:

Before tilting up, leave the outboard motor in the running position for one minute after stopping the engine to drain the water from inside the engine.


Stop the engine and disconnect the fuel line from the outboard motor before tilting the outboard motor.

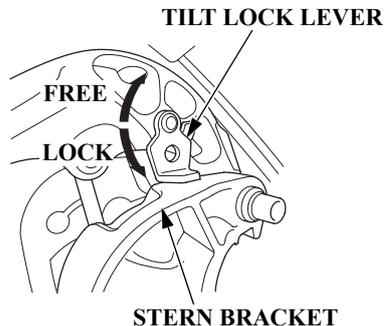

1. Raise the outboard motor as full as it goes using the power trim/tilt switch.
2. Move the tilt lock lever to the LOCK position and lower the outboard motor until the lock lever contacts the stern bracket.
3. Press the DN (down) of the power trim/tilt switch and fully shorten the trim rods.
4. To tilt down, raise the outboard motor slightly, move the tilt lock lever to the FREE position.


### NOTE:

After tilting down the outboard motors, adjust the trim angle of the right and left outboard motors.

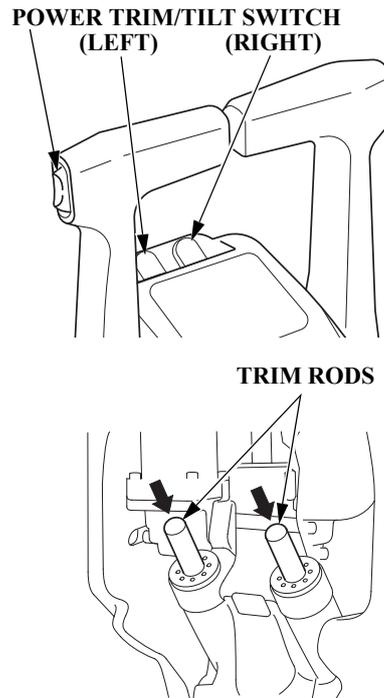

## Power Tilt Switch

### POWER TILT SWITCH

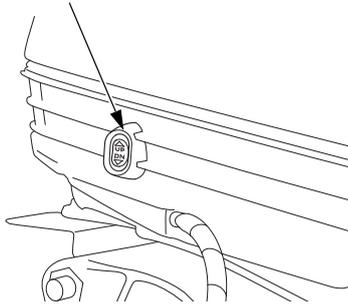


When you are away from the power trim/tilt switch on the control lever side, you can operate the power trim/tilt switch on the outboard motor side. The switch operation is the same as that of the switch on the control lever side.

### ⚠ CAUTION

Do not operate this power tilt switch on the outboard motor while sailing.

## Manual Relief Valve

### MANUAL RELIEF VALVE

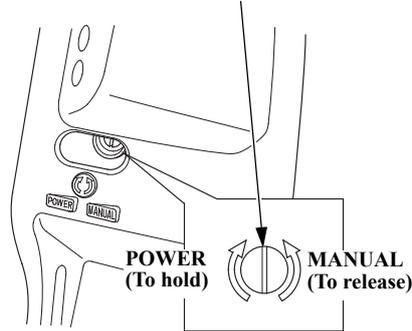

When power trim/tilt system does not operate because of dead battery or faulty power trim/tilt motor, the outboard motor can be manually tilted up or down by operating the manual relief valve.

To tilt the outboard motor manually, turn the manual relief valve under the stern bracket 1 or 2 turns counterclockwise using a screwdriver.

Check that no person is under the outboard motor before carrying out this operation because if the manual relief valve is loosened (turned counterclockwise) when the outboard motor is tilted up, the outboard motor will suddenly tilt down.


After tilting up/down manually, close the manual relief valve to lock the outboard motor in the position.

### ⚠ CAUTION

The manual relief valve must be tightened securely before operating the outboard motor or the outboard motor could tilt when operating in reverse.

# OPERATION

## Trim Tab Adjustment

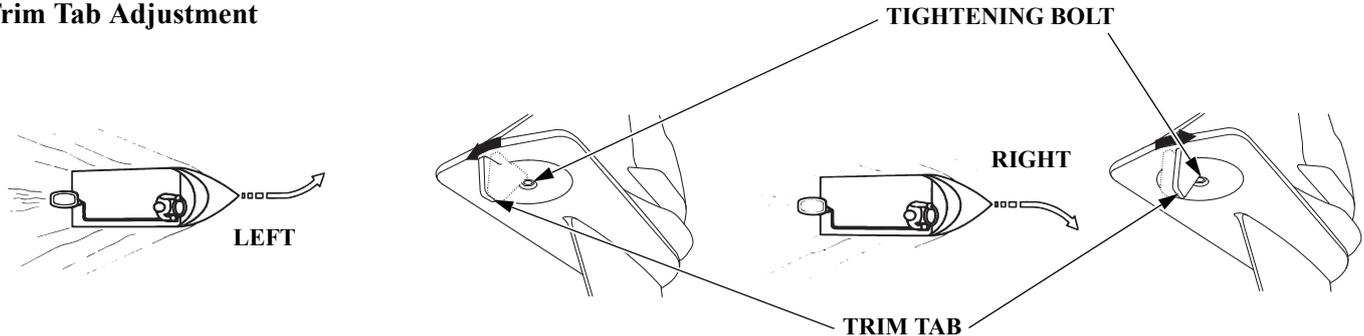

The trim tab is provided to adjust for “torque steer” which is a reaction of the propeller rotation or propeller torque. If during a high speed turn an unequal amount of effort is required to turn the boat right or left, adjust the trim tab so that an equal amount of effort is required.

Distribute the load evenly in the boat and run the boat in a straight course at full throttle. Slightly turn the steering wheel for both right and left turns to determine the amount of effort required.

If less effort is required to make left turns:

Loosen the trim tab tightening bolt and turn the rear end of the trim tab toward the left. Tighten the bolt securely.

If less effort is required to make right turns:


Loosen the trim tab tightening bolt and turn the rear end of the trim tab toward the right. Tighten the bolt securely.

Make small adjustments at a time and retest. Incorrect trim tab adjustment can cause adverse steering.


### NOTICE

**Painting or coating the anode will lead to rust and corrosion damage to the outboard motor.**


## Engine Protection System <Engine Oil Pressure, Overheat, Water Separator, PGM-FI and ACG Warning Systems>

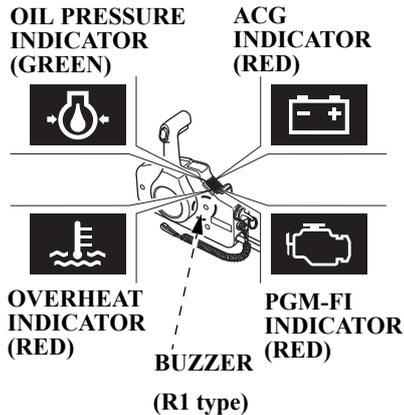

If the engine oil pressure drops and/or the engine overheats, either or both warning systems could be activated. When activated the engine speed will decrease gradually and the green oil pressure indicator will turn OFF and the red overheat indicator will turn ON. A continuous buzzer will sound

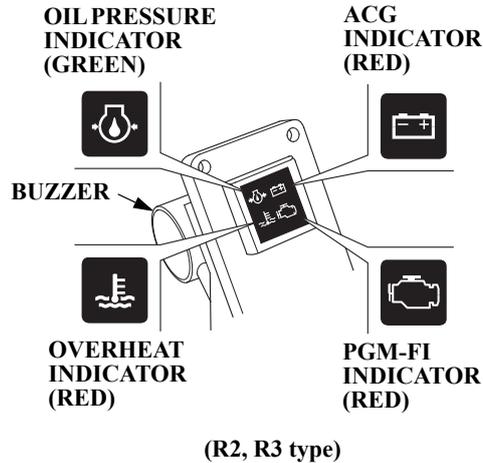

on all type. The engine speed can not be increased with a larger throttle opening until the malfunction is corrected. When the malfunction is corrected the engine speed will increase gradually.

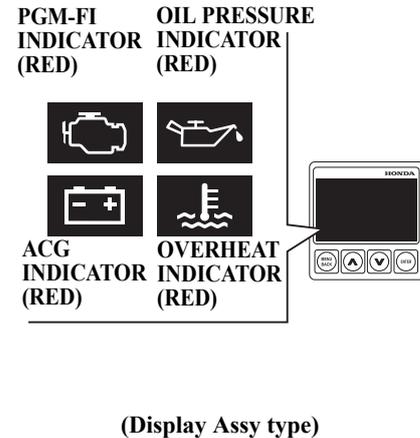

If the engine overheats, the engine will stop in 20 seconds after the engine protection system will limit engine speed. Each warning system of PGM-FI, ACG, oil pressure, overheat, and water separator is activated as described in the following table.

# OPERATION

(R1, R2, R3 type)

Symptom \ System	INDICATOR				BUZZER
	Oil pressure (Green)	Overheat (Red)	ACG (Red)	PGM-FI (Red)	CORRESPONDING SYSTEM
At starting	ON (2 sec)	ON (2 sec)	ON	ON (2 sec)	With the engine key turned on: ON (2 times)
During operation	ON	OFF	OFF	OFF	OFF
Low oil pressure	OFF	OFF	OFF	OFF	ON (continuously)
Overheat	ON	ON	OFF	OFF	ON (continuously)
ACG warning	ON	OFF	ON	OFF	alternating ON and OFF (at long intervals)
PGM-FI warning	ON*	OFF*	OFF	ON	alternating ON and OFF (at long intervals)
Water contamination	ON	OFF	OFF	OFF	alternating ON and OFF (at short intervals)

**NOTE:**

Some indicator and/or buzzer will be activated at the same time due to the occurrence of a malfunction.

\*: Occasionally may blink due to the occurrence of a malfunction.

## (Display Assy type)

System Symptom	INDICATOR				BUZZER	WARNING LEVEL	Power Reduction*
	Oil pressure (Red)	Overheat (Red)	ACG (Red)	PGM-FI (Red)	CORRESPONDING SYSTEM		
During operation	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Low oil pressure	ON	OFF	OFF	OFF	ON (continuously)	 Warning level 1	ON
Overheat	OFF	ON	OFF	OFF	ON (continuously)	 Warning level 1	ON
ACG warning	OFF	OFF	ON	OFF	alternating ON and OFF (at long intervals)	 Warning level 2	OFF
PGM-FI warning	OFF	OFF	OFF	ON	alternating ON and OFF (at long intervals)	 Warning level 2	OFF
Water contamination	OFF	OFF	OFF	OFF	alternating ON and OFF (at short intervals)	 Warning level 2	OFF

**NOTE:**

Some indicator and/or buzzer will be activated at the same time due to the occurrence of a malfunction.

\*: Refer to 106 page about power reduction.

## OPERATION

---

When the oil pressure warning system is activated:


1. Stop the engine immediately and check the engine oil level (see page 60).
2. If the oil is up to the recommended level, restart the engine. If the oil pressure warning system stops after 30 seconds, the system is normal.

### NOTE:

If the throttle was closed suddenly after cruising at full throttle, the engine speed may drop below the specified idle speed. This could cause the oil pressure warning system to activate momentarily.

3. If the oil pressure warning system stays activated after 30 seconds, return to the closest boat landing and contact your closest authorized outboard motor dealer.

### COOLING WATER CHECK HOLE

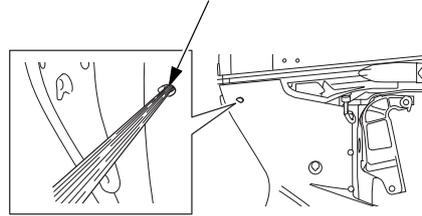


When the overheat warning system is activated:

1. Return the gearshift lever or control lever to the N (neutral) position immediately. Check to see if water is flowing out of the cooling water check hole.
2. If water is flowing out of the cooling water check hole, continue idling for 30 seconds. If the overheat warning system stops after 30 seconds the system is normal.

### NOTE:

If the engine is turned off after running at full throttle, the engine temperature may rise above normal. If the engine is restarted, shortly after being turned off, the overheat warning system could be activated momentarily.

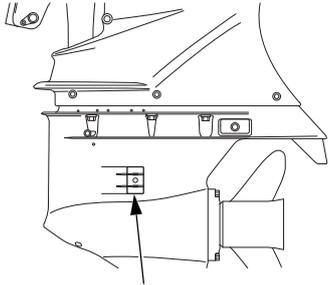

**COOLING WATER INTAKE PORT  
(each side)**


3. If the overheat warning system stays activated, stop the engine. Tilt up the outboard motor and check the water intakes for obstructions. If there are no obstructions at the water intakes, return to the closest boat landing and contact your closest authorized outboard motor dealer.

When the PGM-FI activated:

1. Consult with an authorized Honda outboard motor dealer.

When the ACG warning system is activated.

1. Check the battery (see page 130). If the battery is OK, consult with an authorized Honda outboard motor dealer.

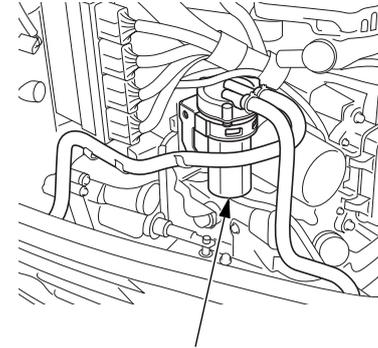

**WATER SEPARATOR**

When the water separator buzzer sounds:

1. Check the water separator for water contamination. If water is accumulated, drain them (see page 127).

# OPERATION


## <Over-rev Limiter>

This outboard motor is equipped with an engine over-rev limiter which activates when the engine speed increases excessively. The over-rev limiter can be activated while cruising, tilting up the outboard motor, or when ventilation occurs during a sharp turn.

When the over-rev limiter is activated:

1. Reduce the throttle opening immediately and check the trim angle.
2. If the trim angle is correct but the over-rev limiter stays activated, stop the engine, check the condition of the outboard motor, check to see if the correct propeller is installed and check it for damage.  
Correct or service as necessary, by contacting your authorized outboard motor dealer.

## <Anode>

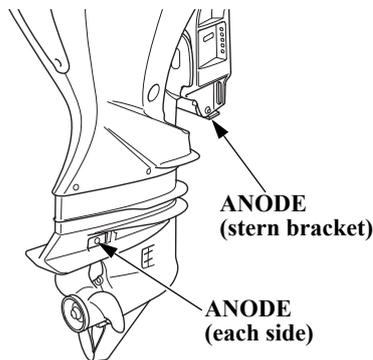


The anode is a sacrificial material which helps to protect the outboard motor from corrosion.

### NOTICE

**Painting or coating the anode will lead to rust and corrosion damage to the outboard motor.**

There are also 4 small sacrificial anodes in the water passages of the engine block.

## <Power Reduction>

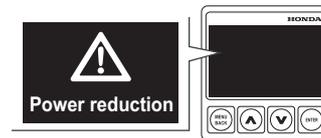

This outboard motor is equipped with the power reduction system which activates when the outboard motor has a serious problem.

The power reduction system decreases the engine speed to protect engine until the malfunction is corrected.

When one of the two systems of the remote control sensor is faulty, the power reduction system does not decrease the engine speed.

## Shallow Water Operation

### NOTICE

**Excessive trim/tilt angle during operation can cause the propeller to raise out of the water and cause propeller ventilation and engine over-revving. Excessive trim/tilt angle can also damage the water pump and overheat the engine.**

When operating in shallow water, tilt the outboard motor up to prevent the propeller and gear case from hitting the bottom (see page 96). With the outboard motor tilted up, operate the outboard motor at low speed.

Monitor the cooling water check hole for water discharge. Be sure that the outboard motor is not tilted so high that the water intakes are out of the water.

## Multiple Outboard Motors


On boats equipped with more than one outboard motor, all motors normally operate at the same time.

If one or more motor(s) is stopped while the other(s) is running, put the stopped motor in “N” (neutral) and tilt it up so its propeller is above the water’s surface.


If the propeller of the stopped motor is left in the water, it may turn as the boat moves through the water, causing a reverse flow of water from the exhaust side. This reverse flow will happen if the stopped engine’s propeller is in the water, its gearshift is in “R” (reverse), and the boat is moving forward. Reverse flow can cause an engine malfunction.

## 9. STOPPING THE ENGINE

### Emergency Engine Stop (D1, D2 types)

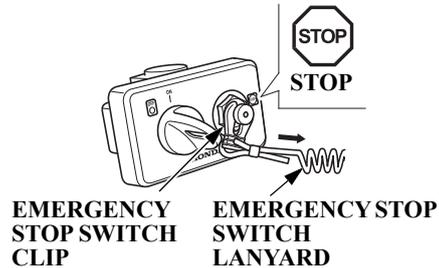

(R1 type)

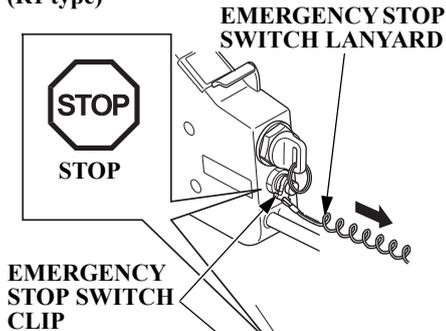

(R2, R3 type)

EMERGENCY STOP SWITCH LANYARD

Pull the curl cord of the emergency stop switch and remove the lock plate from the switch; this will stop the engine.

#### NOTE:

It is a good idea to stop the engine with the emergency stop switch lanyard from time to time to be sure that the emergency stop switch is operating properly.



### Normal Engine Stop (D1, D2 type)

1. Move the shift lever to NEUTRAL position.


#### NOTE:

After sailing with the throttle fully open, cool down the engine by running it at the idle speed for a few minutes.

# STOPPING THE ENGINE

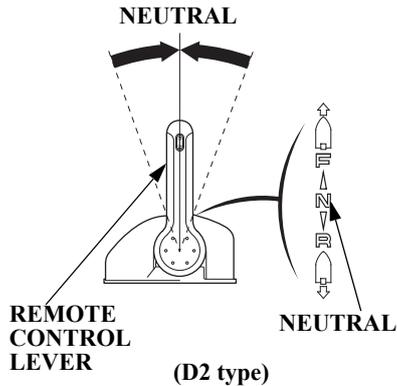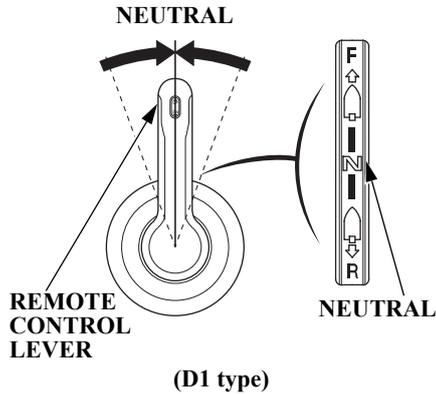

## START/STOP SWITCH

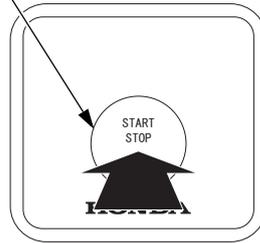


2. Push the start/stop switch to stop the engine.

### NOTE:

In the event that the engine does not stop when the start/stop switch is pushed, disconnect the fuel line connector from the outboard motor.

## (Normal Key type) (Honda Smart Key type)

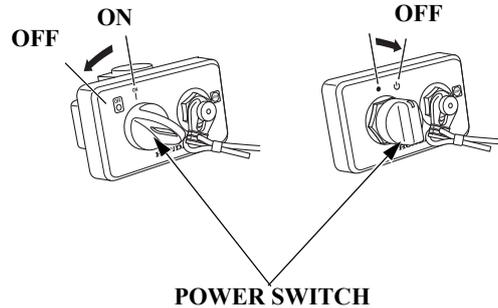

### (Normal Key type)

3. Turn the power switch key to the OFF position, and then remove and store it.

### (Honda Smart Key type)






3. Turn the power switch to the right or press the lock button on the Honda Smart Key to turn the power OFF.

If you are using a portable fuel tank, disconnect the fuel line if you will be storing or transporting the outboard motor.

# STOPPING THE ENGINE

## Normal Engine Stop

(D1, D2 without START/STOP Switch type)  
(R1, R2, R3 type)

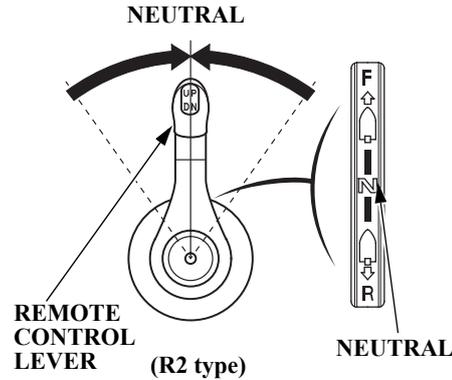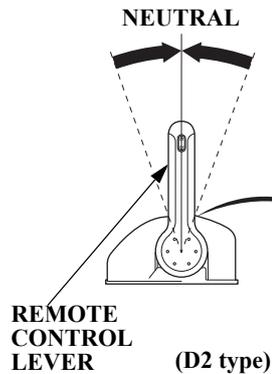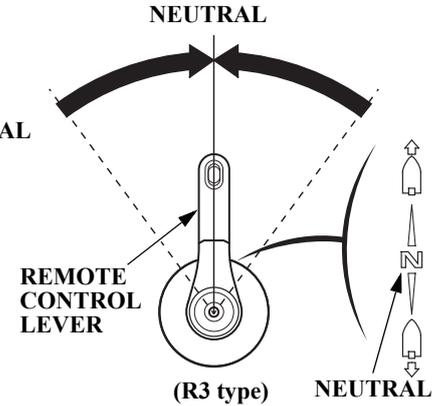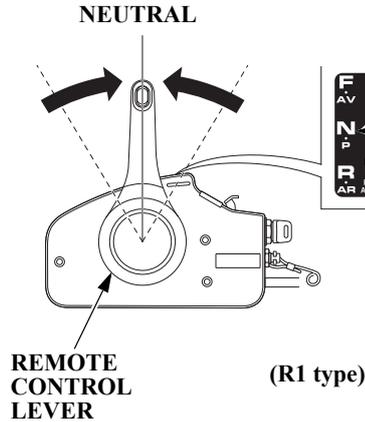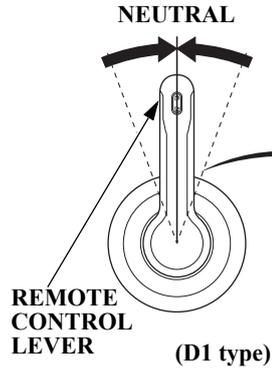


1. Move the shift lever to NEUTRAL position.


### NOTE:

After sailing with the throttle fully open, cool down the engine by running it at the idle speed for a few minutes.

## STOPPING THE ENGINE

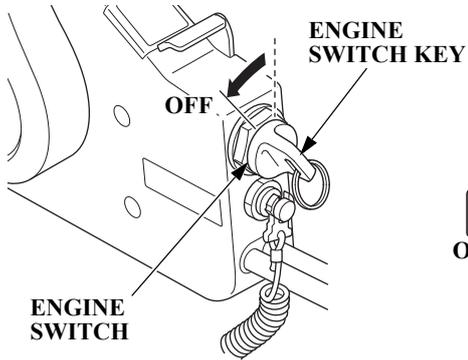

(R1 type)

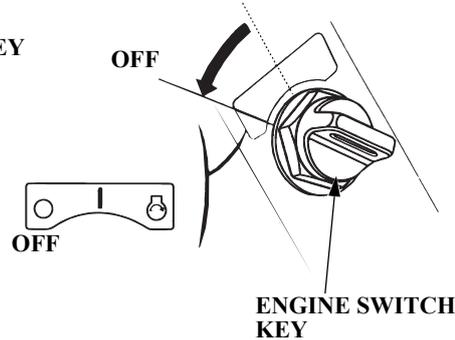

(D1, D2 without START/STOP Switch type)  
(R2, R3 type)

2. Turn the engine switch key to the OFF position to stop the engine.

### NOTE:

In the event that the engine does not stop when the engine switch is turned to OFF, disconnect the fuel line connector from the outboard motor.

3. Remove the engine switch key and store it.

If you are using a portable fuel tank, disconnect the fuel line if you will be storing or transporting the outboard motor.

# 10. TRANSPORTING

## Fuel Line Disconnection


Before transporting the outboard motor, disconnect and remove the fuel line.

### ▲ WARNING

Gasoline is extremely flammable, and gasoline vapor can explode, causing serious injury or death.


- Be careful not to spill fuel. Spilled fuel or fuel vapor may ignite. If any fuel is spilled, make sure the area is dry before storing or transporting the outboard motor.
- Do not smoke or allow flames or sparks where fuel is drained or stored.

## Transporting

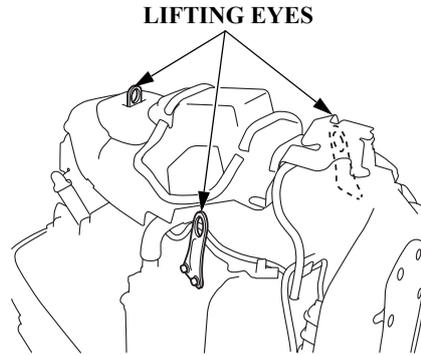


When transporting the outboard motor on a vehicle, perform the following.

1. Remove the engine cover (see page 58).

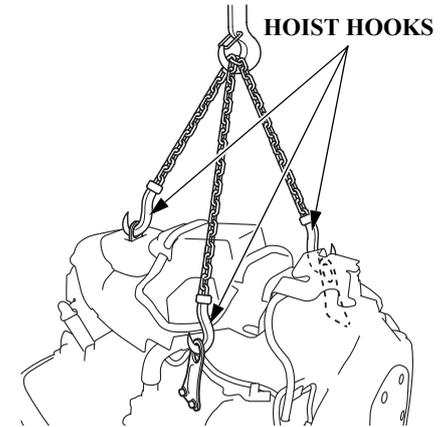

2. Set the hoist hooks against the lifting eyes and hang the outboard motor to remove it from the boat.

## OUTBOARD MOTOR STAND

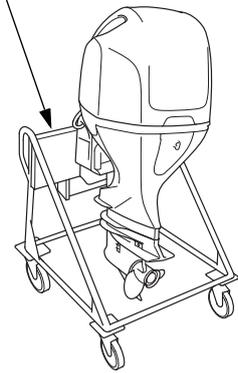

3. Secure the outboard motor on an outboard motor stand with the mounting bolts and nuts.
4. Remove the hoist hook and reinstall the engine cover (see page 58).

## Trailer

When trailering or transporting the boat with the outboard motor attached, it is recommended that the outboard motor remain in normal running position.

### NOTICE

**Do not trailer or transport the boat with the outboard motor in the tilted position. The boat or outboard motor could be severely damaged if the outboard motor drops.**

The outboard motor should be trailered in the normal running position. If there is insufficient road clearance in this position, then trailer the outboard motor in the tilted position using an outboard motor support device such as a transom saver bar, or remove the outboard motor from the boat.

# 11. CLEANING AND FLUSHING

After each use in salt water or dirty water, thoroughly clean and flush the outboard motor with fresh water.


## NOTICE

**Do not apply water or corrosion inhibitor directly to the electrical components under the engine cover, such as the AC generator, or the AC generator belt, timing belt. If water or corrosion inhibitor penetrates these components, they may be damaged. Before applying a corrosion inhibitor, cover the AC generator and belts with a protective material to prevent damage.**


Shut off the engine before performing the cleaning and flushing.

1. Disconnect the fuel line from the outboard motor.
2. Tilt down the outboard motor.
3. Wash the outside of the outboard motor with clean, fresh water.

## FLUSH PLUG CONNECTOR

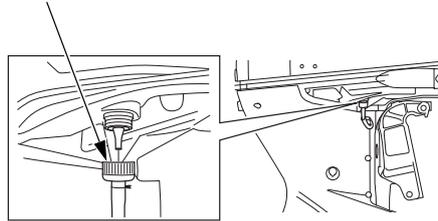

4. Remove the flush plug connector from the outboard motor.
5. Install the water hose joint (commercially available).

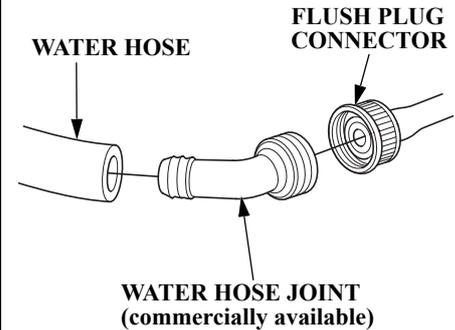

6. Connect a fresh water hose to the water hose joint.
7. Turn on the fresh water supply to the hose and flush the engine for at least 10 minutes.
8. After flushing, remove the water hose and water hose joint and reinstall the flush plug connector.
9. Tilt up the outboard motor and move the tilt lock lever to the LOCK position.

Periodic maintenance and adjustment are important to keep the outboard motor in the best operating condition. Service and inspect according to the MAINTENANCE SCHEDULE.

### **▲ WARNING**

- Shut off the engine before performing any maintenance. If the engine must be run, make sure the area is well ventilated. Never run the engine in an enclosed or confined area. Exhaust contains poisonous carbon monoxide gas; exposure can cause loss of consciousness and may lead to death.
- Be sure to reinstall the engine cover, if it was removed, before starting the engine.

### **NOTICE**

- **If the engine must be run, make sure there is water at least 100 mm (4 in) above the anticavitation plate, otherwise the water pump may not receive sufficient cooling water, and the engine will overheat.**
- **Use only Honda Genuine parts or their equivalents for maintenance or repair. The use of replacement parts which are not of equivalent quality may damage the outboard motor.**

# MAINTENANCE

## Tool Kit and Spare Parts (Tool Kit does not come with Counter Rotation Types)

The following tools and owner's manual are supplied with the outboard motor for maintenance, adjustment, and emergency repairs.

### <Spare Emergency Stop Switch Clip>

A spare emergency stop switch clip is available from your outboard motor dealer.


Always carry a spare emergency stop switch clip onboard. The spare clip may either be stored in the tool bag or in an easily accessible location on the boat.



OWNER'S MANUAL



TOOL BAG



10 mm BOX WRENCH




PHILLIPS SCREWDRIVER




GRIP



6 mm HEX.  
WRENCH



19 mm EYE WRENCH



SPARK PLUG  
WRENCH

## MAINTENANCE SCHEDULE

ITEM	REGULAR SERVICE PERIOD (3) Perform at every indicated month or operating hour interval, whichever comes first.		Each use	After use	First month or 20 hrs.	Every 6 months or 100 hrs.	Every year or 200 hrs.	Every 2 years or 400 hrs.	Every 3 years or 600 hrs.	Every 6 years or 1200 hrs.	Refer to page
Engine oil	Check level		o								60
	Change				o	o					119
Engine oil filter	Replace						o (2)				—
Gear case oil	Change				o (2)	o (2)					—
Timing belt	Check-adjust						o (2)				—
ACG belt	Check-adjust						o (2)				—
Throttle linkage and Control Cable (10)	Check-adjust				o (2)	o (2)					—
Valve clearance	Check-adjust						o (2)				—
Spark plug (nickel)	Check-adjust/Replace					o					121
Spark plug (iridium)	(Optional part) Check						o				—
	(Optional part) Clean						o (2)				—
	(Optional part) Replace							o			—
Propeller and Cotter pin	Check		o				o				63
Anode metal (Outside engine) (6)	Check		o				o				67
Anode metal (Inside engine) (6)	Sleeve Check							o (2)			—
	Exhaust manifold Check							o (2)			—
	V bank bottom Replace									o (2)	—
Idling speed	Check-adjust				o (2)	o (2)					—
Lubrication	Grease				o (1)	o (1)					125
Fuel filter with water separator (Low pressure side)	Check		o			o					126
	Replace							o			128

**NOTE:**

- (1) Lubricate more frequently when used in salt water.
- (2) These items should be serviced by your servicing dealer, unless you have the proper tools and <are> mechanically proficient. Refer to the Honda Shop Manual for service procedures.
- (3) For professional commercial use, log hours of operation to determine proper maintenance intervals.
- (6) When there is 1/3 or more consumption, please exchange.
- (10) Mechanical Remote Control type only.

# MAINTENANCE

ITEM	REGULAR SERVICE PERIOD (3) Perform at every indicated month or operating hour interval, whichever comes first.	REGULAR SERVICE PERIOD (3)								
		Each use	After use	First month or 20 hrs.	Every 6 months or 100 hrs.	Every year or 200 hrs.	Every 2 years or 400 hrs.	Every 3 years or 600 hrs.	Every 6 years or 1200 hrs.	Refer to page
Fuel filter (High pressure side)	Replace					o (2)				—
Thermostat and thermostat cover	Check/Replace					o (2)				—
Fuel line	Check	o (8)								67
	Replace	Every 2 years (if necessary) (2) (9)								—
Battery and cable connection	Check level-tightness	o								66, 130
Bolts and Nuts	Check-tightness			o (2)	o (2)					—
Crankcase breather tube	Check					o (2)				—
Cooling water passages	Clean		o (4)		o (4)					—
Coolant leak	Check	o								136
Water pump and Woodruff Key	Check					o (2)				—
Housing, Impeller	Check					o (2)				—
Emergency stop switch	Check	o								40
Engine oil leak	Check	o								—
Each operation part	Check	o								—
Engine condition (5)	Check	o								—
Power Trim/Tilt	Check				o (2)					—
Shift Cable (10)	Check-adjust			o (2)	o (2) (7)					—

## NOTE:

- (2) These items should be serviced by your servicing dealer, unless you have the proper tools and <are> mechanically proficient. Refer to the Honda Shop Manual for service procedures.
- (3) For professional commercial use, log hours of operation to determine proper maintenance intervals.
- (4) When operating in salt water, turbid or muddy water, the engine should be flushed with clean water after each use.
- (5) Upon starting, check for unusual engine sounds and cooling water flowing freely from the check hole.
- (7) The user who performs shift operation frequently will recommend you exchange of a shift cable around three years.
- (8) Check the fuel line for leaks, cracks, or damage. If it is leaking, cracked, or damaged, take it to your servicing dealer for replacement before using your outboard.
- (9) Check the fuel line for leaks, cracks, or damage. Replace the fuel line if there are signs of leaks, cracks, or damage.
- (10) Mechanical Remote Control type only.

## Engine Oil

Insufficient or contaminated engine oil adversely affects the service life of the sliding and moving parts.

### Oil change interval:

20 operating hours after the date of purchase or first month for initial replacement, then every 100 operating hours or 6 months.


### Oil capacity:

7.6 L (8.0 US qt, 6.7 Imp qt) ...when oil filter is not replaced.  
7.8 L (8.2 US qt, 6.9 Imp qt) ...when oil filter is replacement.

### Recommended Oil:


SAE 10W-30 engine oil or equivalent, API Service category SG, SH, SJ or SL.

## Engine Oil Replacement

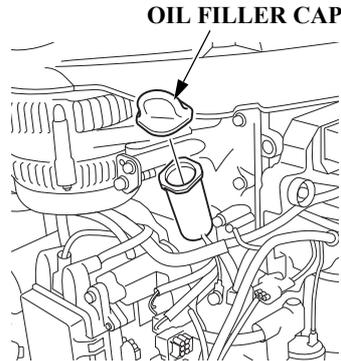

Drain the oil while the engine is still warm to assure rapid and complete draining.

1. Position the outboard motor vertically, and remove the engine cover (see page 58). Remove the oil filler cap.

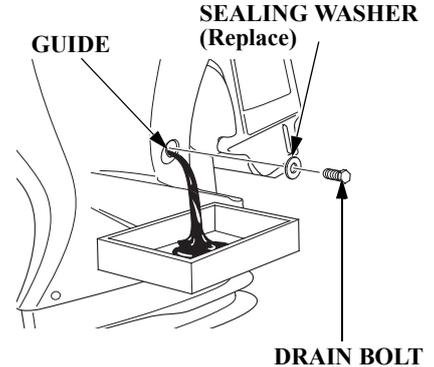

2. Place a suitable container under the guide.
3. Remove the engine oil drain bolt and sealing washer using the 12 mm wrench and drain the engine oil.

Install a new sealing washer and drain bolt, and tighten bolt securely.


### TIGHTENING TORQUE:

23 N·m (2.3 kgf·m, 17 lbf·ft)

# MAINTENANCE


---

**OIL LEVEL DIPSTICK**

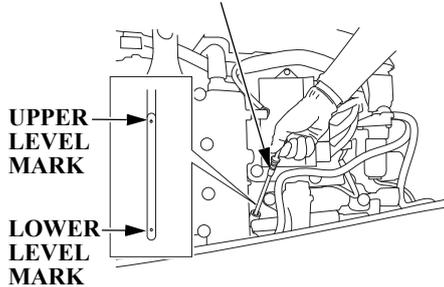

4. Refill to the upper level mark on the oil level dipstick with the recommended oil.

**OIL FILLER CAP**

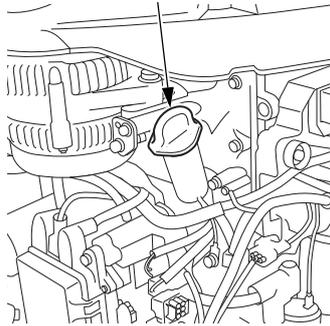

5. Insert the dipstick all the way in.  
Reinstall the oil filler cap securely.  
Do not overtighten.

**NOTE:**

Please dispose of used outboard motor oil in a manner that is compatible with the environment. We suggest you take it in a sealed container to your local service station for reclamation. Do not throw it in the trash or pour it on the ground.

Wash your hands with soap and water after handling used oil.

## Spark Plugs

To ensure proper engine operation, the spark plug must be properly gapped and free of deposits.

### **⚠ CAUTION**

The spark plug becomes very hot during operation and will remain hot for a while after stopping the engine. Allow the engine to cool before servicing the spark plug.

### **Check-clean/Replace interval:**

Every 100 operating hours or 6 months.

### **Recommended spark plug:**


ZFR6K-11E (NGK)

### **NOTICE**


**Use only the recommended spark plugs or equivalent. Spark plugs which have an improper heat range may cause engine damage.**

1. Disconnect the battery negative (-) terminal.
2. Unlock and remove the engine cover (see page 58).

# MAINTENANCE

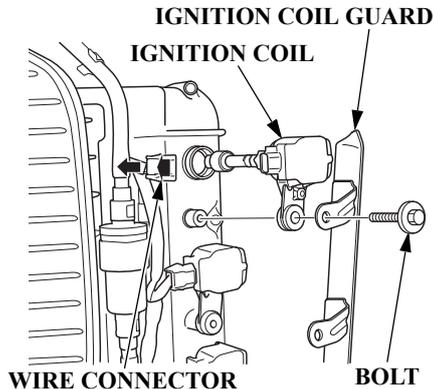


3. Disconnect the wire connector from the ignition coil by pushing on the lock tab and pulling on the connector. Pull on the plastic connector, not the wires.
4. Use a 10 mm wrench to remove all three bolts holding the ignition coils, and then remove the ignition coil guard. Remove the ignition coil by pulling it up slightly. Take care not give an impact or drop the ignition coil. Replace the ignition coil if drop it.

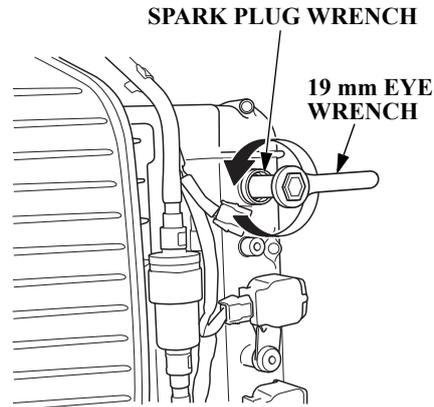


5. Use the spark plug wrench and 19 mm eye wrench to remove the spark plugs.


New plug

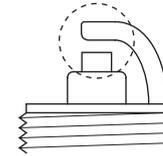

Plug needing replacement

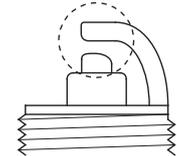

6. Inspect the spark plugs.
  - (1) If the electrodes are heavily corroded or carbon-soiled, clean with a wire brush.
  - (2) Replace a spark plug if the central electrode is worn. The spark plug can wear out in different ways. If the sealing washer shows signs of wear, or if the insulators are cracked or chipped, replace the spark plugs.

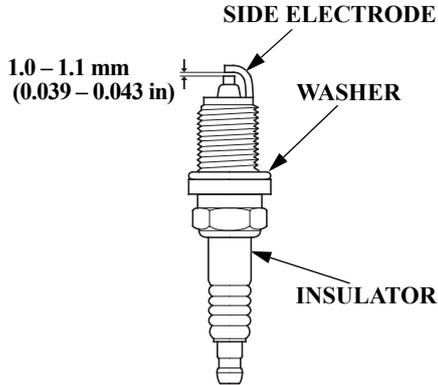

7. Measure the plug gaps with a feeler gauge. Correct the gap, if necessary, by carefully bending the side electrode.  
The gaps should be: 1.0 – 1.1 mm (0.039 – 0.043 in)
8. Thread the plugs in by hand to prevent cross threading.
9. After the spark plugs are seated, tighten with a spark plug wrench to compress the washers.

### TIGHTENING TORQUE:

18 N·m (1.8 kgf·m, 13 lbf·ft)

### NOTE:

If installing new spark plugs, tighten 1/2 turn after the spark plug seats to compress the washers.  
If reinstalling used spark plugs, tighten 1/8 – 1/4 turn after the spark plug seats to compress the washers.


### NOTICE

**The spark plugs must be securely tightened. An improperly tightened plug can become very hot and may cause engine damage.**

10. Install the ignition coil and the ignition coil guard. Reinstall the bolts.

### NOTICE

**Check the left and right side of the ignition coil guard before installing them. If you install the wrong side, the ignition coil may be damaged.**

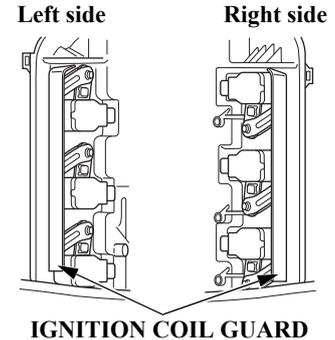

11. Push the wire connector onto the ignition coil. Make sure it locks in place.
12. Repeat this procedure for the other five spark plugs.
13. Reinstall the engine cover.

# MAINTENANCE

## Spark Plugs

### <Optional Parts: Iridium Spark Plug>

To ensure proper engine operation, the spark plug must be properly gapped and free of deposits.

#### **⚠ CAUTION**

The spark plug becomes very hot during operation and will remain hot for a while after stopping the engine. Allow the engine to cool before servicing the spark plug.

#### **Check/Clean interval:**

Every 200 operating hours or every year.

#### **Replace interval:**

Every 400 hours or 2 years

#### **Recommended spark plug:**

IZFR6K-11E (NGK)

#### **NOTICE**

**Use only the recommended spark plugs or equivalent. Spark plugs which have an improper heat range may cause engine damage.**

Installation and removal procedure of the Iridium spark plugs are the same as the standard spark plugs.

These spark plugs have an iridium coated center electrode. Be sure to observe the following when servicing iridium spark plugs.

- Do not clean the spark plugs. If an electrode is contaminated with accumulated objects or dirt, replace the spark plug with a new one. The cleaning of the iridium spark plugs consult with your servicing dealer, unless the owner has the proper tools and is mechanically proficient.

- Use only a “wire-type feeler gauge” to check the spark plug gap if necessary. To prevent damaging the iridium coating of the center electrode, never use a “leaf-type feeler gauge.”  
The gaps should be 1.0 – 1.1 mm (0.039 – 0.043 in).
- Do not adjust the spark plug gap. If the gap is out of specification, replace the spark plug with a new one.

## Lubrication


Wipe the outside of the engine with a cloth dipped in clean oil. Apply marine anticorrosion grease to the following parts:

### Lubrication interval:

20 hours or a month after the date of purchase for initial lubrication, then every 100 hours or 6 months.


### NOTE:

- Apply anticorrosion oil to pivot surfaces where grease cannot penetrate.
- Lubricate more frequently when used in salt water.

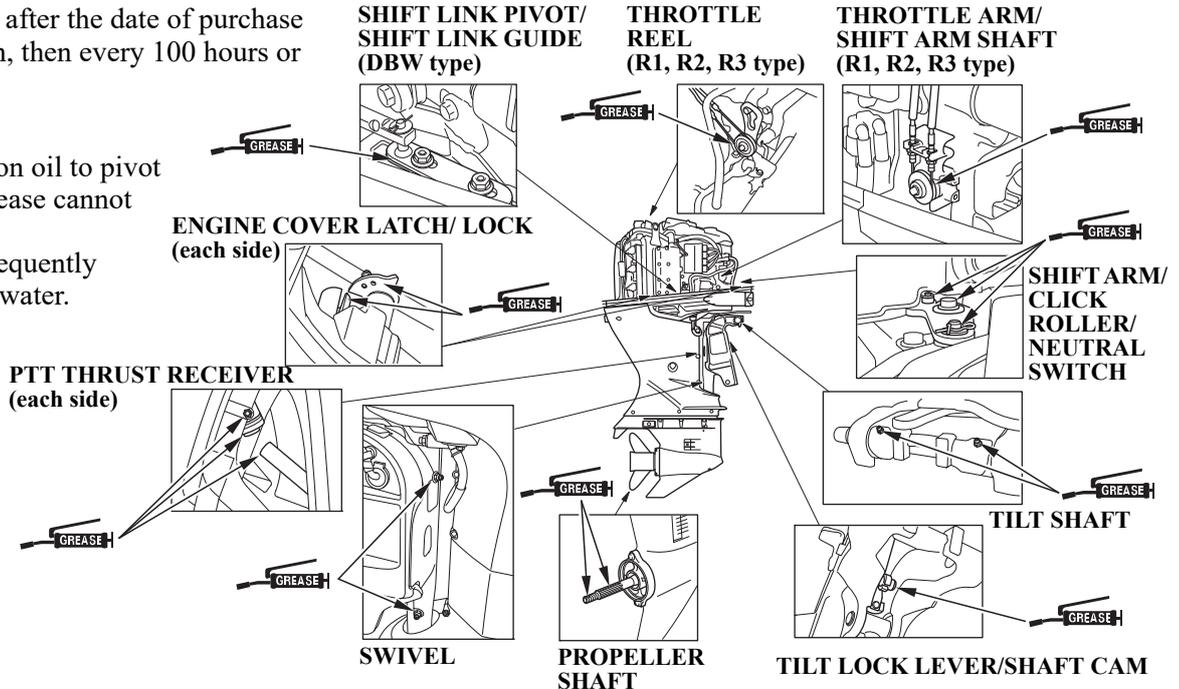

# MAINTENANCE

## Fuel Filter with Water Separator

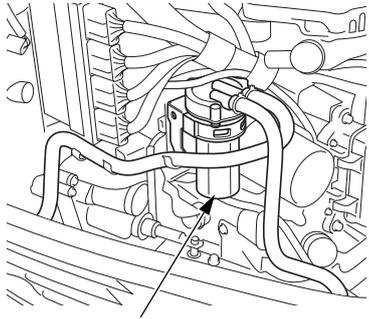

**FUEL FILTER with  
WATER SEPARATOR**

The fuel filter with water separator is located near the junction box. Water or sediment accumulated in the fuel filter with water separator can cause loss of power or hard starting. Check and replace the fuel filter with water separator periodically. Clean it or consult with an authorized Honda outboard motor dealer for cleaning.

### Inspection interval:

Every 100 operating hours or 6 months.

### Replacement interval:


Every 400 operating hours or 2 years

## **⚠ WARNING**

Gasoline is extremely flammable, and gasoline vapor can explode, causing serious injury or death. Do not smoke or allow flames or sparks in your working area.

- Always work in a well-ventilated area.
- Be sure that any fuel drained from the outboard motor is stored in a safe container.
- Be careful not to spill fuel when replacing the filter. Spilled fuel or fuel vapor may ignite. If any fuel is spilled, make sure the area is dry before starting the engine.
- **KEEP OUT OF REACH OF CHILDREN.**

## <Inspection>

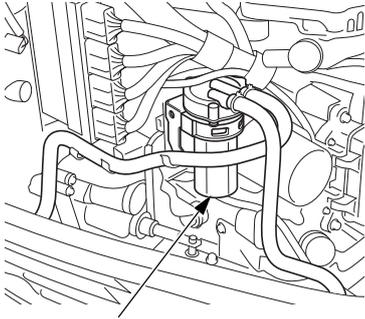


**FUEL FILTER with  
WATER SEPARATOR**

1. Remove the engine cover (see page 58).
2. Looking through the translucent strainer cup, check the fuel filter with water separator for water accumulation and clogging. If the fuel filter with water separator is clogged, refer to page 128 to remove the filter and clean it.

If a water is remained in the fuel filter with water separator, refer to page 128 to remove the strainer cup and empty the water from the inside of the cup.


# MAINTENANCE

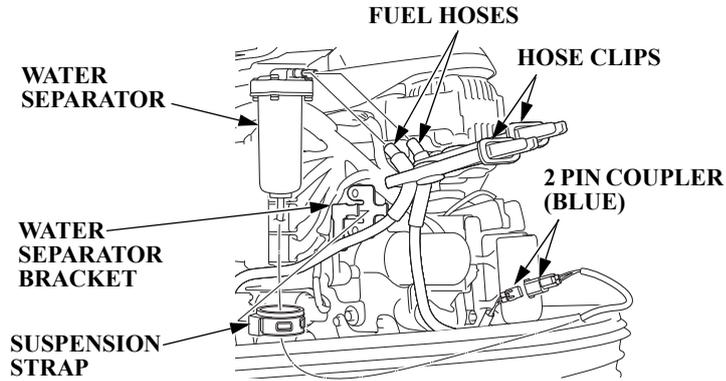

## <Replacement>


1. Remove the engine cover (see page 58).
2. Disconnect the 2-pin coupler (blue).

3. Remove the suspension strap from the fuel filter with water separator bracket, then remove the suspension strap from the fuel filter with water separator.
4. Bind the two fuel tubes with the tube clips to prevent the fuel leakage, disconnect the fuel tubes.

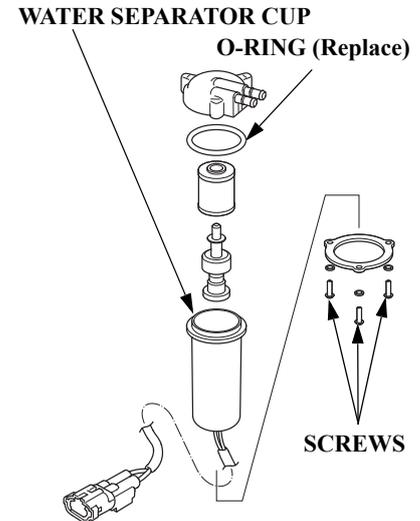

5. Remove the three screws holding the fuel filter with water separator, delete the water or deposit from the inside of the cup.
  6. Thoroughly clean the cup, and replace with a new fuel filter.
  7. Reassemble the water separator in the reverse order of removal. Use a new O-ring.
- TIGHTENING TORQUE:**  
3.4 N·m (0.34 kgf·m, 2.5 lbs·ft)

## ALIGNING MARK

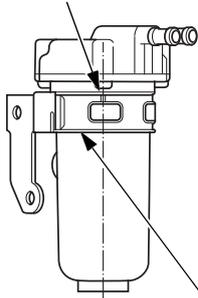

## SUSPENSION STRAP

8. Align the aligning mark as shown in the figure, when installing the suspension strap on the fuel filter with water separator.
9. Prime the engine using the priming bulb (see page 68). Check for fuel leaks. Repair any fuel leaks if necessary.

## NOTE:

If the buzzer sounds, water or sediment accumulation is found to be caused by excessive water or sediment accumulated in the fuel filter, inspect the fuel tank. Clean the fuel tank if necessary.

## EMISSION CONTROL SYSTEM

The combustion process produces carbon monoxide and hydrocarbons. Control of hydrocarbons is very important because under certain conditions, they react to form photochemical smog when subjected to sunlight. Carbon monoxide does not react in the same way, but it is toxic.

### Problems that May Affect Outboard Motor Emissions

If you are aware of any of the following symptoms, have the outboard motor inspected and repaired by your authorized dealer:

1. Hard starting or stalling after starting
2. Rough idle
3. Misfiring or backfiring during acceleration
4. Poor performance (driveability) and poor fuel economy

# MAINTENANCE

## Battery

### NOTICE


**Battery handling differs according to the type of the battery and the instructions described below might not be applicable to the battery of your outboard. Refer to the battery manufacturer's instructions.**

### ⚠ WARNING

Batteries produce explosive gases: If ignited, an explosion can cause serious injury or blindness. Provide adequate ventilation when charging.

- **CHEMICAL HAZARD:** Battery electrolyte contains sulfuric acid. Contact with eyes or skin, even through clothing, may cause severe burns. Wear a faceshield and protective clothing.

- Keep flames and sparks away, and do not smoke in the area.  
ANTIDOTE: If electrolyte gets into your eyes, flush thoroughly with warm water for at least 15 minutes and call a physician immediately.
- **POISON:** Electrolyte is poison.  
ANTIDOTE:
  - External: Flush thoroughly with water.
  - Internal: Drink large quantities of water or milk. Follow with milk of magnesia or vegetable oil, and call a physician immediately.
- **KEEP OUT OF REACH OF CHILDREN.**

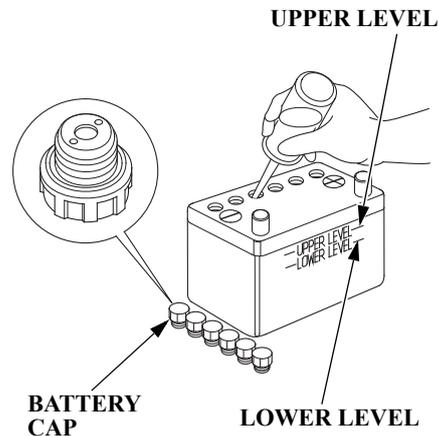

### <Battery Fluid Level>


Check whether the battery fluid is between the upper and lower levels, and check the vent hole in the battery caps for clogging.

If the battery fluid is near or below the lower level, add the distilled water to the upper level.

## <Battery Cleaning>

1. Disconnect the battery cable at the battery negative (-) terminal, then at the battery positive (+) terminal.
2. Remove the battery and clean the battery terminals and battery cable terminals with a wire brush or sand paper.

Clean the battery with a solution of baking soda and warm water, taking care not to get the solution or water in the battery cells. Dry the battery thoroughly.

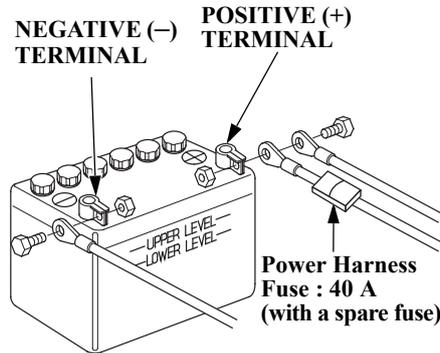

3. Connect the battery positive (+) cable to the battery positive (+) terminal, then the battery negative (-) cable to the battery negative (-) terminal. Tighten the bolts and nuts securely. Coat the battery terminals with grease.

## ⚠ CAUTION

When disconnecting the battery cable, be sure to disconnect at the battery negative (-) terminal first. To connect, connect at the positive (+) terminal first, then at the negative (-) terminal. Never dis/connect the battery cable in the reverse order, or it causes a short circuit when a tool contacts the terminals.

# MAINTENANCE

## Fuse

Before replacing the fuse, check the current ratings of the electrical accessories and ensure that there are no abnormalities.

### ⚠ WARNING


- Never use a fuse with a different rating from that specified.  
Serious damage to the electrical system or a fire may result.
- Disconnect the battery cable at the battery negative (–) terminal before replacing the fuse.  
Failure to do so may cause a short circuit.

### NOTICE


**If the fuse is blown, check the cause, then replace the fuse with a spare fuse of the same rated capacity. Unless the cause is found, the fuse may blow again.**

## <Replacement>

**SPARE FUSES** (7.5 A, 10 A, 15 A, 20 A, 30 A) **MAIN FUSES** (7.5 A, 10 A, 15 A, 20 A, 30 A)

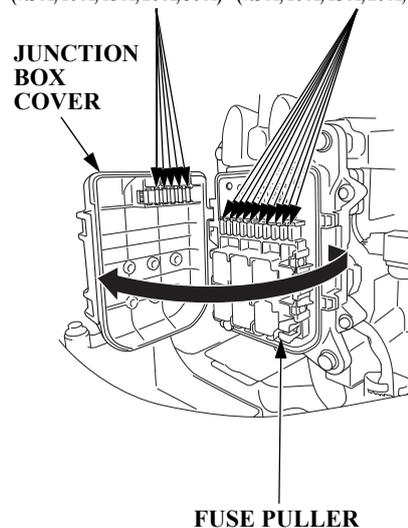

1. Stop the engine.
2. Disconnect the battery (see page 131).
3. Remove the engine cover (see page 58).
4. Open the junction box cover.

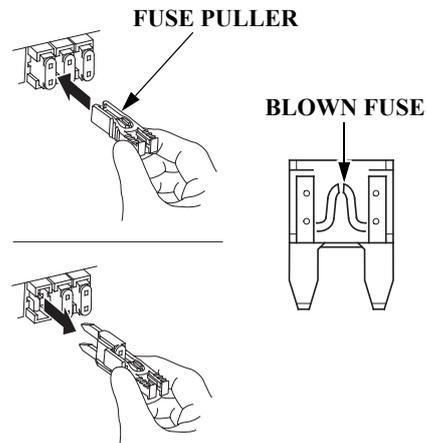

5. Pull the old fuse out of the clip with the fuse puller supplied in the fuse box.
6. Push a new fuse into the clips.

## *Mechanical wire type*


Fuse No.	Rating	Component(s) or Circuit(s) Protected
1	150 A	ACG, Battery
4	30 A	STARTER SOLENOID, AND RELAYS IN JUNCTION BOX
5	10 A	Power tilt relay, Warning buzzer, Indicator, Meter
8	10 A	Fuel pump (High pressure side)
9	15 A	Injector, ECU
10	10 A	DLC, Fuel pump (Low pressure side)
11	15 A	PTC

## *DBW type*

Fuse No.	Rating	Component(s) or Circuit(s) Protected
1	150 A	ACG, Battery
2	20 A	GROUND (Main)
3	7.5 A	12 V Accessory
4	30 A	STARTER SOLENOID, AND RELAYS IN JUNCTION BOX
5	7.5 A	REMOTE CONTROL SYSTEM
6	30 A	SHIFT ACTUATOR
7	15 A	THROTTLE BODY
8	10 A	Fuel pump (High pressure side)
9	15 A	Injector, ECU
10	10 A	DLC, Fuel pump (Low pressure side)
11	15 A	PTC

# MAINTENANCE

## ACG Fuse

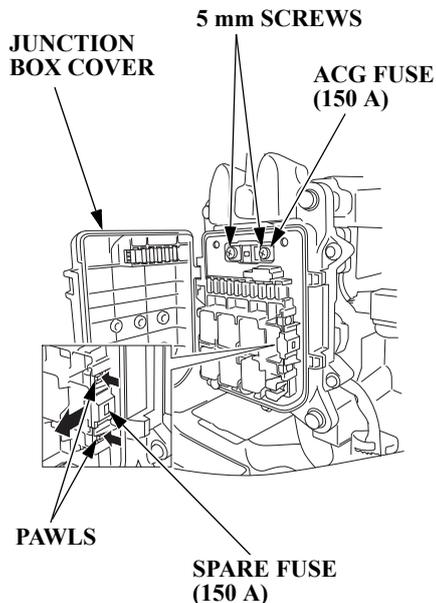

### <Replacement>

A spare fuse is located on the junction box.

Push two pawls, then pull out the spare fuse.

1. Stop the engine.
2. Disconnect the battery (see page 131).
3. Remove the engine cover (see page 58).
4. Open the junction box cover.
5. Remove the old fuse by removing two 5 mm screws.
6. Install a new fuse by tightening two 5 mm screws.
7. After finishing replacement, close the junction box cover.

### Power Harness


1. Stop the engine.
2. Disconnect the battery cable and the power harness.
3. Open the fuse cover.
4. Pull the old fuse out of the clip with the fuse puller supplied in the fuse box.
5. Push a new fuse (40 A) into the clip.
6. Close the fuse cover.

## Propeller


If the propeller is damaged by striking a rock, or other obstacle, replace the propeller as follows.

### ⚠ WARNING

- Before replacing the propeller, remove the emergency stop switch clip from the emergency stop switch to prevent any possibility of the engine being started while you are working with the propeller.
- The propeller blades may have sharp edges, so wear heavy gloves to protect your hands.

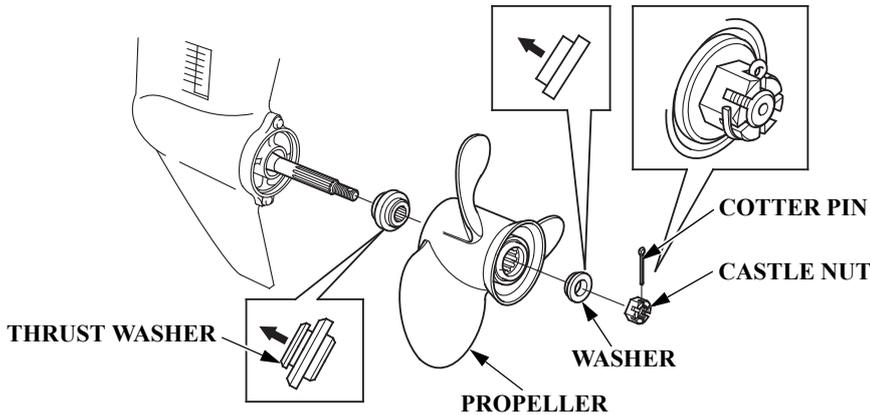

When replacing the propeller, put a suitable chip of wood between the propeller and the anticavitation plate to prevent the propeller from rotating.

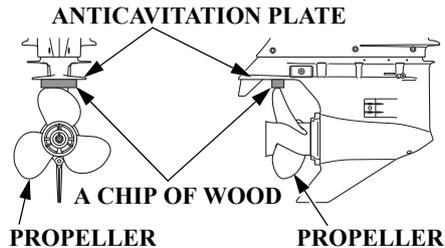

## Replacement

1. Remove the cotter pin then remove the 18 mm castle nut, washer, propeller and thrust washer.
2. Install the new propeller in the reverse sequence to removal.
3. Tighten the castle nut with your hand first until the propeller has no play.
4. Tighten the castle nut again with a tool. (Note that this tool is not included in the tools that come together with the outboard motor.)

## TIGHTENING TORQUE:

56 N·m (5.7 kgf·m, 41 lbf·ft)

5. Then, using a tool, tighten the castle nut until the first available groove in the castle nut aligns with the cotter pin hole. Do not tighten past the first alignment of the castle nut groove and the cotter pin hole.

## UPPER LIMIT OF TORQUE:

128 N·m (13 kgf·m, 94 lbf·ft)

# MAINTENANCE

6. Be sure to replace the cotter pin with a new one.

## NOTE:

- Do not tighten the castle nut above the UPPER LIMIT OF TORQUE, or the propeller and shaft may be damaged.
- Install the thrust washer with the grooved side toward the gear case.
- Use a genuine Honda cotter pin and bend the pin ends as shown.

## Inspect After Operating

1. Stop the engine and remove the engine cover (see page 58).
2. Confirm the cooling water leakage from the engine.

## Submerged Outboard Motor

A submerged outboard motor must be serviced immediately after it is recovered from the water in order to minimize corrosion.

If there is a Honda outboard motor dealership nearby, take the outboard motor immediately to the dealer. If you are far from a dealership, proceed as follows:


1. Remove the engine cover (see page 58), and rinse the outboard motor with fresh water to remove salt water, sand, mud, etc.

## NOTICE

**If the outboard motor was running when it submerged, there may be mechanical damage, such as bent connecting rods. If the engine binds when cranked, do not attempt to run the outboard motor until it has been repaired.**

2. Change the engine oil (see page 119).

3. Remove the spark plugs (see page 121). Operate the starter to expel water from the engine's cylinder.

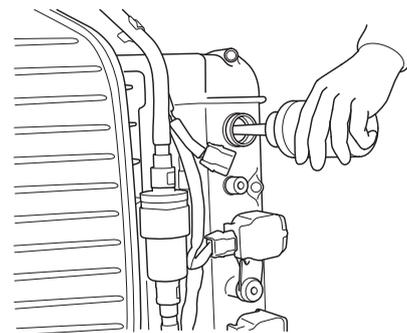

4. Put a teaspoon of engine oil into each spark plug hole to lubricate the inside of the cylinders. Reinstall the spark plugs.
5. Install the engine cover and lock the latch securely (see page 58).

6. Attempt to start the engine.

- If the engine fails to start, remove the spark plugs, clean and dry the electrodes, then reinstall the spark plugs and attempt to start the engine again.
- If there was water in the engine crankcase, or the used engine oil showed signs of water contamination, then a second engine oil change should be performed after running the engine for 1/2 hour.
- If the engine starts, and no mechanical damage is evident, continue to run the engine for 1/2 hour or longer (be sure the water level is at least 100 mm (4 in) above the anticavitation plate).

7. As soon as possible, take the outboard motor to a outboard motor dealer for inspection and service.

## 13. STORAGE

---

For longer service life of the outboard motor, have your outboard motor serviced by an authorized outboard motor dealer before storage. However, the following procedures can be performed by you, the owner, with a minimum of tools.

### Fuel

#### NOTE:

Gasoline spoils very quickly depending on factors such as light exposure, temperature and time. In worst cases, gasoline can be contaminated within 30 days. Using contaminated gasoline can seriously damage the engine (fuel system clogged, valve stuck). Such damage due to spoiled fuel is disallowed from coverage by the warranty.

To avoid this please strictly follow these recommendations:

- Only use specified gasoline (see page 61).
- Use fresh and clean gasoline.


- To slow deterioration, keep gasoline in a certified fuel container.
- If long storage (more than 30 days) is foreseen, drain fuel tank and vapor separator.

## Vapor Separator Draining

### ⚠ WARNING

Gasoline is extremely flammable, and gasoline vapor can explode, causing serious injury or death. Do not smoke or allow flames or sparks in your working area.

- Be careful not to spill fuel. Spilled fuel or fuel vapor may ignite. If any fuel is spilled, make sure the area is dry before storing or transporting the outboard motor.
- Do not smoke or allow flames or sparks where fuel is drained or stored.
- **KEEP OUT OF REACH OF CHILDREN.**

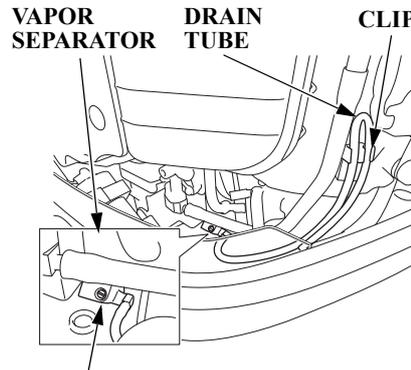

### DRAIN BOLT

1. Unhook the drain tube from the clip on the lower left of the head cover.
2. Set the end of the tube toward the outside of the engine undercase.
3. Loosen the vapor separator drain bolt by using a commercially available flat tip screwdriver.
4. Tilt up the outboard motor.
5. Tilt down the outboard motor, and drain the vapor separator.
6. After draining thoroughly, tighten the drain bolt securely.
7. Clip the drain tube on the head cover.

# STORAGE

## Battery Storage

### NOTICE


Battery handling differs according to the type of the battery and the instructions described below might not be applicable to the battery of your outboard motor. Refer to the battery manufacturer's instructions.

### ⚠ WARNING


Batteries produce explosive gases: If ignited, an explosion can cause serious injury or blindness. Provide adequate ventilation when charging.

- **CHEMICAL HAZARD:** Battery electrolyte contains sulfuric acid. Contact with eyes or skin, even through clothing, may cause severe burns. Wear a faceshield and protective clothing.

- Keep flames and sparks away, and do not smoke in the area.  
ANTIDOTE: If electrolyte gets into your eyes, flush thoroughly with warm water for at least 15 minutes and call a physician immediately.
- **POISON:** Electrolyte is poison.  
ANTIDOTE  
— External: Flush thoroughly with water.  
— Internal: Drink large quantities of water or milk. Follow with milk of magnesia or vegetable oil, and call a physician immediately.
- **KEEP OUT OF REACH OF CHILDREN.**

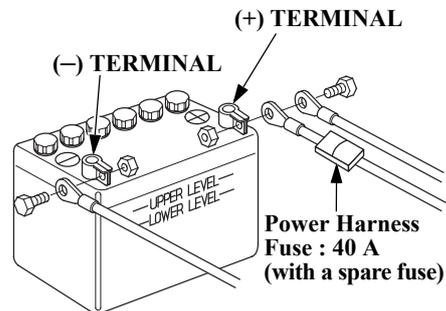

1. Disconnect the battery cable at the battery negative (-) terminal, then at the battery positive (+) terminal.
2. Remove the battery and clean the battery terminals and battery cable terminals with a wire brush or sand paper.  
Clean the battery with a solution of baking soda and warm water, taking care not to get the solution of water in the battery cells. Dry the battery thoroughly.

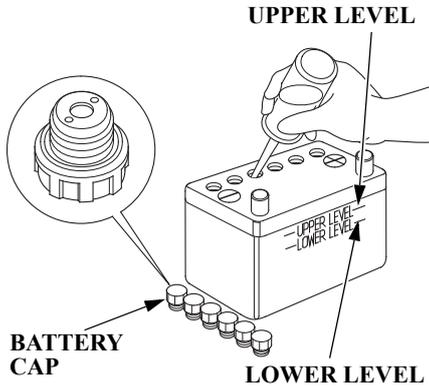


3. Fill the battery with distilled water to the upper level line. Never overfill the battery.
4. Store the battery on a level surface in a cool, dry, well ventilated place out of direct sunlight.
5. Once a month, check the specific gravity of the electrolyte and recharge as required to prolong battery life.

## Outboard Motor Position



Transport and store the outboard motor either vertically, as shown above. Attach the stern bracket to stand and secure the outboard motor with bolts and nuts. Store the outboard motor in a well-ventilated area free from direct sunlight and humidity.

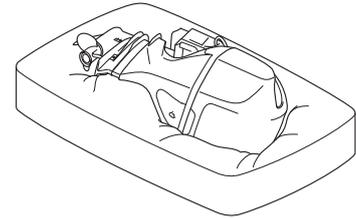

### **⚠ CAUTION**

Do not place the outboard motor on its side during a prolonged period of storage. If you are obliged to place the outboard motor on its side, drain the engine oil, protect the outboard motor by wrapping it with the urethane material or the blanket as shown.

## 14. DISPOSAL

---

To protect the environment, do not dispose of this product, battery, engine oil, etc. carelessly by leaving them in the waste. Observe the local laws and regulations or consult your dealer for disposal.

## 15. TROUBLESHOOTING

### WARNING SYSTEM COMES ON

SYMPTOM	POSSIBLE CAUSE	REMEDY
Overheat warning system comes on: <ul style="list-style-type: none"> <li>• Overheat indicator comes on.</li> <li>• Overheat warning buzzer sounds.</li> <li>• Engine speed decreases and stops at last.</li> <li>• Engine speed cannot be increased by opening the throttle.</li> <li>• Engine will stop in 20 seconds after engine speed is limited.</li> </ul>	Cooling water intake port clogged.	Clean the cooling water intake port.
	Spark plugs have improper heat range.	Replace the spark plugs (see page 121).
	<ul style="list-style-type: none"> <li>• Faulty water pump.</li> <li>• Thermostat clogged.</li> <li>• Faulty thermostat.</li> <li>• Cooling water passage clogged.</li> <li>• Exhaust gas invades cooling system.</li> </ul>	Consult with an authorized Honda outboard motor dealer.
Oil pressure warning system comes on: <ul style="list-style-type: none"> <li>• Oil pressure indicator does not come on.</li> <li>• Oil pressure warning buzzer sounds.</li> <li>• Engine speed decreases.</li> <li>• Engine speed cannot be increased by opening the throttle.</li> </ul>	Shortage of engine oil	Add engine oil to the specified level (see page 60).
	Improper engine oil is used.	Change the engine oil (see page 119).


# TROUBLESHOOTING

SYMPTOM	POSSIBLE CAUSE	REMEDY
Water separator warning system comes on: <ul style="list-style-type: none"><li>• Water separator warning buzzer sounds.</li></ul>	Water is accumulated in the water separator.	Drain the water separator (see page 127) Check the fuel tank and fuel line for water accumulation. If the buzzer sounds again, consult with an authorized Honda outboard motor dealer.
PGM-FI warning system comes on: <ul style="list-style-type: none"><li>• PGM-FI indicator comes on.</li><li>• PGM-FI warning buzzer sounds intermittently.</li></ul>	PGM-FI warning system is faulty.	Consult with an authorized Honda outboard motor dealer.
ACG warning system comes on: <ul style="list-style-type: none"><li>• ACG indicator comes on.</li><li>• ACG warning buzzer sounds intermittently.</li></ul>	Battery voltage is too high or low.	Check the battery (see page 130).
	Faulty ACG.	Consult with an authorized Honda outboard motor dealer.

## Emergency Gear Shifting (for DBW type)

If the gear cannot be shifted, perform shift operation manually according to the following procedures and return to port at possible engine speed.

1. Set the remote control lever in the NEUTRAL position (see page 20-21).
2. Stop the engine (see page 108).
3. Remove the engine cover (see page 58).
4. Shift gear into neutral by inserting the phillips screwdriver with the grip of the tool kit (see page 116) into the hole of the shift actuator and moving the shaft.

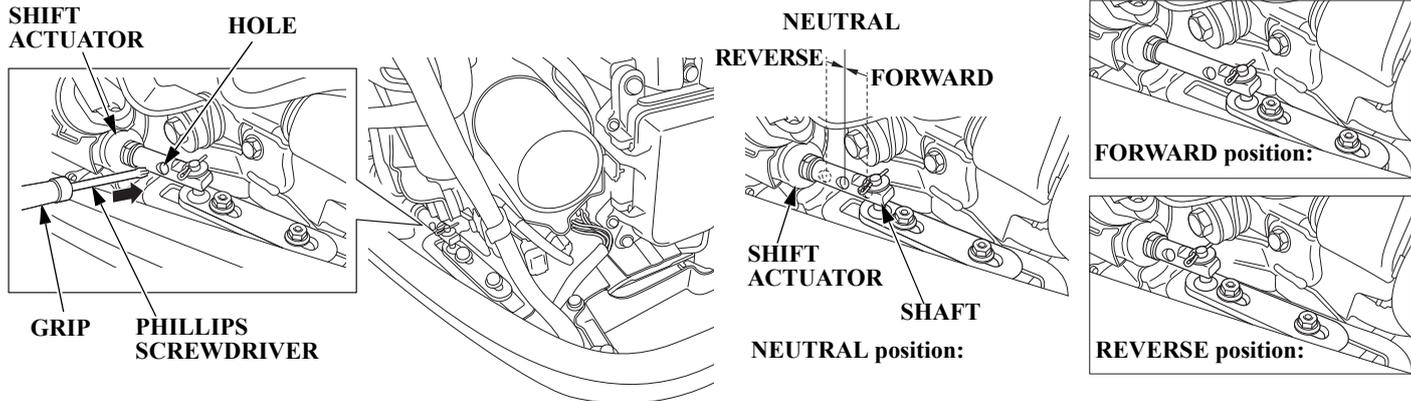

5. Start the engine (see page 68).
  6. Shift gear into "F" (Forward) or "R" (Reverse) by moving the shaft of the shift actuator with the phillips screwdriver with the grip of the tool kit.
- After returning to port, stop the engine and anchor the boat.

## 16. SPECIFICATIONS

MODEL	BF175D		
Description Code	BBSJ		
Type	XD	XCD	UD
Overall length	948 mm (37.3 in)		
Overall width	660 mm (26.0 in)		
Overall height	1,916 mm (75.4 in)		2,043 mm (80.4 in)
Transom height (when Transom angle at 12°)	635 mm (25.0 in)		762 mm (30.0 in)
Dry mass [weight]*	285 kg (628 lbs)	286 kg (631 lbs)	290 kg (639 lbs)
Rated power	128.7 kW (175 PS)		
Full throttle range	5,000 – 6,000 min <sup>-1</sup> (rpm)		
Engine type	4 stroke OHC 6-cylinder (V6)		
Displacement	3,583 cm <sup>3</sup> (218.6 cu-in)		
Spark plug gap	1.0 – 1.1 mm (0.039 – 0.043 in)		
Remote control steering system	Motor-mounted		
Starter system	Electric starter		
Ignition system	Full transistor battery		

Lubrication system	Trochoid pump pressure lubrication
Specified oil	Engine: API standard SG, SH, SJ, SL SAE 10W-30 Gear case: API standard (GL-4) SAE 90 Hypoid gear oil
Oil capacity	Engine: Without oil filter replacement: 7.6 L (8.0 US qt, 6.7 Imp qt) With oil filter replacement: 7.8 L (8.2 US qt, 6.9 Imp qt) Gear case: 1.47 L (1.55 US qt, 1.29 Imp qt)
D.C. output	12 V – 60 A
Cooling system	Water cooling with thermostat
Exhaust system	Underwater exhaust
Spark plugs	ZFR6K-11E (NGK)
Fuel pump	Electromagnetic type
Fuel	Unleaded gasoline (91 research octane, 86 pump octane, or higher)
Gear change	Forward – Neutral – Reverse (Dog clutch)
Steering angle	30° right and left
Tilt up angle	68° (when Transom angle is 12°)
Trim angle	– 4° to 16° (when Transom angle is 12°)

\* Without battery cable, with propeller

Honda outboards are power rated in accordance with ISO8665 (propeller shaft output).

# SPECIFICATIONS

MODEL	BF200D				
Description Code	BBRJ				
Type	LR	LD	XR	XD XCR	XCD
Overall length	948 mm (37.3 in)				
Overall width	660 mm (26.0 in)				
Overall height	1,789 mm (70.4 in)		1,916 mm (75.4 in)		
Transom height (when Transom angle at 12°)	508 mm (20.0 in)		635 mm (25.0 in)		
Dry mass [weight]*	279 kg (615 lbs)	280 kg (617 lbs)	284 kg (626 lbs)	285 kg (628 lbs)	286 kg (631 lbs)
Rated power	147.1 kW (200 PS)				
Full throttle range	5,000 – 6,000 min <sup>-1</sup> (rpm)				
Engine type	4 stroke OHC 6-cylinder (V6)				
Displacement	3,583 cm <sup>3</sup> (218.6 cu-in)				
Spark plug gap	1.0 – 1.1 mm (0.039 – 0.043 in)				
Remote control steering system	Motor-mounted				
Starter system	Electric starter				
Ignition system	Full transistor battery				

Lubrication system	Trochoid pump pressure lubrication
Specified oil	Engine: API standard SG, SH, SJ, SL SAE 10W-30 Gear case: API standard (GL-4) SAE 90 Hypoid gear oil
Oil capacity	Engine: Without oil filter replacement: 7.6 L (8.0 US qt, 6.7 Imp qt) With oil filter replacement: 7.8 L (8.2 US qt, 6.9 Imp qt) Gear case: 1.47 L (1.55 US qt, 1.29 Imp qt)
D.C. output	12 V – 60 A
Cooling system	Water cooling with thermostat
Exhaust system	Underwater exhaust
Spark plugs	ZFR6K-11E (NGK) IZFR6K-11E (NGK)
Fuel pump	Electromagnetic type
Fuel	Unleaded gasoline (91 research octane, 86 pump octane, or higher)
Gear change	Forward – Neutral – Reverse (Dog clutch)
Steering angle	30° right and left
Tilt up angle	68° (when Transom angle is 12°)
Trim angle	– 4° to 16° (when Transom angle is 12°)

\* Without battery cable, with propeller

Honda outboards are power rated in accordance with ISO8665 (propeller shaft output).

# SPECIFICATIONS

MODEL	BF200D	
Description Code	BBRJ	
Type	UR	UD
Overall length	948 mm (37.3 in)	
Overall width	660 mm (26.0 in)	
Overall height	2,043 mm (80.4 in)	
Transom height (when Transom angle at 12°)	762 mm (30.0 in)	
Dry mass [weight]*	289 kg (637 lbs)	290 kg (639 lbs)
Rated power	147.1 kW (200 PS)	
Full throttle range	5,000 – 6,000 min <sup>-1</sup> (rpm)	
Engine type	4 stroke OHC 6-cylinder (V6)	
Displacement	3,583 cm <sup>3</sup> (218.6 cu-in)	
Spark plug gap	1.0 – 1.1 mm (0.039 – 0.043 in)	
Remote control steering system	Motor-mounted	
Starter system	Electric starter	
Ignition system	Full transistor battery	

Lubrication system	Trochoid pump pressure lubrication
Specified oil	Engine: API standard SG, SH, SJ, SL SAE 10W-30 Gear case: API standard (GL-4) SAE 90 Hypoid gear oil
Oil capacity	Engine: Without oil filter replacement: 7.6 L (8.0 US qt, 6.7 Imp qt) With oil filter replacement: 7.8 L (8.2 US qt, 6.9 Imp qt) Gear case: 1.47 L (1.55 US qt, 1.29 Imp qt)
D.C. output	12 V – 60 A
Cooling system	Water cooling with thermostat
Exhaust system	Underwater exhaust
Spark plugs	ZFR6K-11E (NGK) IZFR6K-11E (NGK)
Fuel pump	Electromagnetic type
Fuel	Unleaded gasoline (91 research octane, 86 pump octane, or higher)
Gear change	Forward – Neutral – Reverse (Dog clutch)
Steering angle	30° right and left
Tilt up angle	68° (when Transom angle is 12°)
Trim angle	– 4° to 16° (when Transom angle is 12°)

\* Without battery cable, with propeller

Honda outboards are power rated in accordance with ISO8665 (propeller shaft output).

# SPECIFICATIONS

MODEL	BF225D				
Description Code	BBPJ				
Type	LR	LD	XR	XD XCR	XCD
Overall length	948 mm (37.3 in)				
Overall width	660 mm (26.0 in)				
Overall height	1,789 mm (70.4 in)		1,916 mm (75.4 in)		
Transom height (when Transom angle at 12°)	508 mm (20.0 in)		635 mm (25.0 in)		
Dry mass [weight]*	281 kg (619 lbs)	282 kg (622 lbs)	286 kg (631 lbs)	287 kg (633 lbs)	288 kg (635 lbs)
Rated power	165.5 kW (225 PS)				
Full throttle range	5,000 – 6,000 min <sup>-1</sup> (rpm)				
Engine type	4 stroke OHC VTEC 6-cylinder (V6)				
Displacement	3,583 cm <sup>3</sup> (218.6 cu-in)				
Spark plug gap	1.0 – 1.1 mm (0.039 – 0.043 in)				
Remote control steering system	Motor-mounted				
Starter system	Electric starter				
Ignition system	Full transistor battery				

Lubrication system	Trochoid pump pressure lubrication
Specified oil	Engine: API standard SG, SH, SJ, SL SAE 10W-30 Gear case: API standard (GL-4) SAE 90 Hypoid gear oil
Oil capacity	Engine: Without oil filter replacement: 7.6 L (8.0 US qt, 6.7 Imp qt) With oil filter replacement: 7.8 L (8.2 US qt, 6.9 Imp qt) Gear case: 1.47 L (1.55 US qt, 1.29 Imp qt)
D.C. output	12 V – 60 A
Cooling system	Water cooling with thermostat
Exhaust system	Underwater exhaust
Spark plugs	ZFR6K-11E (NGK) IZFR6K-11E (NGK)
Fuel pump	Electromagnetic type
Fuel	Unleaded gasoline (91 research octane, 86 pump octane, or higher)
Gear change	Forward – Neutral – Reverse (Dog clutch)
Steering angle	30° right and left
Tilt up angle	68° (when Transom angle is 12°)
Trim angle	– 4° to 16° (when Transom angle is 12°)

\* Without battery cable, with propeller

Honda outboards are power rated in accordance with ISO8665 (propeller shaft output).

# SPECIFICATIONS

MODEL	BF225D		
Description Code	BBPJ		
Type	UR	UD UCR	UCD
Overall length	948 mm (37.3 in)		
Overall width	660 mm (26.0 in)		
Overall height	2,043 mm (80.4 in)		
Transom height (when Transom angle at 12°)	762 mm (30.0 in)		
Dry mass [weight]*	291 kg (642 lbs)	292 kg (644 lbs)	293 kg (646 lbs)
Rated power	165.5 kW (225 PS)		
Full throttle range	5,000 – 6,000 min <sup>-1</sup> (rpm)		
Engine type	4 stroke OHC VTEC 6-cylinder (V6)		
Displacement	3,583 cm <sup>3</sup> (218.6 cu-in)		
Spark plug gap	1.0 – 1.1 mm (0.039 – 0.043 in)		
Remote control steering system	Motor-mounted		
Starter system	Electric starter		
Ignition system	Full transistor battery		

Lubrication system	Trochoid pump pressure lubrication
Specified oil	Engine: API standard SG, SH, SJ, SL SAE 10W-30 Gear case: API standard (GL-4) SAE 90 Hypoid gear oil
Oil capacity	Engine: Without oil filter replacement: 7.6 L (8.0 US qt, 6.7 Imp qt) With oil filter replacement: 7.8 L (8.2 US qt, 6.9 Imp qt) Gear case: 1.47 L (1.55 US qt, 1.29 Imp qt)
D.C. output	12 V – 60 A
Cooling system	Water cooling with thermostat
Exhaust system	Underwater exhaust
Spark plugs	ZFR6K-11E (NGK) IZFR6K-11E (NGK)
Fuel pump	Electromagnetic type
Fuel	Unleaded gasoline (91 research octane, 86 pump octane, or higher)
Gear change	Forward – Neutral – Reverse (Dog clutch)
Steering angle	30° right and left
Tilt up angle	68° (when Transom angle is 12°)
Trim angle	– 4° to 16° (when Transom angle is 12°)

\* Without battery cable, with propeller

Honda outboards are power rated in accordance with ISO8665 (propeller shaft output).

# SPECIFICATIONS

MODEL	BF250D				
Description Code	BBNJ				
Type	LR	LD	XR	XD XCR	XCD
Overall length	948 mm (37.3 in)				
Overall width	660 mm (26.0 in)				
Overall height	1,789 mm (70.4 in)		1,916 mm (75.4 in)		
Transom height (when Transom angle at 12°)	508 mm (20.0 in)		635 mm (25.0 in)		
Dry mass [weight]*	281 kg (619 lbs)	282 kg (622 lbs)	286 kg (631 lbs)	287 kg (633 lbs)	288 kg (635 lbs)
Rated power	183.9 kW (250 PS)				
Full throttle range	5,300 – 6,300 min <sup>-1</sup> (rpm)				
Engine type	4 stroke OHC VTEC 6-cylinder (V6)				
Displacement	3,583 cm <sup>3</sup> (218.6 cu-in)				
Spark plug gap	1.0 – 1.1 mm (0.039 – 0.043 in)				
Remote control steering system	Motor-mounted				
Starter system	Electric starter				
Ignition system	Full transistor battery				

Lubrication system	Trochoid pump pressure lubrication
Specified oil	Engine: API standard SG, SH, SJ, SL SAE 10W-30 Gear case: API standard GL-4 SAE 90 Hypoid gear oil
Oil capacity	Engine: Without oil filter replacement: 7.6 L (8.0 US qt, 6.7 Imp qt) With oil filter replacement: 7.8 L (8.2 US qt, 6.9 Imp qt) Gear case: 1.47 L (1.55 US qt, 1.29 Imp qt)
D.C. output	12V – 60A
Cooling system	Water cooling with thermostat
Exhaust system	Underwater exhaust
Spark plugs	ZFR6K-11E (NGK) IZFR6K-11E (NGK)
Fuel pump	Electromagnetic type
Fuel	Unleaded gasoline (91 research octane, 86 pump octane, or higher)
Gear change	Forward – Neutral – Reverse (Dog clutch)
Steering angle	30° right and left
Tilt up angle	68° (when Transom angle is 12°)
Trim angle	– 4° to 16° (when Transom angle is 12°)

\* Without battery cable, with propeller

Honda outboards are power rated in accordance with ISO8665 (propeller shaft output).

# SPECIFICATIONS

MODEL	BF250D		
Description Code	BBNJ		
Type	UR	UD UCR	UCD
Overall length	948 mm (37.3 in)		
Overall width	660 mm (26.0 in)		
Overall height	2,043 mm (80.4 in)		
Transom height (when Transom angle at 12°)	762 mm (30.0 in)		
Dry mass [weight]*	291 kg (642 lbs)	292 kg (644 lbs)	293 kg (646 lbs)
Rated power	183.9 kW (250 PS)		
Full throttle range	5,300 – 6,300 min <sup>-1</sup> (rpm)		
Engine type	4 stroke OHC VTEC 6-cylinder (V6)		
Displacement	3,583 cm <sup>3</sup> (218.6 cu-in)		
Spark plug gap	1.0 – 1.1 mm (0.039 – 0.043 in)		
Remote control steering system	Motor-mounted		
Starter system	Electric starter		
Ignition system	Full transistor battery		

Lubrication system	Trochoid pump pressure lubrication
Specified oil	Engine: API standard SG, SH, SJ, SL SAE 10W-30 Gear case: API standard GL-4 SAE 90 Hypoid gear oil
Oil capacity	Engine: Without oil filter replacement: 7.6 L (8.0 US qt, 6.7 Imp qt) With oil filter replacement: 7.8 L (8.2 US qt, 6.9 Imp qt) Gear case: 1.47 L (1.55 US qt, 1.29 Imp qt)
D.C. output	12V – 60A
Cooling system	Water cooling with thermostat
Exhaust system	Underwater exhaust
Spark plugs	ZFR6K-11E (NGK) IZFR6K-11E (NGK)
Fuel pump	Electromagnetic type
Fuel	Unleaded gasoline (91 research octane, 86 pump octane, or higher)
Gear change	Forward – Neutral – Reverse (Dog clutch)
Steering angle	30° right and left
Tilt up angle	68° (when Transom angle is 12°)
Trim angle	– 4° to 16° (when Transom angle is 12°)

\* Without battery cable, with propeller

Honda outboards are power rated in accordance with ISO8665 (propeller shaft output).

# SPECIFICATIONS

## Noise and Vibration

MODEL	BF175D	BF200D	BF225D	BF250D
CONTROL SYSTEM	R (Remote control)	R (Remote control)	R (Remote control)	R (Remote control)
Sound pressure level at operator's ears (2006/42/EC, ICOMIA 39-94)	82 dB (A)	83 dB (A)	84 dB (A)	85 dB (A)
----- Uncertainty	1 dB (A)	2 dB (A)	2 dB (A)	2 dB (A)
Measured sound power level (Reference to EN ISO3744)	94 dB (A)	95 dB (A)	95 dB (A)	97 dB (A)
----- Uncertainty	2 dB (A)	2 dB (A)	2 dB (A)	2 dB (A)
Vibration level at hand arm (2006/42/EC, ICOMIA 38-94)	–	–	–	–
----- Uncertainty	–	–	–	–

Reference to: ICOMIA Standard: as it specifies the engine operating conditions and measurement conditions.

## Compass safe distance

MODEL	BF175D	BF200D	BF225D	BF250D
Compass safe distance (IEC 60945)	400 mm (15.8 in)			

For Drive by Wire (DBW) type only: DBW REMOTE CONTROL BOX, KEY SWITCH PANEL, CONTROL UNIT

# 17. MAJOR Honda DISTRIBUTOR ADDRESSES

For further information, please contact Honda Customer Information Centre at the following address or telephone number:

## For European

### AUSTRIA

#### Honda Motor Europe Ltd

Hondastraße 1  
2351 Wiener Neudorf  
Tel.: +43 (0)2236 690 0  
Fax: +43 (0)2236 690 480  
<http://www.honda.at>

✉ [HondaPP@honda.co.at](mailto:HondaPP@honda.co.at)

### BALTIC STATES

#### (Estonia/Latvia/ Lithuania)

#### NCG Import Baltics OU

Meistri 12  
13517 Tallinn  
Harju County Estonia  
Tel.: +372 651 7300  
Fax: +372 651 7301

✉ [info.baltic@ncgimport.com](mailto:info.baltic@ncgimport.com)

### BELARUS

#### JV "Scanlink" Ltd.

Montazhnikov lane 4th, 5-16  
Minsk 220019  
Republic of Belarus  
Tel.: +375172349999  
Fax: +375172380404

✉ [honda@scanlink.by](mailto:honda@scanlink.by)

### BELGIUM

#### Honda Motor Europe Ltd

Doornveld 180-184  
1731 Zellik  
Tel.: +32 2620 10 00  
Fax: +32 2620 10 01  
<http://www.honda.be>

✉ [bh\\_pe@honda-eu.com](mailto:bh_pe@honda-eu.com)

### BULGARIA

#### Premium Motor Ltd

Andrey Lyapchev Blvd no 34  
1797 Sofia  
Bulgaria

Tel.: +3592 423 5879  
Fax: +3592 423 5879

<http://www.hondamotor.bg>

✉ [office@hondamotor.bg](mailto:office@hondamotor.bg)

### CROATIA

#### Fred Bobek d.o.o.

HONDA MARINE  
Put Gaćeleza 5b  
HR 22211 Vodiče

Tel.: 00385 22 444336  
Fax.: 00385 22 440500

✉ [centrala@honda-croatia.com](mailto:centrala@honda-croatia.com)

### CYPRUS

#### Powerline Products Ltd

Cyprus - Nicosia  
Vasilias 18 2232 Latsia  
Tel.: 0035799490421

✉ [info@powerlinecy.com](mailto:info@powerlinecy.com)

<http://www.powerlinecy.com>

### CZECH REPUBLIC

#### BG Technik cs, a.s.

U Zavodiste 251/8  
15900 Prague 5 - Velka  
Chuchle

Tel.: +420 2 838 70 850  
Fax: +420 2 667 111 45

<http://www.honda-stroje.cz>

### DENMARK

#### TIMA A/S

Ryttermarken 10  
DK-3520 Farum  
Tel.: +45 36 34 25 50

Fax: +45 36 77 16 30  
<http://www.tima.dk>

### FINLAND

#### OY Brandt AB.

Tuupakantie 7B  
01740 Vantaa  
Tel.: +358 207757200  
Fax: +358 9 878 5276  
<http://www.brandt.fi>

### FRANCE

#### Honda Motor Europe Ltd

Division Produit d'Équipement  
Parc d'activités de Pariest,  
Allée du 1er mai

Croissy Beaubourg BP46, 77312  
Marne La Vallée Cedex 2

Tel.: 01 60 37 30 00

Fax: 01 60 37 30 86

<http://www.honda.fr>

✉ [espace-client@honda-eu.com](mailto:espace-client@honda-eu.com)

### GERMANY

#### Honda Deutschland Niederlassung der Honda Motor Europe Ltd.

Hanauer Landstraße 222-224  
D-60314 Frankfurt  
Tel.: 01805 20 20 90

Fax: +49 (0)69 83 20 20

<http://www.honda.de>

✉ [info@post.honda.de](mailto:info@post.honda.de)

# MAJOR Honda DISTRIBUTOR ADDRESSES

For further information, please contact Honda Customer Information Centre at the following address or telephone number:

## For European (continued)

### GREECE

**Saracakis Brothers S.A.**

71 Leoforos Athinon  
10173 Athens  
Tel.: +30 210 3497809  
Fax: +30 210 3467329  
<http://www.honda.gr>  
✉ [info@saracakis.gr](mailto:info@saracakis.gr)

### HUNGARY

**MP Motor Co., Ltd.**

Kamaraerdei ut 3.  
2040 Budaors  
Tel.: +36 23 444 971  
Fax: +36 23 444 972  
<http://www.hondakisgepek.hu>  
✉ [info@hondakisgepek.hu](mailto:info@hondakisgepek.hu)

### IRELAND

**Two Wheels Ltd**

M50 Business Park, Ballymount  
Dublin 12  
Tel.: +353 1 4381900  
Fax: +353 1 4607851  
<http://www.hondaireland.ie>  
✉ [sales@hondaireland.ie](mailto:sales@hondaireland.ie)

### ISRAEL

**Mayer's Cars and Trucks Co.Ltd. -  
Honda Division**

Shevach 5, Tel Aviv, 6777936  
Israel  
+972-3-6953162  
✉ [OrenBe@mct.co.il](mailto:OrenBe@mct.co.il)

### ITALY

**Honda Motore Europe Ltd**

Via della Cecchignola, 13  
00143 Roma  
Tel.: +848 846 632  
Fax: +39 065 4928 400  
<http://www.hondaitalia.com>  
✉ [info.power@honda-eu.com](mailto:info.power@honda-eu.com)

### NORTH MACEDONIA

**Fred Bobek d.o.o.**

HONDA MARINE  
Put Gaćeleza 5b  
HR 22211 Vodice  
Tel.: 00385 22 444336  
Fax: 00385 22 440500  
✉ [centrala@honda-croatia.com](mailto:centrala@honda-croatia.com)

### MALTA

**The Associated Motors  
Company Ltd.**

New Street in San Gwakklin Road  
Mriehel Bypass, Mriehel QRM17  
Tel.: +356 21 498 561  
Fax: +356 21 480 150  
✉ [mgalea@gasanzammit.com](mailto:mgalea@gasanzammit.com)

### NORWAY

**KELLOX**

Box 24, N-141  
Trollåsveien 36, 1414  
Trollåsen, Norway  
Mobile: +47 47 80 90 00  
Phone: +47 64 97 61 00  
<http://kellox.no/>  
✉ [finn.hoge@kellox.no](mailto:finn.hoge@kellox.no)

### POLAND

**Aries Power Equipment**

Puławska 467  
02-844 Warszawa  
Tel.: +48 (22) 861 43 01  
Fax: +48 (22) 861 43 02  
<http://www.ariespower.pl>  
<http://www.mojahonda.pl>  
✉ [info@ariespower.pl](mailto:info@ariespower.pl)

### PORTUGAL

**GROW Produtos de Forca  
Portugal**

Rua Fontes Pereira de Melo, 16  
Abrunheira, 2714-506 Sintra  
Tel.: +351 211 303 000  
Fax: +351 211 303 003  
<http://www.grow.com.pt>  
✉ [geral@grow.com.pt](mailto:geral@grow.com.pt)

### ROMANIA

**Agrisorg SRL**

Sacadat Str Principala  
Nr 444/A Jud. Bihor  
Romania  
Tel.: (+4) 0259 458 336  
✉ [info@agrisorg.com](mailto:info@agrisorg.com)

### SERBIA & MONTENEGRO

**Fred Bobek d.o.o.**

HONDA MARINE  
Put Gaćeleza 5b  
HR 22211 Vodice  
Tel.: 00385 22 444336  
Fax.: 00385 22 440500  
✉ [centrala@honda-croatia.com](mailto:centrala@honda-croatia.com)

# MAJOR Honda DISTRIBUTOR ADDRESSES

---

For further information, please contact Honda Customer Information Centre at the following address or telephone number:

## For European (continued)

### SLOVAK REPUBLIC

**Honda Motor Europe Ltd**  
**Slovensko, organizačná zložka**  
Prievozská 6 821 09 Bratislava  
Tel.: +421 2 32131111  
Fax: +421 2 32131112  
<http://www.honda.sk>

### SLOVENIA

**Fred Bobek d.o.o.**  
**HONDA MARINE**  
Put Gačeleza 5b  
HR 22211 Vodice  
Tel.: 00385 22 444336  
Fax.: 00385 22 440500  
✉ [centrala@honda-croatia.com](mailto:centrala@honda-croatia.com)

### SPAIN & all Provinces

**Greens Power Products, S.L.**  
Polígono Industrial Congost –  
Av Ramon Ciurans n°2  
08530 La Garriga - Barcelona  
Tel.: +34 93 860 50 25  
Fax: +34 93 871 81 80  
<http://www.hondaencasa.com>

### SWEDEN

**Honda Motor Europe Ltd filial**  
**Sverige**  
Box 31002 - Långhusgatan 4  
215 86 Malmö  
Tel.: +46 (0)40 600 23 00  
Fax: +46 (0)40 600 23 19  
<http://www.honda.se>  
✉ [hpesinfo@honda-eu.com](mailto:hpesinfo@honda-eu.com)

### SWITZERLAND

**Honda Motor Europe Ltd.**  
**Succursale de Satigny/Genève**  
Rue de la Bergère 5  
1242 Satigny  
Tel.: +41 (0)22 989 05 00  
Fax: +41 (0)22 989 06 60  
<http://www.honda.ch>

### TURKEY

**Anadolu Motor Uretim Ve**  
**Pazarlama As**  
Sekerpınar Mah  
Albayrak Sok No 4  
Cayirova 41420  
Kocaeli  
Tel.: +90 262 999 23 00  
Fax: +90 262 658 94 17  
<http://www.anadolumotor.com.tr>  
✉ [antor@antor.com.tr](mailto:antor@antor.com.tr)

### UKRAINE

**Dnipro Motor LLC**  
3, Bondarsky Alley,  
Kyiv, 04073, Ukraine  
Tel.: +380 44 537 25 76  
Fax: +380 44 501 54 27  
✉ [igor.lobunets@honda.ua](mailto:igor.lobunets@honda.ua)

### UNITED KINGDOM

**Honda Motor Europe Ltd**  
Cain Road  
Bracknell  
Berkshire  
RG12 1 HL  
Tel.: +44 (0)845 200 8000  
<http://www.honda.co.uk>

# 18. "UK DECLARATION OF CONFORMITY" CONTENT OUTLINE

## 1) UK-DECLARATION OF CONFORMITY

2) THE UNDERSIGNED, (13), REPRESENTING THE MANUFACTURER, HEREWITH DECLARES THAT THE PRODUCT IS IN CONFORMITY WITH THE PROVISIONS OF THE FOLLOWING STATUTORY REQUIREMENTS

SI 2008 No. 1597 ; SI 2016 No. 1091

3) REFERENCE TO DESIGNATED STANDARDS:

EN 61000-6-1: 2007, EN 55012:2007+A1:2009

## 4) DESCRIPTION OF THE MACHINERY

5) Generic denomination: Outboard engine 6) Function: Propulsion system 7) MAKE: Honda

8) TYPE:

9) SERIAL NUMBER:

10) Manufacturer:

Honda Motor Co., Ltd.  
2-1-1 Minamiaoyama Minato-ku Tokyo 107-8556 Japan

11) Authorized representative and able to compile the technical documentation:

Honda Motor Europe Ltd  
Cain Road, Bracknell, Berkshire, RG12 1HL,  
United Kingdom

12) SIGNATURE:

13) NAME:

14) TITLE

16) DATE:

17) PLACE:

# 19. “EC DECLARATION OF CONFORMITY” CONTENT OUTLINE

1) <b>EC-DECLARATION OF CONFORMITY</b>		
2) THE UNDERSIGNED, (13), REPRESENTING THE MANUFACTURER, HEREWITH DECLARES THAT THE PRODUCT IS IN CONFORMITY WITH THE PROVISIONS OF THE FOLLOWING EC-DIRECTIVES		
2006/42/EC, 2014/30/EU		
3) REFERENCE TO HARMONIZED STANDARDS: EN 61000-6-1: 2007, EN 55012:2007+A1:2009		
4) <b>DESCRIPTION OF THE MACHINERY</b>		
5) Generic denomination: Outboard engine	6) Function: Propulsion system	7) MAKE: Honda/Tohatsu
8) TYPE: <input type="text"/>	9) SERIAL NUMBER: <input type="text"/>	
10) Manufacturer:	Honda Motor Co., Ltd. 2-1-1 Minamiaoyama Minato-ku Tokyo 107-8556 Japan	
11) Authorized representative and able to compile the technical documentation:	Honda Motor Europe Ltd – Aalst Office Wijngaardveld 1 (Noord V) 9300 Aalst - Belgium	
12) SIGNATURE: <input type="text"/>		
13) NAME: <input type="text"/>	16) DATE: <input type="text"/>	
14) TITLE: <input type="text"/>	17) PLACE: <input type="text"/>	

# “EC DECLARATION OF CONFORMITY” CONTENT OUTLINE

<p>1) DECLARATION CE DE CONFORMITE 2) LE SOUSSIGNÉ, (13), REPRÉSENTANT DU CONSTRUCTEUR, DÉCLARE PAR LA PRÉSENTE QUE LE PRODUIT EST CONFORME AUX DISPOSITIONS DES DIRECTIVES CE SUIVANTES  3) RÉFERENCE AUX NORMES HARMONISÉES 4) DESCRIPTION DE MACHINE  5) Denomination générique: moteur hors-bord 6) Fonction : Système de propulsion 7) MARQUE  8) TYPE 9) NUMÉRO DI SERIE 10) CONSTRUCTEUR 11) Représentant autorisé et en charge des éditions de documentation techniques  12) SIGNATURE 13) NOM 14) TITRE 15) Directeur Qualite 16) DATE 17) LIEU</p>	<b>français ( FRENCH )</b>
<p>1) DICHIARAZIONE DI CONFORMITA' CE 2) IL SOTTOSCRITTO, (13), RAPPRESENTANTE DEL COSTRUTTORE, DICHIARA QUI DI SEGUITO CHE IL PRODOTTO E' CONFORME A QUANTO PREVISTO DALLE SEGUENTI DIRETTIVE COMUNITARIE  3) RIFERIMENTO ALLE NORME ARMONIZZATE 4) DESCRIZIONE DELLA MACCHINA  5) Denominazione generica: MOTORE FUORIBORDO 6) Funzione : Sistema di propulsione  7) MARCA 8) TIPO 9) NUMERO DI SERIE 10) FABBRICANTE  11) Rappresentante autorizzato e competente per la compilazione della documentazione tecnica  12) FIRMA 13) NOME 14) TITOLO 15) DIRETTORE DELLA QUALITA' 16) ADDÌ 17) LUOGO</p>	<b>italiano ( ITALIAN )</b>
<p>1) EG-KONFORMITÄT SERKLÄUNG 2) DER UNTERZEICHNER, (13), DER DEN HERSTELLER VERTRITT, ERKLÄRT HIERMIT, DAB DAS PRODUKT IN ÜBEREINSTIMMUNG MIT DEN BESTIMMUNGEN DER NACHSTEHENDEN EG-RICHTLINIEN IST  3) VERWEIS AUF HARMONISIERTE NORMEN 4) BESCHREIBUNG DER MASCHINE  5) Allgemeine Bezeichnung : Außenbordmotor 6) Funktion : Antriebsart  7) FABRIKAT 8) TYP 9) SERIEN NUMMER 10) HERSTELLER  11) Bevollmächtigter und in der Position, die technische Dokumentation zu erstellen  12) UNTERSCHIFT 13) NAME 14) TITEL 15) Qualitätssicherung 16) DATUM 17) ORT</p>	<b>deutsch ( GERMAN )</b>
<p>1) EG-VERKLARING VAN OVEREENSTEMMING 2) ONDERGETEKENDE, (13), VERTEGENWOORDIGER VAN DE FABRIKANT, VERKLAART HIERMEE DAT HET PRODUCT VOLDOET AAN DE BEPALINGEN VAN DE VOLGENDE EG-RICHTLIJNEN  3) REFERENTIE NAAR GEHARMONISEERDE NORMEN 4) BESCHRIJVING VAN DE MACHINE  5) Algemene benaming : buitenboordmotor 6) Functie : Aandrijfsysteem  7) FABRIKAT 8) TYPE 9) SERIEN NUMMER 10) FABRIKANT  11) Gemachtigde van de fabrikant en in staat om de technische documentatie samen te stellen  12) HANDTEKENING 13) NAAM 14) TITEL 15) Directeur Kwaliteitszorg 16) DATUM 17) PLAATS</p>	<b>nederlands ( DUTCH )</b>
<p>1) ΕΚ-ΔΗΛΩΣΗ ΕΝΑΡΜΟΝΙΣΗΣ 2) Ο ΥΠΟΓΡΑΦΩΝ, (13), ΕΚΠΡΟΣΩΠΟΥΝΤΑΣ ΤΟΝ ΚΑΤΑΣΚΕΥΑΣΤΗ, ΔΙΑ ΤΟΥ ΠΑΡΟΝΤΟΣ ΔΗΛΩΝΕΙ ΟΤΙ ΤΟ ΠΡΟΪΟΝ ΒΡΙΣΚΕΤΑΙ ΣΕ ΕΝΑΡΜΟΝΙΣΗ ΜΕ ΤΙΣ ΠΡΟΒΛ ΕΦΕΙΣ ΤΩΝ ΚΑΤΩΘΙ ΟΔΗΓΙΩΝ ΤΗΣ ΕΕ  3) ΠΑΡΑΠΟΜΠΗ ΣΤΑ ΕΝΑΡΜΟΝΙΣΜΕΝΑ ΠΡΟΤΥΠΑ 4) ΠΕΡΙΓΡΑΦΗ ΜΗΧΑΝΗΜΑΤΟΣ  5) Γενική ονομασία : Εξολέμβια μηχανή 6) Λειτουργία : Σύστημα Πρόωσης  7) ΕΡΓΟΣΤΑΣΙΟ ΚΑΤΑΣΚΕΥΗΣ 8) ΤΥΠΟΣ 9) ΑΡΙΘΜΟΣ ΣΕΙΡΑΣ 10) ΚΑΤΑΣΚΕΥΑΣΤΗΣ  11) Εξουσιοδοτημένος αντιπρόσωπος και είναι σε θέση να καταρτίσει τον τεχνικό φάκελο  12) ΥΠΟΓΡΑΦΗ 13) ΟΝΟΜΑ 14) ΤΙΤΛΟΣ 15) Υπεύθυνος Ποιότητας 16) ΗΜΕΡΟΜΗΝΙΑ 17) ΤΟΠΟΣ</p>	<b>Ελληνικά ( GREEK )</b>
<p>1) EF OVERENSSTEMMELSE SERKLÆRING 2) UNDERTEGNEDE, (13), DER REPRÆSENTERER FABRIKANTEN, ERKLÆRER HERMED AT PRODUKTET ER I OVERENSSTEMMELSE MED BESTEMMELSERNE I FØLGE EF DIREKTIVERNE  3) REFERENCE TIL HARMONISEREDE STANDARDER 4) BESKRIVELSE AF MASKINEN  5) FÆLLESBETEGNELSE : Utenbordsmotor 6) ANVENDELSE : Fremdrivningssystem 7) FABRIKANT  8) TYPE 9) SERIEN UMMER 10) FABRIKANT  11) AUTORISERET REPRÆSENTANT OG I STAND TIL AT UDARBEJDE DEN TEKNISKE DOKUMENTATION  12) SIGNATURE 13) NAVN 14) TITEL 15) Kvalitets Leder 16) DATO 17) STED</p>	<b>dansk ( DANISH )</b>

# “EC DECLARATION OF CONFORMITY” CONTENT OUTLINE

<p>1) DECLARACIÓN DE CONFORMIDAD 2) EL ABAJO FIRMANTE, (13), EN REPRESENTACIÓN DE FABRICANTE, DECLARA QUE EL PRODUCTO ES CONFORME CON LAS DISPOSICIONES DE LAS SIGUIENTES DIRECTIVAS CE  3) REFERENCIA A ESTÁNDARES ARMONIZADOS 4) DESCRIPCIÓN DE LA MAQUINARIA  5) Denominación genérica : Motor fueraborda 6) Función : Sistema de propulsión 7) MARCA  8) TIPO 9) NUMERO DE SERIE 10) FABRICANTE 11) Representante autorizado que puede compilar el expediente técnico  12) FIRMA 13) NOMBRE 14) CARGO 15) Director de calidad 16) FECHA 17) LUGAR</p>	<b>español ( SPANISH )</b>
<p>1)DECLARAÇÃO CE DE CONFORMIDADE 2) O ABAIXO ASSINADO, (13), EM REPRESENTAÇÃO DO FABRICANTE, PELA PRESENTE DECLARA QUE O PRODUTO ESTÁ EM CONFORMIDADE COM O ESTABELECIDO NAS SEGUINTE DIRECTIVAS COMUNITÁRIAS 3) REFERÊNCIA AS NORMAS HARMONIZADAS 4) DESCRIÇÃO DA MÁQUINA  5) Denominação genérica : Motor fora de borda 6) Função : Sistema propulsor  7) MARCA 8) TIPO 9) NÚMERO DE SÉRIE 10) FABRICANTE  11) Mandatário com capacidade para compilar documentação técnica  12) ASSINATURA 13) NOME 14) TÍTULO 15) Director de Qualidade 16) DATA 17) LOCAL</p>	<b>português ( PORTUGUESE )</b>
<p>1) EY-VAATIMUSTENMUKAISUUSVAKUUTUS 2) ALLEKIRJOITTANUT, (13), JOKA EDUSTAA VALMISTAJAA, VAKUUTTAA TÄTEN, ETTÄ TUOTE ON SEURAAVIEN EU-DIREKTIIVIEN VAATIMUSTEN MUKAINEN  3) VIITTAUS YHTEISIIN STANDARDEIHIN 4) KUVAUS LAITTEESTA  5) Yleisarvomaärä : Peramoottori 6) Toiminto : Työntöjärjestelmä 7) MERKKI 8) MALLI  9) SARJANUMERO 10) VALMISTAJA 11) Valmistajan edustaja ja teknisten dokumenttien laatija  12) ALLEKIRJOITUS 13) NIMI 14) TITTELI 15) Laatupäällikkö  16) PÄIVÄMÄÄRÄ 17) PAIKKA</p>	<b>suomi / suomen kieli ( FINNISH )</b>
<p>1) ЕО-ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ 2) ДОЛУ ПОДШИСАЛИЯТ СЕ (13), ПРЕДСТАВЛЯВАЩ ДИСТРИБУТОРА, ДЕКЛАРИРА, ЧЕ ПРОДУКТА СЪОТВЕТСТВА НА ИЗСКВАНИЯТА НА СЛЕДНИТЕ ЕВРОПЕЙСКИ ДИРЕКТИВИ  3) СЪОТВЕТСТВИЕ С ХАРМОНИЗИРАНИТЕ СТАНДАРТИ 4) ОПИСАНИЕ НА АРТИКУЛА  5) Общо наименование : ИЗВЪН БОРДОВИ ДВИГАТЕЛ 6) Функция : Задвижваща система  7) МАРКА 8) ТИП 9) СЕРИЕН НОМЕР 10) ПРОИЗВОДИТЕЛ  11) Упълномощен представител и отговорник за съставяне на техническа документация  12) ПОДПИС 13) ИМЕ 14) ТИТЛА 15) МЕНИДЖЪР НА КАЧЕСТВОТО 16) ДАТА 17) МЯСТО</p>	<b>български ( BULGARIAN )</b>
<p>1) EG-FÖRSÄKRAN OM ÖVERENSSTÄMMELSE 2) UNDERTECKNAD, (13), REPRESENTERANDE TILLVERKARE, FÖRSÄKRAR HÄRMED ATT PRODUKTEN ÖVERENSSTÄMMER MED BESTÄMMELSERNA I FÖLJANDE EG-DIREKTIVE  3) REFERERANDE TILL HARMONISERADE STANDARDER 4) BESKRIVNING AV UTRUSTNINGEN  5) Allmän benämning : Utomborotsmotor 6) Funktion : Framdrivningssystem  7) MERKKI 8) TYPBETECKNING 9) SERIENUMER 10) TILLVERKARE  11) Auktoriserad representant och ska kunna sammanställa teknisk dokumentationen.  12) SIGNATUR 13) NAMN 14) TITEL 15) Kvalitetschef 16) DATUM 17) ORT</p>	<b>svenska ( SWEDISH )</b>
<p>1) DEKLARACJA ZGODNOŚCI WE 2) NIŻEJ PODPISANY (13), REPREZENTUJĄCY PRODUCENTA, DEKLARUJE Z CAŁĄ ODPOWIEDZIALNOŚCIĄ, ŻE PRODUKT SPEŁNIA WYMAGANIA ZAWARTE W NASTĘPUJĄCYCH DYREKTYWACH UNIJNYCH  3) ZASTOSOWANE NORMY ZHARMONIZOWANE 4) OPIS URZĄDZENIA  5) Ogólne określenie : Silnik zaburtowy 6) Funkcja : Układ napędowy  7) MARKA 8) TYP 9) NUMERY SERYJNE 10) PRODUCENT  11) Upoważniony Przedstawiciel oraz osoba upoważniona do przygotowania dokumentacji technicznej 12) PODPIS  13) NAZWISKO 14) TYTUŁ 15) Menadżer Jakości 16) DATA 17) MIEJSCE</p>	<b>polski ( POLISH )</b>

# “EC DECLARATION OF CONFORMITY” CONTENT OUTLINE

<p>1) MEGFELELŐSEGI NYILATKOZAT 2) ALULÍROTT (13), MINT A GYÁRTÓ KÉPVISELŐJE NYILATKOZIK, HOGY AZ ALABBI TERMÉK MINDENBEN MEGFELEL A KÖVETKEZŐ EC ELŐÍRÁSOK RENDELKEZÉSEINEK: 98/37/EC, 89/336/EEC-93/68/EC:  3) ÖSSZHANGBAN A KÖV. SZABVÁNYOKKAL 4) A GÉP LEÍRÁSA  5) Általános megnevezés: KÜLSŐ CSÓNAKMOTOR 6) Funkció: Hajtás rendszer  7) GYÁRTÓTTA 8) TÍPUS 9) SORSZÁM 10) GYÁRTÓ 11) Meghatalmazott képviselője és képes összeállítani a műszaki dokumentációt.  12) ALÁÍRÁS 13) NÉV 14) BEOSZTÁS  15) MINŐSÉGI IGAZGATÓ 16) KELTEZÉS DÁTUMA 17) KELTEZÉS HELYE</p>	<b>magyar ( HUNGARIAN )</b>
<p>1) Prohlášení o shodě 2) ZÁSTUPCE VÝROBCE, (13), SVÝM PODPÍSEM POTVRZUJE, ŽE DANÝ VÝROBEK JE V SOULADU S NÁSLEDUJÍCÍMI SMĚRNICEMI A NORMAMI EVROPSKÉHO SPOLEČENSTVÍ:  3) ODKAZ NA HARMONIZOVANÉ NORMY: 4) POPIS VÝROBKU  5) Všeobecné označení: ZÁVĚSNÝ LODNÍ MOTOR 6) Funkce: Pohonný systém  7) ZNAČKA: 8) TYP: 9) VÝROBNÍ ČÍSLO: 10) VÝROBCE: 11) Zplnomocněný zástupce a osoba pověřená kompletačí technické dokumentace  12) PODPIS: 13) JMÉNO: 14) POZICE 15) Manažer kvality 16) DATUM: 17) MÍSTO:</p>	<b>čeština ( CZECH )</b>
<p>1) ES VYHLÁSENIE O ZHODE 2) DOLUPODPÍSANÝ, (13), ZÁSTUPUJÚCI VÝROBCU, TÝMTO DEKLARUJE, ŽE PRODUKT JE V SÚLADE S USTANOVENIAMÍ NASLEDOVNÝCH SMERNÍC ES  3) REFERENCIA K HARMONIZOVANÝM ŠTANDARDOM 4) IDENTIFIKÁCIA STROJOV  5) Druhové označenie: ZÁVESNÝ LODNÝ MOTOR 6) Funkcia: Systém pohonu  7) VÝROBCA/ZNAČKA 8) TYP 9) SÉRIOVÉ ČÍSLO  10) VÝROBCA 11) Autorizovaný zástupca schopný zostaviť technickú dokumentáciu 12) PODPIS 13) MENO 14) POZÍCIA  15) MANAŽÉR KVALITY 16) DÁTUM 17) MIESTO</p>	<b>slovenčina ( SLOVAK )</b>
<p>1) EF SAMSVARSÆRKLERING 2) UNDERTEGNEDE, (13), SOM REPRESENTERER FABRIKANTEN, ERKLÆRER HERVED AT PRODUKTET ER I OVERENSSTEMMELSE MED BESTEMMELSENE I FØLGENDE EU DIREKTIV  3) REFERANSER TIL HARMONISERED E STANDARDER 4) BESKRIVELSE AV MASKINEN  5) Felles benevnelse: Utenbordsmotor 6) Funksjon: Fremdrifts system  7) FABRIKANT 8) TYPE 9) SERIE NUMMER 10) FABRIKANT 11) Autorisert representant og i stand til å utarbeide den tekniske dokumentasjonen  12) SIGNATUR 13) NAVN 14) TITTEL 15) Kvalitetssjef 16) DATO 17) STED</p>	<b>norsk ( NORWEGIAN )</b>
<p>1) DECLARATIE DE CONFORMITATE. 2) SUBSEMNATUL, (13), REPREZENTAND PE PRODUCATOR, DECLAR PRIN PREZE NTA CA PRODUSUL ESTE IN CONFORMITATE CU PREVEDERILE URMATOARELOR DIRECTIVE CE  3) REFERIRE LA STANDARDELE ARMONIZATE: 4) DESCRIEREA ECHIPAMENTULUI  5) Denumire generica: MOTOR IN AFARA BORDULUI (EXTERN) 6) Domeniu de utilizare: Sistem de propulsie  7) MARCA 8) TIPUL 9) NUMAR DE SERIE 10) PRODUCATOR 11) Reprezentant autorizat și abilitat să realizeze documentație tehnică  12) SEMNATURA 13) NUME 14) TITLUL 15) DIRECTOR DE CALITATE 16) DATA 17) LOCATIE</p>	<b>română ( ROMANIAN )</b>
<p>1) EU VASTAVUSDEKLARATSIOON 2) ALLKIRJUTANU, (13), ESINDADES TOOTJAT, DEKLAREERIB SIINKOHAL, ET TOODE ON VASTAVUSES JÄRGMISTE EC DIREKTIIVIDE SÄTETEGA  3) VIIDE ÜHTLUSTATUD STANDARDITELE: 4) MEHHANISMI KIRJELDUS  5) Üldnimetus: Pardaväliline mootor 6) Funktsioon: Tõukurstüsteem  7) VALMISTAJA: 8) TÜÜP: 9) SEERIANUMBER:  10) TOOTJA: 11) Volitatud esindaja, kes on pädev täitma tehnilist dokumentatsiooni 12) ALLKIRI: 13) NIMI: 14) AMET  15) Kvaliteedijuht 16) KUPÄEV: 17) KOHT:</p>	<b>eesti ( ESTONIAN )</b>

# “EC DECLARATION OF CONFORMITY” CONTENT OUTLINE

<p>1) EK ATBILSTĪBAS DEKLARĀCIJA 2) ZEMĀK MINĒTAIS, (13), KĀ RAŽOTĀJA PĀRSTĀVIS AR ŠO APSTIPRINA, KA ŠIS PRODUKTS PILNĪBĀ ATBILST VISIEM STANDARTIEM, KAS ĀTRUNĀTI SEKOJOŠAJĀS EC-DIREKTĪVĀS</p> <p>3) Atsaucoties uz saskaņotajiem standartiem 4) Iekārtas apraksts</p> <p>5) Vispārējais nosaukums : Piekarināmais laivas dzinējs 6) Funkcija : Virzošā spēka sistēma</p> <p>7) Preču zīme 8) Tips 9) Sērijas numurs 10) Izgatavotājs 11) Autorizētais pārstāvis, kas spēj sastādīt tehnisko dokumentāciju 12) Paraksts</p> <p>13) Vārds, Uzvārds 14) Tituls 15) Kvalitātes vadītājs 16) Datums 17) Vieta</p>	<b>latviešu (LATVIAN)</b>
<p>1) EB ATITIKTIES DEKLARĀCIJA 2) ŽĒMIAUI PASIRAŠES, (13), ATSTOVAUJANTIS GAMINTOJĀ DEKLARUOJA KAD PRODUKTAS ATITINKA REIKALAVĪMUS PAGAL ŠIAS EB DIREKTĪVAS.</p> <p>3) NUORODA Į HARMONIZUOTUS STANDARTUS. 4) MAŠINOS APRAŠYMAS.</p> <p>5) Bendras pavadinimas : PAKABINAMAS VARIKLIS 6) Funkcija : Varomasis būdas 7) MARKĖ.</p> <p>8) TIPAS 9) SERIJINIS NUMERIS. 10) GAMINTOJAS. 11) Įgaliojasis atstovas ir galintis sudaryti techninę dokumentaciją 12) PARAŠAS.</p> <p>13) V. PAVARDĖ 14) PAREIGOS 15) KOKYBĖS VADYBININKAS. 16) DATA. 17) VIETA</p>	<b>lietuvių kalba (LITHUANIAN)</b>
<p>1) ES-DEKLARACIJA O USTREZNOSTI 2) PODPISANI (13), PREDSTAVNIK PROIZVAJALCA, IZJAVLJAM DA IZDELKI USTREZAJO NASLEDNJIM DEKLARACIJAM</p> <p>3) SKLADNOST Z NASLEDNJIMI STANDARDI 4) OPIS IZDELKOV</p> <p>5) Vrsta stroja : Izvenkrmni motorji 6) Funkcija : Pogonski sistem</p> <p>7) PROIZVAJA 8) TIP 9) SERIJSKA ŠTEVILKA 10) PROIZVAJALEC</p> <p>11) Pooblaščeni predstavniki lahko predložijo tehnično dokumentacijo</p> <p>12) PODPIS 13) IME 14) FUNKCIJA 15) Direktor presoje 16) DATUM 17) KRAJ</p>	<b>slovenščina (SLOVENIAN)</b>
<p>1) EB-YFIRLYSING 2) UNDIRRITAÐUR HR, (13) LYSI YFIR FYRIR HÖND FRAMLEIÐANDA AÐ VARAN UPPFYLLIR EFTIRFARANDI EC-TILSKIPANIR 3) TILVÍSUN UM HEILDARSTAÐAL 4) LÝSING Á VÉLBÚNAÐI</p> <p>5) Flokkur : Utanborðsmótorar 6) Virkni : knúningsafl kerfi 7) FRAMLEIÐSLA 8) GERÐ 9) SERÍAL NÚMÉR 10) FRAMLEIÐANDI</p> <p>11) Löggildir aðilar og fær um að taka saman tækniskjölin 12) UNDIRSKRIFT 13) NAFN 14) TITILL</p> <p>15) Skráningarstjóri 16) DAGSETNING 17) STAÐUR</p>	<b>Íslenska (ICELANDIC)</b>
<p>1) AT UYGUNLUK BEYANI 2) AŞAĞIDA İMZASI BULUNAN VE İMALATÇININ YETKİLİ TEMSİLCİSİ OLAN (13) ÜRÜNÜN ŞU AT YÖNETMELİKLERİNİN HÜKÜMLERİNE UYGUN OLDUĞUNU BEYAN EDER.</p> <p>3) UYUMLAŞTIRILMIŞ STANDARTLARA ATIF 4) MAKİNANIN TARIFI</p> <p>5) Flokkur : Diştan takma motor 6) Virkni : tahrik sistemi 7) MARKA 8) TIP</p> <p>9) SERİ NUMARASI 10) İMALATÇI 11) Teknik dosyayı hazırlamakla yetkili olan Toplulukta yerleşik yetkili temsilci</p> <p>12) İMZA 13) ADI 14) ÜNVANI 15) Homologasyon Yöneticisi 16) TARİH 17) YER</p>	<b>Türk (TURKISH)</b>
<p>1) EK-IZJAVA O SUKLADNOSTI 2) POTPIŠANI (13), PREDSTAVNIK PROIZVOĐAČA, IZJAVLJUJE DA JE PROIZVOD U SUKLADNOSTI S ODREDBAMA SLJEDEĆEG EK PROPISA</p> <p>3) REFERENCA NA USKLAĐENE NORME 4) OPIS STROJA</p> <p>5) Opća vrijednost : Vanbrodski motor 6) Funkcionalnost : Pogonski sustav</p> <p>7) IZRADIO 8) TIP</p> <p>9) SERIJSKI BROJ 10) PROIZVOĐAČ 11) Ovlašteni predstavnik i osoba za sastavljanje tehničke dokumentacije 12) POTPIS 13) IME</p> <p>14) TITULA 15) Upravitelj homologacije 16) DATUM 17) MJESTO</p>	<b>hrvatski (CROATIAN)</b>

<b>A</b>	<b>E</b>	<b>F</b>
ACG Fuse ..... 134	Emergency Stop	Fast Idle
ACG Indicator/Buzzer..... 33	Spare Switch Clip ..... 41	Button..... 31
Anodes	Switch ..... 40	Lever ..... 31
Function..... 42	Switch Lanyard/Clip..... 40	Frame Serial Number ..... 4
Operation..... 106	Emission Control System..... 129	Fuel
<b>B</b>	Engine	Filter ..... 126
Battery	Cover	Inspection..... 127
Cleaning..... 131	Latch ..... 43	Replacement..... 128
Connections ..... 51	Removal/Installation..... 58	Level ..... 60
Electrolyte Level Inspection.... 130	Oil	Line
Leads Inspection..... 66	Change ..... 119	Connection ..... 57
Storage..... 140	Level Inspection ..... 60	Disconnection ..... 112
Break-in Procedure ..... 81	Refilling ..... 60	Priming..... 68
<b>C</b>	Protection System ..... 101	Storage ..... 138
Cleaning and Flushing..... 114	ACG Warning System..... 101	Fuse Replacement ..... 132
Component Identification ..... 11	Anode ..... 106	
Control and Feature Identification	Oil Pressure Warning	
Codes..... 2	System ..... 101	
Controls and Features ..... 20	Overheat Warning System.. 101	
Cooling Water	Over-rev Limiter..... 106	
Check Hole ..... 43	PGM-FI Warning System... 101	
Intake Port ..... 43	Water Separator Warning	
Cruising ..... 87	System ..... 101	
<b>D</b>	Serial Number ..... 4	
Disposal ..... 142	Switch ..... 25	

# INDEX

<b>G</b>			
Gasoline Containing Alcohol .....	62	<b>N</b>	
Gear		Neutral Release Lever.....	25
Shifting .....	82, 83, 84, 85, 86	<b>O</b>	
<b>H</b>		Oil Pressure Indicator/Buzzer.....	33
Honda Smart Key .....	26	Operating Hour Notification	
<b>I</b>		System .....	44
Inspect After Operating .....	136	Operation	
Installation		Gear Shifting.....	82, 83, 84, 85, 86
Height .....	48	Outboard Motor	
Location.....	48	Installation .....	49
Outboard Motor .....	49	Storage Position.....	141
Interface Coupler .....	44	Outboard Motor Angle	
<b>L</b>		Inspection.....	50
Lubrication .....	125	Overheat Indicator/Buzzer	
<b>M</b>		Function .....	34
Maintenance .....	115	Operation .....	101
Maintenance Schedule.....	117	Over-rev Limiter .....	106
Manual Relief Valve		<b>P</b>	
Function.....	39	PGM-FI Indicator/Buzzer .....	32
Operation .....	99	Power Tilt Switch	
Moorage		Function .....	38
Power Trim/Tilt Type.....	98	Operation .....	99
Multiple Outboard Motors.....	107	Power Trim/Tilt Switch	
		Function .....	35
		Operation .....	87
		Pre-operation Checks .....	58
		Battery .....	66
		Engine Oil .....	59
		Fuel .....	61
		Fuel Filter.....	65
		Other Checks.....	67
		Propeller and Cotter Pin	
		Inspection.....	63
		Propeller	
		Inspection.....	63
		Replacement.....	134
		Selection.....	57
		Propeller Shaft	
		Rotating Direction.....	3
		<b>R</b>	
		Remote Control	
		Box	
		Identification.....	17, 18
		Installation Location .....	56
		Cable Length.....	56
		Installation.....	53
		Lever	
		Function .....	20, 21, 22, 23, 24
		Types.....	3

---

<b>S</b>	
Safety	
Carbon Monoxide Poisoning	
Hazard .....	8
Information.....	7
Label Locations .....	9
Operator Responsibility.....	7
Shallow Water Operation .....	107
Spare Clip, Emergency Stop	
Switch.....	41
Spark Plugs.....	121, 124
Specifications .....	146, 153
Starting the Engine	
D1, D2 types.....	68
R1 type .....	73
R2, R3 types .....	76
Stopping the Engine	
Emergency.....	108
Normal Stop .....	108, 110
Storage.....	138
Submerged Outboard Motor	
Servicing.....	136
Switch Panel .....	18
<b>T</b>	
Tachometer .....	44
Tilt Lock Lever .....	42
Tilting the Outboard Motor	
Remote Control Type .....	96
Tool Kit and Spare Parts.....	67, 116
Trailerling .....	113
Transom	
Height .....	47
Transporting.....	112
Trim Meter	
Function .....	38
Operation .....	95
Trim Tab	
Adjustment.....	100
Operation .....	42
Trimming the Outboard Motor ....	91
Troubleshooting	
Warning System Operation.....	143
<b>V</b>	
Vapor Separator Draining.....	139
<b>W</b>	
Water Separator Buzzer .....	35

---

**MEMO**

---

**MEMO**

---

**MEMO**

# HONDA

32ZVL610  
00X32-ZVL-6100



英 (AB) 0000.00AA.AA  
Printed in Japan